
Longer Life Cylinder



New technology offers at least **4** times better durability

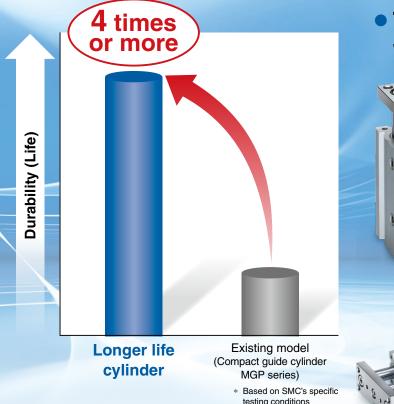

 The maintenance intervals will be extended

Employs the same specification and mounting dimensions as the existing models, MGP Compact Guide Cylinder

High Durability Series

•)

High Durability Series is the series name for the "special specification" that offers superior durability and environmental resistance compared to standard products.

Series Variations

series


Series	Action	Model	Bearing		В	ore si	ze [mr	n]		Cushion	Standard stroke
Series	ACTION	IVIOUEI	веанну	12	16	20	25	32	40	Cushion	[mm]
Compact guide cylinder MGP series	Double acting	MGP-XB24	Slide bearing Ball bushing		•	•	•	•	•	Rubber bumper on both sides	ø12, ø16: 10 to 150 ø20, ø25: 20 to 200 ø32, ø40: 25 to 200





High Durability Series Longer Life Cylinder MGP-XB24 Ø12, Ø16, Ø20, Ø25, Ø32, Ø40



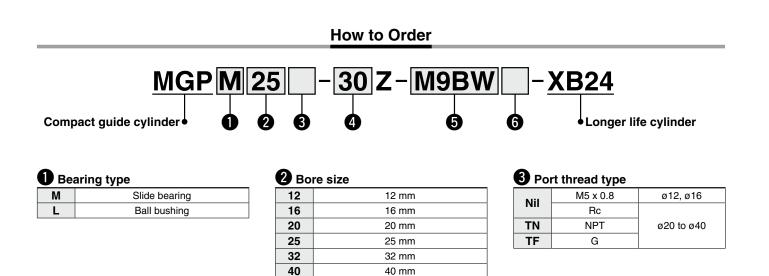



5 Auto switch

Nil Without auto switch (Built-in magnet) * For applicable auto switches, refer to the table below.

6 Number of auto switches

* Solid state auto switches marked with a "O" are produced upon receipt of order.

• · · · ·	
Nil	2
S	1
n	n

Applicable Auto Switches / Refer to the Web Catalog for further information on auto switches

			light	14 <i>0</i> - 1	L	oad volta	ge	Auto swit	tch model	Lead	wire	engt	h [m]	D	A 11			
Туре	Special function	Electrical entry	Indicator light	Wiring (Output)	D	С	AC	Perpendicular	In-line	0.5 (Nil)	1 (M)	3 (L)	5 (Z)	Pre-wired connector	Applio Ioa			
				3-wire (NPN)		5 V, 12 V		M9NV	M9N				0	0	IC			
Ч	_			3-wire (PNP)		5 V, 12 V		M9PV	M9P				0	0	circuit			
switch				2-wire		12 V]	M9BV	M9B				0	0				
				3-wire (NPN)		5 V, 12 V		M9NWV	M9NW				0	0	IC			
auto	Diagnostic indication (2-color indicator)			3-wire (PNP)		5 V, 12 V		M9PWV	M9PW				0	0	circuit			
		Grommet	Yes	2-wire	24 V	12 V] —	M9BWV	M9BW				0	0	—	Relay, PLC		
state				3-wire (NPN)		5 V. 12 V		M9NAV*1	M9NA*1	0	0		0	0	IC	1 20		
st	Water resistant (2-color indicator)			3-wire (PNP)		5 V, 12 V		M9PAV*1	M9PA*1	0	0		0	0	circuit			
Solid				2-wire		12 V		M9BAV*1	M9BA*1	0	0		0	0				
	Magnetic field resistant (2-color indicator)			2-wire (Non-polar)		—		—	P3DWA*2	•	-	•	•	0	—			
Reed auto switch		Crommet	Yes	3-wire (NPN equivalent)	—	5 V	-	A96V	A96	•	-	•	-	—	IC circuit	—		
svi		Grommet		2-wire	24 V	12 V	100 V	A93V*3	A93					_	_	Relay,		
Å,					No	2-wire	24 V	12 V	100 V or less	A90V	A90		—		-	—	IC circuit	PLC

*1 Water-resistant type auto switches can be mounted on the above models, but SMC cannot guarantee water resistance.

A water-resistant type cylinder is recommended for use in an environment which requires water resistance.

*2 The D-P3DWA type is only available in sizes ø25 to ø40.

*3 The 1 m lead wire is only applicable to the D-A93.

* Lead wire length symbols: 0.5 m······Nil (Example) M9NW

- 1 m······M (Example) M9NWM
 - 3 m······ L (Example) M9NWL
 - 5 m······ Z (Example) M9NWZ

* Since there are applicable auto switches other than those listed above, refer to the **Web Catalog** for details.

- * For details on auto switches with pre-wired connectors, refer to the Web Catalog.
- * Auto switches are shipped together with the product but do not come assembled.


* The installation of auto switches is equivalent to that for the MGP Compact Guide Cylinder series. For details, refer to the Web Catalog.



Longer Life Cylinder MGP-XB24







The mounting pitch and shape of this product with auto switch are the same as those of the Compact Guide Cylinder MGP series with auto switch.

For details, refer to the Web Catalog.

• Auto Switch Proper Mounting Position (Detection at stroke end) and Mounting Height

- · Min. Stroke for Auto Switch Mounting
- Operating Range
- \cdot Auto Switch Mounting Brackets/Part Nos.

▲ Precautions

Refer to pages 5 and 6 before handling the products.

Specifications

		1		1						
Bore size [mm]	12	16	20	25	32	40				
Action			Double	e acting						
Fluid			A	\ir						
Proof pressure			1.5	MPa						
Max. operating pressure			1.0	MPa						
Min. operating pressure	0.12	MPa		0.1	MPa					
Ambient and fluid temperatures		-1	0 to 60°C	(No freezin	ig)					
Piston speed			50 to 50	00 mm/s						
Cushion	Rubber bumper on both ends									
Lubrication		Ν		d (Non-lube	e)					
Stroke length tolerance			+1.5 0	mm						

Max. speed with no load. Depending on the operating conditions, the piston speed may not be satisfied. Make a model selection, considering a load according to the **Web Catalog**.


Standard Strokes

	[mm]
Bore size	Standard stroke
12, 16	10, 20, 30, 40, 50, 75, 100, 125, 150
20, 25	20, 30, 40, 50, 75, 100, 125, 150, 175, 200
32, 40	25, 50, 75, 100, 125, 150, 175, 200

The allowable rotational torque of the plate, non-rotating accuracy of the plate, theoretical output, and weight are equivalent to those of the Compact Guide Cylinder MGP series. For details, refer to the **Web Catalog**.



<u>мдрм/мдрl: Ø12, Ø16</u>

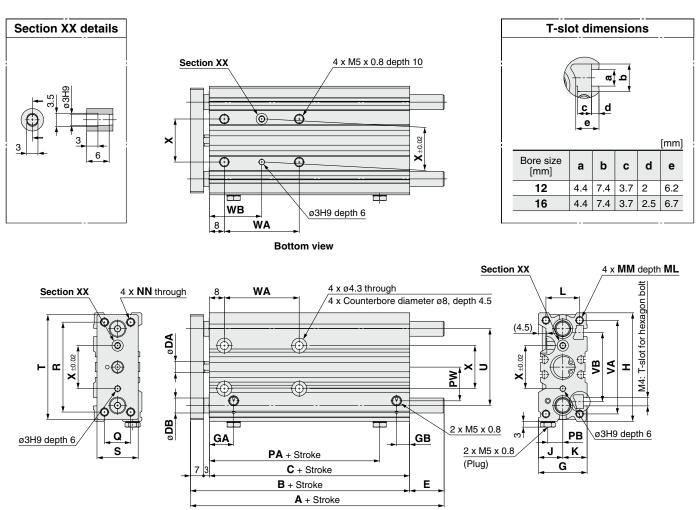

MGPM, MGPL Common Dimensions [mm] Bore size Standard stroke в С DA GB ММ ML NN PA PB PW G GA Н J Κ L [mm] [mm] 7 M4 x 0.7 12 42 32 6 26 13 58 13 13 18 M4 x 0.7 10 16 8 18 10, 20, 30, 40, 50, 75, 100, 125, 150 16 46 36 8 30 13.5 7.5 64 15 15 22 M5 x 0.8 12 M5 x 0.8 17.5 10 19 WA WB Bore size Q R S т U VA VB Х [mm] 10 to 30 st 40 to 100 st 125, 150 st 10 to 30 st 40 to 100 st 125, 150 st 12 14 48 22 56 41 50 37 20 40 110 18 28 63 23 16 16 54 25 62 46 56 38 24 44 110 20 30 63 24

[mm]

[mm]

MGPM (Slide Bearing) A, DB, E Dimensions


Bore size		Α		DB		E	
[mm]	10 to 50 st	75, 100 st	125, 150 st	ЪВ	10 to 50 st	75, 100 st	125, 150 st
12	42	60.5	82.5	8	0	18.5	40.5
16	46	64.5	92.5	10	0	18.5	46.5

MGPL (Ball Bushing Bearing) A, DB, E Dimensions

Bore size		Α		DB		E	
[mm]	10 to 30 st	40 to 100 st	125, 150 st		10 to 30 st	40 to 100 st	125, 150 st
12	43	55	84.5	6	1	13	42.5
16	49	65	94.5	8	3	19	48.5

⊛ **3**

MGPM/MGPL: Ø20 to Ø40

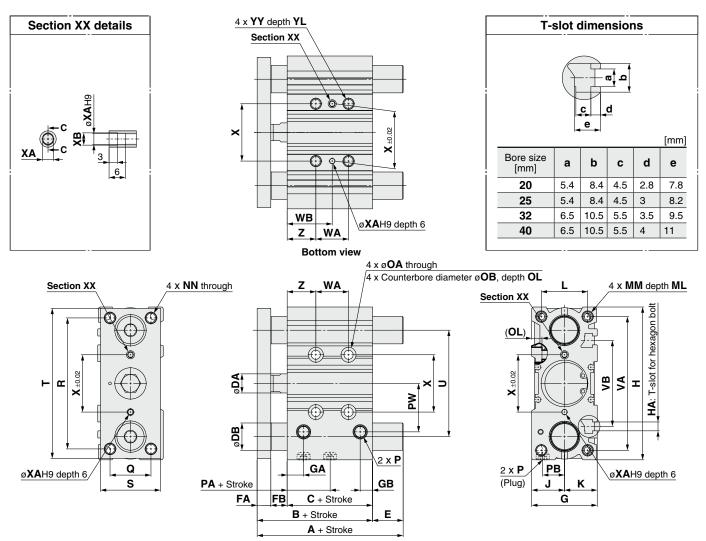

MGPM, MGPL Common Dimensions

Bore size	Standard stroke	в	С	DA	E۸	ED	~	GA		н	НА		к		ММ	ML	NN	<u></u>	ОВ	0		Р		D۸
[mm]	[mm]	P		DA	FA	ГD	G	GA	GВ	п	ПА	J	r	L			ININ	UA		OL	Nil	ΤN	TF	PA
20	20, 30, 40, 50, 75, 100,	53	37	10	8	8	36	11.5	9	83	M5	18	18	24	M5 x 0.8	13	M5 x 0.8	5.4	9.5	5.5	Rc1/8	NPT1/8	G1/8	13.5
25	125, 150, 175, 200	53.5	37.5	10	9	7	42	11.5	10	93	M5	21	21	30	M6 x 1	15	M6 x 1	5.4	9.5	5.5	Rc1/8	NPT1/8	G1/8	12.5
32	25, 50, 75, 100,	59.5	37.5	14	10	12	48	12	9	112	M6	24	24	34	M8 x 1.25	20	M8 x 1.25	6.7	11	7.5	Rc1/8	NPT1/8	G1/8	6.5
40	125, 150, 175, 200	66	44	16	10	12	54	15	12	120	M6	27	27	40	M8 x 1.25	20	M8 x 1.25	6.7	11	7.5	Rc1/8	NPT1/8	G1/8	13

Bore size	DD	D\W	0	R	6	т		VA	νв			WA					WB			v	ХА	хв	vv	VI	7
[mm]	PD	P VV	Q	n	Э	•	U	VA	VD	20, 30 st	40 to 100 st	25 st	50 to 100 st	125 to 200 st	20, 30 st	40 to 100 st	25 st	50 to 100 st	125 to 200 st		A	лD	TT	ΤL	2
20	10.5	25	18	70	30	81	54	72	44	24	44	_	—	120	29	39	—	—	77	28	3	3.5	M6 x 1	12	17
25	13.5	30	26	78	38	91	64	82	50	24	44	—	—	120	29	39	—	—	77	34	4	4.5	M6 x 1	12	17
32	16	35.5	30	96	44	110	78	98	63	—	—	24	48	124	—	—	33	45	83	42	4	4.5	M8 x 1.25	16	21
40	18	39.5	30	104	44	118	86	106	72	—	—	24	48	124	—	—	34	46	84	50	4	4.5	M8 x 1.25	16	22

MGPM (Slide Bearing) A, DB, E Dimensions [mm]

Bore size	4	4	DB	I	E
[mm]	Up to 50 st	75 to 100 st	υь	Up to 50 st	75 to 100 st
20	53	83	12	0	30
25	53.5	83.5	16	0	30
32	82	100.5	20	22.5	41
40	82	100.5	20	16	34.5

MGPL (Ball Bushing Bearing) A, DB, E Dimensions

Bore size			Α			DB			E		
[mm]	Up to 30 st	40 to 100 st	Up to 50 st	75, 100 st	125 to 200 st	סט	Up to 30 st	40 to 100 st	Up to 50 st	75, 100 st	125 to 200 st
20	59	76	—	—	100	10	6	23	-	—	47
25	65.5	81.5	_	—	100.5	13	12	28	-	—	47
32	—	—	79.5	96.5	116.5	16	—	—	20	37	57
40	—	—	79.5	96.5	116.5	16	—	—	13.5	30.5	50.5

[mm]

[mm]



High Durability Series MGP-XB24 Specific Product Precautions 1

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For actuator and auto switch precautions, refer to the "Handling Precautions for SMC Products," the "Operation Manual," and compact guide cylinder MGP series specific product precautions on the SMC website: https://www.smcworld.com

Mounting

MWarning

1. Never place your hands or fingers between the plate and the body.

Be very careful to prevent your hands or fingers from getting caught in the gap between the cylinder body and the plate when air is applied.



≜Caution

1. Use cylinders within the piston speed range.

An orifice is set for this cylinder, but the piston speed may exceed the operating range if the speed controller is not used. If the cylinder is used outside the operating speed range, it may cause damage to the cylinder and shorten the service life. Adjust the speed by installing the speed controller and use the cylinder within the limited range.

2. Pay attention to the operating speed when the product is mounted vertically.

When using the product in the vertical direction, if the load factor is large, the operating speed can be faster than the control speed of the speed controller (i.e. quick extension). In such cases, it is recommended to use a dual speed controller.

- 3. When used near the lower limit of the operating piston speed, stick-slip may occur depending on the operating conditions. To counter this, it is recommended to use an operating pressure with margin.
- 4. Do not use the product if an air leaks occurs.

If an air leak does occurs, this may result in the speed being increased beyond the speed controller's adjustment capability, which may further lead to the products speed becoming impossible to control.

If the speed is increased excessively, internal components and guide sections may be damaged.

5. Do not scratch or gouge the sliding portion of the piston rod and the guide rod.

Damaged seals, etc., will result in leakage or malfunction.

6. Do not dent or scratch the mounting surface of the body and the plate.

This may cause a decrease in the flatness of the mounting surface, which will cause an increase in sliding resistance.

7. Make sure that the cylinder mounting surface has a flatness of 0.05 mm or less.

If the flatness of the workpieces and brackets mounted on the plate is not appropriate, sliding resistance may increase. If it is difficult to maintain a flatness of 0.05 mm or less, put a thin shim ring (provided by the customer) between the plate and the workpiece mounting surface to prevent the sliding resistance from increasing.

≜Caution


8. Be sure that the piston rods are retracted when mounting workpieces on the plate.

If workpieces are mounted on the plate when the piston rods are extended, it can lead to distortion of the guide unit, resulting in a malfunction.


9. Bottom of cylinder

The guide rods protrude from the bottom of the cylinder at the end of the retracting stroke, and therefore, in cases where the cylinder is to be bottom mounted, it is necessary to provide bypass ports in the mounting surface for the guide rods, as well as holes for the hexagon socket head cap screws which are used for mounting.

Moreover, in applications where impact occurs from a stopper, etc., the mounting screws should be inserted to a depth of 2d or more.

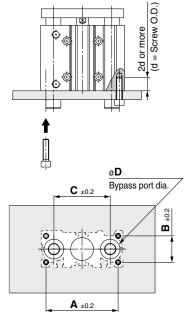

Bore size	Α	В	С	D [r	nm]	Hexagon socket
[mm]	[mm]	[mm]	[mm]	MGPM	MGPL	head cap screw
12	50	18	41	10	8	M4 x 0.7
16	56	22	46	12	10	M5 x 0.8
20	72	24	54	14	12	M5 x 0.8
25	82	30	64	18	15	M6 x 1.0
32	98	34	78	22	18	M8 x 1.25
40	106	40	86	22	18	M8 x 1.25

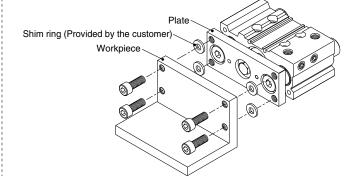



High Durability Series MGP-XB24 Specific Product Precautions 2

Be sure to read this before handling the products. Refer to the back cover for safety instructions. For actuator and auto switch precautions, refer to the "Handling Precautions for SMC Products," the "Operation Manual," and compact guide cylinder MGP series specific product precautions on the SMC website: https://www.smcworld.com

Piping

ACaution


Depending on the operating condition, change the position of plugs for the piping port.

1. M5

After tightening by hand, tighten an additional 1/6 to 1/4 turn with a tightening tool.

- 2. Tapered thread for Rc port (MGP) and NPT port (MGP TN) Tighten with proper tightening torque below. Use sealing tape on the plug and make sure that the sealing tape does not protrude below the plug. With regard to the sunk dimension of a plug ("a" dimension in the drawing), use the stipulated figures as a guide and confirm the air leakage before operation.
 - * If plugs on the top mounting port are tightened with more than the proper tightening torque, they will be screwed too deeply and the air passage will be constricted, resulting in limited cylinder speed.

Connection thread (plug) size	Proper tightening torque [N·m]	a dimension
1/8	7 to 9	0.5 mm or less



3. Parallel pipe thread for G port (MGPTF) Screw in the plug to the surface of the body ("a" dimension in the drawing) by checking visually instead of using the tightening torque shown in the table.

Lubrication

≜Caution

1. This product should be used without lubrication. The use of lubrication can cause a reduction in the products lifetime.

Durability of The Cylinder

The durability of a longer life cylinder has been evaluated by comparison with the existing cylinders under SMC's test conditions.

The durability of a cylinder depends on the customer's operating conditions and operating environment. Therefore, durability of four times or longer will not be guaranteed under all conditions.

▲ Safety Instructions

These safety instructions are intended to prevent hazardous situations and/or equipment damage. These instructions indicate the level of potential hazard with the labels of "**Caution**," "**Warning**" or "**Danger**." They are all important notes for safety and must be followed in addition to International Standards (ISO/IEC)^{*1}, and other safety regulations.

- Caution: indicates a hazard with a low level of risk which, if not avoided, could result in minor or moderate injury.
- Warning: Warning indicates a hazard with a medium level of risk which, if not avoided, could result in death or serious injury.

Danger indicates a hazard with a high level of risk which, if not avoided, will result in death or serious injury.

AWarning

1. The compatibility of the product is the responsibility of the person who designs the equipment or decides its specifications.

Since the product specified here is used under various operating conditions, its compatibility with specific equipment must be decided by the person who designs the equipment or decides its specifications based on necessary analysis and test results. The expected performance and safety assurance of the equipment will be the responsibility of the person who has determined its compatibility with the product. This person should also continuously review all specifications of the product referring to its latest catalog information, with a view to giving due consideration to any possibility of equipment failure when configuring the equipment.

- 2. Only personnel with appropriate training should operate machinery and equipment.
 - The product specified here may become unsafe if handled incorrectly. The assembly, operation and maintenance of machines or equipment including our products must be performed by an operator who is appropriately trained and experienced.
- 3. Do not service or attempt to remove product and machinery/ equipment until safety is confirmed.
 - 1. The inspection and maintenance of machinery/equipment should only be performed after measures to prevent falling or runaway of the driven objects have been confirmed.
 - 2. When the product is to be removed, confirm that the safety measures as mentioned above are implemented and the power from any appropriate source is cut, and read and understand the specific product precautions of all relevant products carefully.
 - Before machinery/equipment is restarted, take measures to prevent unexpected operation and malfunction.

4. Contact SMC beforehand and take special consideration of safety measures if the product is to be used in any of the following conditions.

- 1. Conditions and environments outside of the given specifications, or use outdoors or in a place exposed to direct sunlight.
- 2. Installation on equipment in conjunction with atomic energy, railways, air navigation, space, shipping, vehicles, military, medical treatment, combustion and recreation, or equipment in contact with food and beverages, emergency stop circuits, clutch and brake circuits in press applications, safety equipment or other applications unsuitable for the standard specifications described in the product catalog.
- An application which could have negative effects on people, property, or animals requiring special safety analysis.
- 4. Use in an interlock circuit, which requires the provision of double interlock for possible failure by using a mechanical protective function, and periodical checks to confirm proper operation.

- *1) ISO 4414: Pneumatic fluid power General rules relating to systems.
 - ISO 4413: Hydraulic fluid power General rules relating to systems. IEC 60204-1: Safety of machinery – Electrical equipment of machines. (Part 1: General requirements)
 - ISO 10218-1: Manipulating industrial robots Safety. etc.

 The product is provided for use in manufacturing industries. The product herein described is basically provided for peaceful use in manufacturing industries. If considering using the product in other industries, consult SMC beforehand

and exchange specifications or a contract if necessary. If anything is unclear, contact your nearest sales branch.

Limited warranty and Disclaimer/ Compliance Requirements

The product used is subject to the following "Limited warranty and Disclaimer" and "Compliance Requirements".

Read and accept them before using the product.

Limited warranty and Disclaimer

- The warranty period of the product is 1 year in service or 1.5 years after the product is delivered, whichever is first.*2) Also, the product may have specified durability, running distance or replacement parts. Please consult your nearest sales branch.
- 2. For any failure or damage reported within the warranty period which is clearly our responsibility, a replacement product or necessary parts will be provided. This limited warranty applies only to our product independently, and not to any other damage incurred due to the failure of the product.
- Prior to using SMC products, please read and understand the warranty terms and disclaimers noted in the specified catalog for the particular products.
 - *2) Vacuum pads are excluded from this 1 year warranty. A vacuum pad is a consumable part, so it is warranted for a year after it is delivered. Also, even within the warranty period, the wear of a product due to the use of the vacuum pad or failure due to the deterioration of rubber material are not covered by the limited warranty.

Compliance Requirements

- 1. The use of SMC products with production equipment for the manufacture of weapons of mass destruction (WMD) or any other weapon is strictly prohibited.
- 2. The exports of SMC products or technology from one country to another are governed by the relevant security laws and regulations of the countries involved in the transaction. Prior to the shipment of a SMC product to another country, assure that all local rules governing that export are known and followed.

SMC products are not intended for use as instruments for legal metrology.

Measurement instruments that SMC manufactures or sells have not been qualified by type approval tests relevant to the metrology (measurement) laws of each country. Therefore, SMC products cannot be used for business or certification ordained by the metrology (measurement) laws of each country.

A Safety Instructions Be sure to read the "Handling Precautions for SMC Products" (M-E03-3) and "Operation Manual" before use.

SMC Corporation

Akihabara UDX 15F, 4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN Phone: 03-5207-8249 Fax: 03-5298-5362 https://www.smcworld.com © 2022 SMC Corporation All Rights Reserved