

# 64-station Compatible Manifold Plug-in Compact 5-Port Solenoid Valve

Valve stations/Number of outputs: For 4 to 64 stations<sup>\*1</sup>/128 points

\*1 Stations are only available in multiples of 4.

# Compatible protocols:

RoHS

110 mm shorter


10% reduction

### Space saving, Reduced number of SI units

### Reduced wiring and wiring work

### Installation space: Reduced by up to 110 mm

Approx. 960 mm (64 stations)

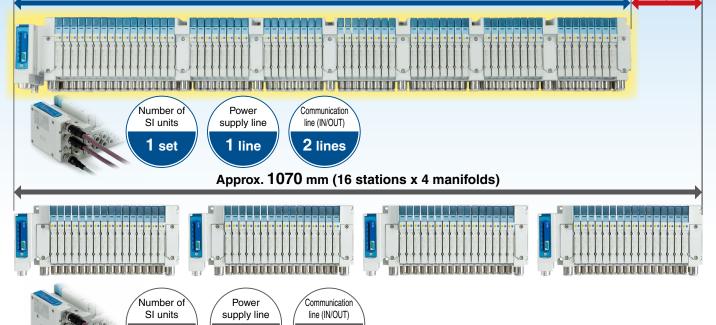

8 lines

4 lines

# JSY3000-L Series

sets

# JSY3000-L Series Type 10 Plug-in Connector Connecting Base

#### **Manifold Specifications**

Wiring		Serial wiring EX260 for 64-station compatible manifold	
Manifold type		Plug-in connector connecting base (64-station compatible manifold)	
SUP/EXH port type		Common SUP/EXH (Common for the 3/5 port)	
Valve stations		4 to 64 stations	
Applicable connector		_	
Internal wiring		Negative common	
	1(P), 3/5(E) port	ø10 One-touch fitting	
Port size	4(A), 2(B) port	ø4 One-touch fitting, ø6 One-touch fitting, ø8 One-touch fitting	
Enclosure (Based on IEC 60529)		IP67	

#### Formula for 64-station Compatible Manifold Weight\*1

(Unit: g)

W = 47 x n1 + 473 + 138 x n2

n1: Valve stations\*2

n2: Number of intermediate SUP/EXH blocks

- \*2 Stations are only available in multiples of 4, from 4 stations to 64 stations.
- \*1 Weight: "W" is the value for the internal pilot specification, the max. fitting size, and the manifold only. The valve weight is not included. To obtain the weight with valves mounted, add the valve weight given in the Web Catalog for the appropriate number of stations.

#### Manifold Flow Rate Characteristics

	Port size		Valve flow rate characteristics			
Model	el 1, 3/5 4		$1 \rightarrow 4/2 \ (P \rightarrow A/B)$		4/2 $ ightarrow$ 3/5 (A/B $ ightarrow$ E)	
	(P, E) (A, B)	C [dm <sup>3</sup> /(s·bar)]	b	C [dm <sup>3</sup> /(s·bar)]	b	
JJ5SY3-L10 (Side ported)	C10	C8	2.23	0.30	2.77	0.27

\* Calculation of effective area "S" and sonic conductance "C": S = 5.0 x C

\* Values measured in accordance with ISO 6358:1989, JIS B 8390:2000

### **▲**Caution

#### Securing the DIN Rail Mounting Type Manifold

1. When mounting the manifold to a DIN rail using bolts, be sure that the bottom surface of the DIN rail is in contact with the manifold installation surface (in a horizontal state), then secure both ends of the DIN rail with the bolts. However, for other mounting methods or for side facing or upside down orientations, use the formula below to calculate the number of bolts to use at even intervals along the DIN rail.

#### Formula: Number of bolts = (Manifold stations + 5) / 5

(Round up to the nearest whole number)

Example) For 28 stations, secure in 7 locations as a guide.

2. When using the manifold with a DIN rail in an environment where any vibration or impact is applied to it, the DIN rail itself may break. In particular, if the installation surface vibrates when mounting the manifold on the wall, or if a load is directly applied to the manifold, the DIN rail may break, causing the manifold to drop. When any vibration, impact, or load will be applied to the manifold, be sure to use a direct mounting manifold.




#### Type 10 Side Ported

# 64-station Compatible Manifold Plug-in Connector Connecting Base EX260 JSY3000-L Series (ELA RoHS

**Internal Pilot** 

How to Order Manifolds

Only the dedicated SI unit can be mounted on the 64-station compatible manifold.

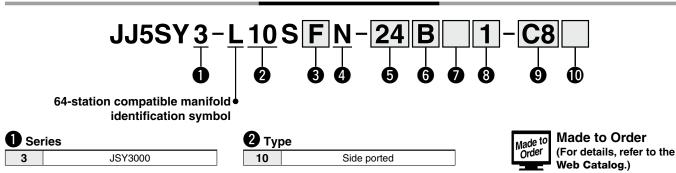

#### **3** SI unit

Symbol	Protocol	Connector	
<b>0</b> *1	Without SI unit		
F	PROFINET	M12	
E EtherNet/IP™		M12	
D	EtherCAT	M8	
K	IO-Link	M12	

\*1 Not compatible with the DIN rail mounting type

#### 4 Manifold polarity

N Negative common

#### **5** Valve stations

Symbol	Stations	Note
04	4 stations	
08	8 stations	
:	:	Double wiring*2
60	60 stations	
64	64 stations	

\*2 Double wiring: 2-position single, 2-position double, 3-position, and 4-position valves can be used on all manifold stations. The use of a single solenoid will result in an unused control signal.

This also includes the number of blanking plates.

- For stations, only multiples of 4, from 4 stations to 64 stations, can be selected.
   The 4 boards inside the manifold are integrated.
- 8 Number of intermediate SUP/EXH blocks, mounting position

Symbol	Quantity	Mounting position	
0	0	—	
1	1	Specify the mounting position	
:	÷	on the manifold specification	
6	6	sheet.	

\* A block can be installed for every 4 valve stations, but as a guideline, it is recommended that one be installed for every 8 to 12 stations.

#### 9 4(A), 2(B) port size (Metric/One-touch fitting)

Symbol	A, B port	P, E port	
C4	Straight ø4		
C6 Straight ø6		Straight ø10	
C8 Straight ø8			
<b>CM</b> *3	Straight port, mixed sizes		

\*3 Indicate the sizes on the manifold specification sheet for "CM."

#### 6 Manifold 1 (P) on both ends, 3/5(E) port exit position

0,0	
U	U side (4 to 8 stations)
D	D side (4 to 8 stations)
В	Both sides (4 to 64 stations)

Specification External pilot (SUP/EXH block and Intermediate SUP/EXH block

#### SUP/EXH block, Intermediate SUP/EXH block

Nil	Internal pilot		
S	Internal pilot, Built-in silencer		
R	External pilot		

- The 3/5(E) port is plugged for the built-in silencer type.
- Do not allow the air outlet to come into direct contact with water, etc.
- The external pilot specification should be ordered as Made to Order. For details, refer to the **Web Catalog**.

#### 

	-
Symbol	Mounting
Nil	Direct mounting
<b>D</b> *4	DIN rail mounting (With DIN rail)
<b>D0</b> *5	DIN rail mounting (Without DIN rail)

- \*4 Option "D" with DIN rail mounting is not compatible with the product without an SI unit.
- \*5 Order the DIN rail separately, referring to dimension L3.
  - (Refer to the **Web Catalog** for DIN rail product numbers and lengths.)
- Refer to page 1 for details on securing the DIN rail mounting type manifold.

For details on the EX260 Integrated Type (For Output) Serial Transmission System, refer to the Web Catalog and the Operation Manual. For the part numbers of the SI units to be mounted, refer to page 5. Please download the Operation Manual via the SMC website: https://www.smcworld.com




Manifold Options

EX260 Series

# JSY3000-L Series

#### How to Order Manifold Assembly

#### Example (JJ5SY3-L10SFN-

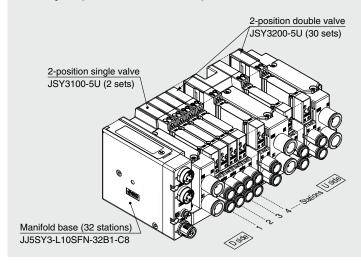

JJ5SY3-L10SFN-32B1-C81 set (32-station manifold base part no.)
* JSY3100-5U 2 sets (2-position single part no.)
*JSY3200-5U

→ The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the valve, etc.

- For the valve arrangement, the valve closest to the D side is considered the 1st station.
- Under the manifold part number, state the valves to be mounted in order starting with the 1st station as shown in the figure. If the arrangement becomes too complicated, specify the details on a manifold specification sheet.
- $\cdot$  Use the manifold specifications sheet to specify the mounting position of the intermediate SUP/EXH blocks.
- \* Stations are only available in multiples of 4.

Internal Pilot

How to Order Valves	(With mounting screw)
---------------------	-----------------------

Refer to the Web Catalog for valve specifications.

JSY3000 Series	JSY <u>3</u> 10	0	- <u>5</u> U
	00	60	<b>567</b>
		Base moun	ted

Made to Order	Made to Order (For details, refer to the Web Catalog.)
	Specification
	External pilot

🛈 Ser	ries
3	JSY3000

<b>B</b> Pile	ot valve exhaust method
0	Pilot valve individual exhaust

#### **4** Coil specifications

Symbol	Coil specifications
Nil	Standard
т	With power saving circuit (Continuous duty type)

\* Be careful of the energizing time when the power-saving circuit is selected.

5 Rated voltage				
	5		24 VDC	

Type of actuation							
1	0 position	Single					
2	2-position	Double					
3		Closed center					
4	3-position	Exhaust center					
5		Pressure center					
Α		N.C./N.C.					
В	4-position dual 3-port	N.O./N.O.					
С		N.C./N.O.					

#### 6 Light/surge voltage suppressor and common specification

Symbol	With light	Surge voltage suppressor	Common specification		
U			Non-polar		
NZ	•	•	Polar Negative common		

- Only "NZ" type is available with a power saving circuit.
- \* When the non-polar common specification type is selected, take measures to prevent surge voltage. For details, refer to the Web Catalog.

Manual override

 Nil:
 D:

 Non-locking
 Push-turn

 push type
 Push-turn

 locking lever
 type


When ordering a valve individually, the base gasket is not included.

Since the base gasket is attached to the manifold, please order the base gasket separately if it is needed for maintenance. Refer to the **Web Catalog** for base gasket and mounting screw part numbers.

### **A**Caution


If the product is to be continuously energized, please be sure to select the power-saving circuit (continuous duty type) specification.

\* Refer to the "With power-saving circuit" section in the "Specific Product Precautions" of the plugin type JSY series **Web Catalog** for details.





# 64-station Compatible Manifold **JSY3000-L** Series

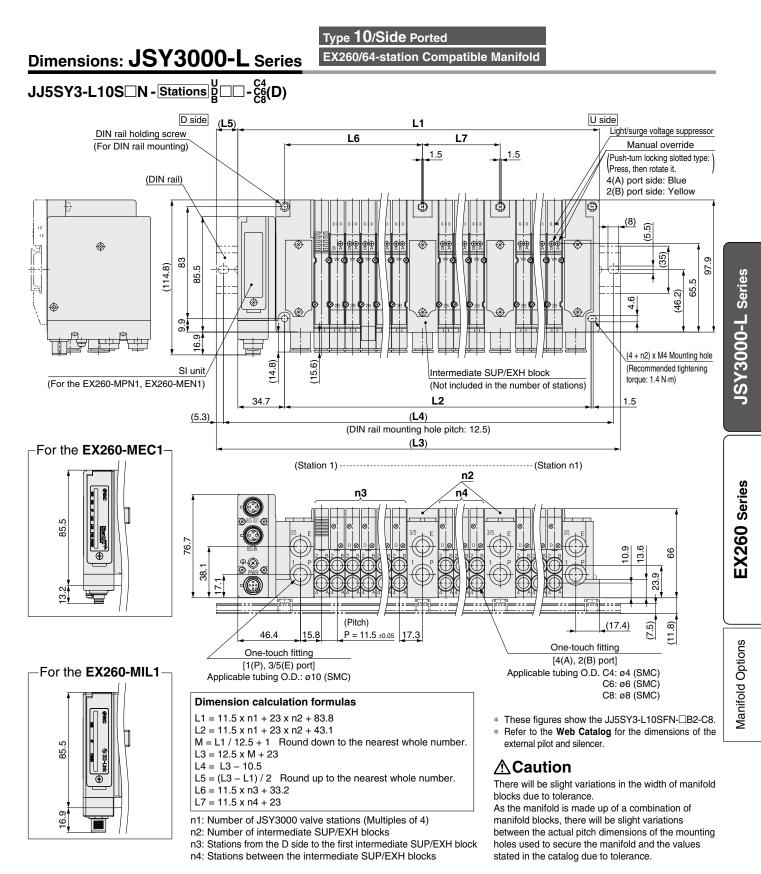

#### L: Dimensions When the intermediate SUP/EXH block count is " $n^2 = 0^{n+1}$

L: Dime	L: Dimensions When the intermediate SUP/EXH block count is "n2 = 0"*1 n1: Stations									: Stations						
	4	8	12	16	20	24	28	32	36	40	44	48	52	56	60	64
L1	129.8	175.8	221.8	267.8	313.8	359.8	405.8	451.8	497.8	543.8	589.8	635.8	681.8	727.8	773.8	819.8
L2	89.1	135.1	181.1	227.1	273.1	319.1	365.1	411.1	457.1	503.1	549.1	595.1	641.1	687.1	733.1	779.1
L3	160.5	210.5	248	298	348	385.5	435.5	485.5	523	573	623	660.5	710.5	760.5	798	848
L4	150	200	237.5	287.5	337.5	375	425	475	512.5	562.5	612.5	650	700	750	787.5	837.5
L5	16	18	14	16	18	13	15	17	13	15	17	13	15	17	13	15

\*1 When the number of intermediate SUP/EXH blocks is "n2 = 1 to 6," calculate the respective dimensions using the various dimension calculation formulas above.



# *EX260 Series* SI Unit



How to Order SI Units

# EX260-MPN1

#### Communication protocol •

Symbol	Protocol	Output	Communication connector	Power supply connector	Manifold symbol	Applicable manifold
PN1	PROFINET		M12	M12	F	
EN1	EtherNet/IP™	For the 64-station	M12	M12	E	JSY3000-L
EC1	EtherCAT	compatible manifold	M8	M8	D	(64 stations specification)
IL1	IO-Link		М	12	K	

#### Specifications

#### **Common Specifications for All SI Units**

Power supply	Power supply voltage	24 VDC +20%, -15%
for control	Internal current consumption	100 mA or less*1
<u> </u>	Power supply voltage	24 VDC +20%, -15%
Power supply for output*2	Max. supply current	3 A
	Voltage drop to valve supply	Max. 1.2 V (at 24 VDC)
	Enclosure (Based on IEC 60529)	IP67
Environmental	Operating temperature range	–10 to +50°C
resistance	Operating humidity range	35 to 85% RH (No condensation)
resistance	Withstand voltage	500 VAC for 1 min between external terminals and FE
	Insulation resistance	500 VDC, 10 $\text{M}\Omega$ or more between external terminals and FE
Standards		CE/UKCA marking
Weight		200 g

\*1 150 mA or less for the EX260-MPN1

\*2 This is the SI unit power supply voltage. Supply power according to the type of solenoid valve used.

#### SI Unit Specifications by Model

	Model	EX260-MPN1				
Applicable	Protocol	PROFINET*1				
system	Configuration file*2	GSD file				
Applicable functions		MRP function, MRPD function, Fast Startup function, Shared Device function, System Redundancy S2 function, PROFlenergy function, Conformance Class C, NET Load Class II				
Commu	nication speed	100 Mbps				
Communicat	ion connector specification	M12				
	Number of outputs	Max. 128 outputs				
Output	Load	Solenoid valve with surge voltage suppressor, 24 VDC, 0.4 W or less (SMC)				
	Mounting screw	Hexagon socket head cap screw M3 x 30 (2 pcs.)				
Accessories	Seal cap (for M12 connector socket)	EX9-AWTS (1 pc.)				

	Model	EX260-MEC1
Applicable	Protocol	EtherCAT*1
system	Configuration file*2	ESI file
Applica	ble functions	CoE, FoE, DC synchronous
Commu	nication speed	100 Mbps
Communicat	ion connector specification	M8
	Number of outputs	Max. 128 outputs
Output	Load	Solenoid valve with surge voltage suppressor, 24 VDC, 0.4 W or less (SMC)
	Mounting screw	Hexagon socket head cap screw M3 x 30 (2 pcs.)
Accessories	Seal cap (for M8 connector socket)	EX9-AWES (2 pc.)

	Model	EX260-MEN1	
Applicable	Protocol	EtherNet/IP™	
system	Configuration file*2	EDS file	
Applicable functions		Quickconnect, DLR, Web server	
Commu	nication speed	100 Mbps	
Communication connector specification		M12	
Number of outputs		Max. 128 outputs	
Output	Load	Solenoid valve with surge voltage suppressor, 24 VDC, 0.4 W or less (SMC)	
Mounting screw		Hexagon socket head cap screw M3 x 30 (2 pcs.)	
Accessories	Seal cap (for M12 connector socket)	EX9-AWTS (1 pc.)	


	Model	EX260-MIL1
Applicable	Protocol	IO-Link
system	Configuration file*2	IODD file
Applicable functions		ISDU, Data Storage
Communication speed		COM3 (230.4 kbps)
Communication connector specification		M12
	Number of outputs	Max. 128 outputs
Output	Load	Solenoid valve with surge voltage suppressor, 24 VDC, 0.4 W or less (SMC)
Accessories	Mounting screw	Hexagon socket head cap screw M3 x 30 (2 pcs.)


\*1 Use a CAT5 or higher communication cable for EtherCAT, Ethernet/IP™, and PROFINET.


\*2 The configuration file can be downloaded from the SMC website: https:// www.smcworld.com


#### **Dimensions**

#### M12 communication connector type For PROFINET



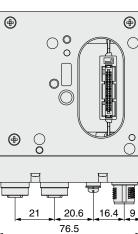

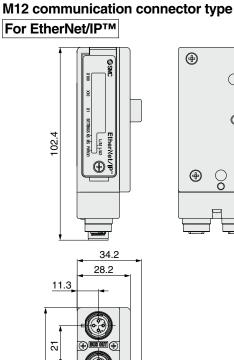


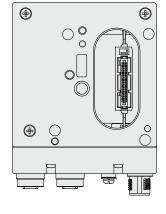






Manifold Options

#### M8 communication connector type For EtherCAT



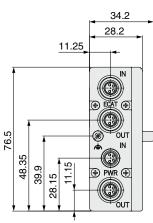

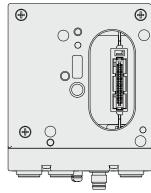

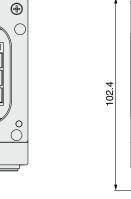

**SMC** 

76.5 20.6

16.4


σ

Ð

 $(\oplus)$ 

© IO-Link

 $\oplus$ 

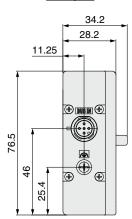


#### M8 communication/Power supply connector type For IO-Link


⊕ ⊕  $\bigcirc$ 0 ۲  $\bigcirc$ 0 1.6


6


# EX260 Series

#### **Parts Description**

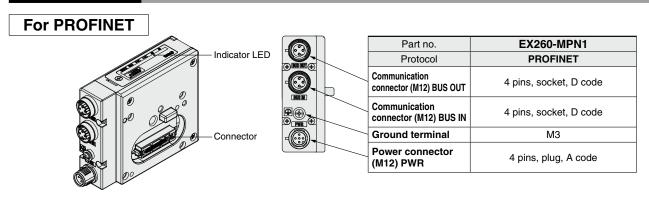


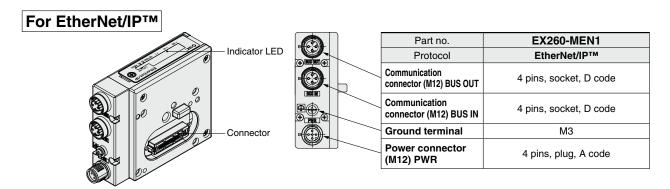

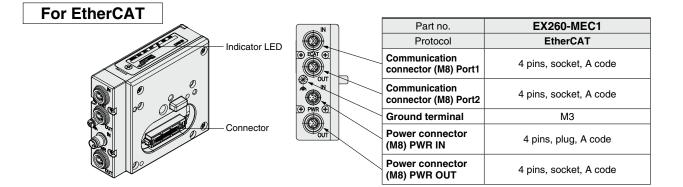

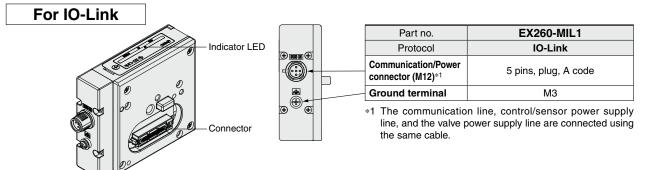

#### **LED Indicator**

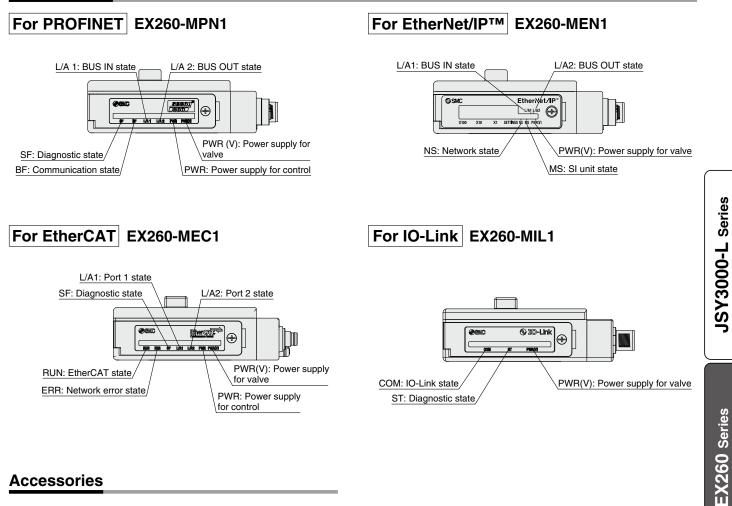

#### Accessories

For details, refer to the Web Catalog (EX260 series).

\* SMC does not provide cables for the EtherCAT compatible type (M8 connector). Order a cable from another cable manufacturer.

8

Manifold Options



(B)

(EA) (P) (EB)


Circuit diagram

\* Refer to page 9 for dimensions.

#### Blanking plate


[With two mounting screws]

Used when valve additions are expected or for maintenance

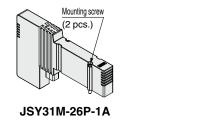


#### Individual SUP spacer

[With a connector gasket, a base gasket, and two mounting screws] When the same manifold is to be used for different pressures, an individual SUP spacer assembly can be used to act as a supply port for different pressures.

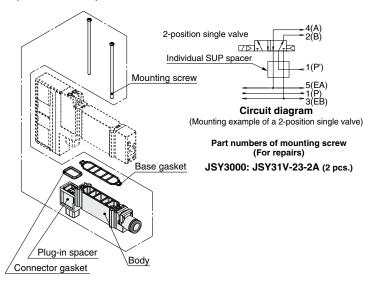


#### Individual EXH spacer

[With a connector gasket, a base gasket, and two mounting screws] When valve exhaust affects other stations due to the circuit configuration, this spacer can be used for individual valve exhaust.

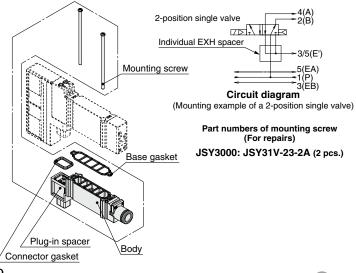

JSY <u>3</u> 1M – 26P – 1A • Series 3 JSY3000

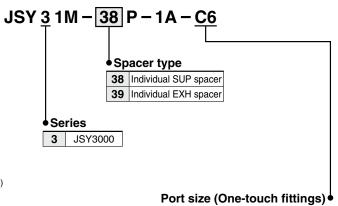

Symbol	P, E port	JSY3000
C6	ø6 One-touch fitting	•

Series

**JSY3000** 

#### SUP/EXH blocking disk

#### [SUP blocking disk]

Inserting an SUP blocking disk in the pressure supply passage of a manifold valve can allow for the use of 2 different pressures (high and low) in 1 manifold.

#### [EXH blocking disk]

Inserting an EXH blocking disk in the exhaust passage of a manifold valve can separate the exhaust from the valve so it does not affect the other valves. It can also be used in positive pressure and vacuum pressure mixed manifolds. (2 pieces are required to block both the EA and EB sides of the EXH.)

#### Labels for blocking disks

These labels can be used to indicate and confirm where on the manifold the SUP/EXH blocking disk assemblies were inserted. (3 labels of each)



Series

JSY3000



SUP

#### Caution


The manifold base cannot be disassembled by the customer. Specify the mounting location of the intermediate SUP/EXH block assembly on the manifold specification sheet.

Nil

EXH blocking disk label

3/5

3/5

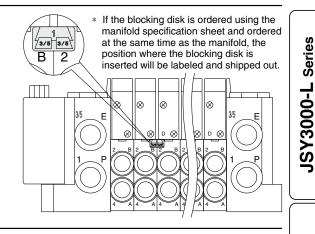

SUP blocking disk

JSY31M-40P-1A

EXH blocking disk

JSY31M-40P-2A

■Intermediate SUP/EXH block assembly JSY31M - 125P - 1A - C10

Part no.

SJ3000-155-1A

	na
- Inourie	

Pilot,	Silence	er	type	э•
lot typo				


	Pi	Pilot type	
Symbol	Internal	External (Made to Order)	Built-in silencer
Nil	•	_	—
S	•	_	
R	—	•	—

D0 DIN rail mounting (Without DIN rail)
 P, E port size (One-touch fitting)
 Symbol P, E port JSY3000

Direct mounting

Symbol	P, E port	JSY3000
C10 ø10 One-touch fitting		●

Intermediate SUP/EXH block assembly

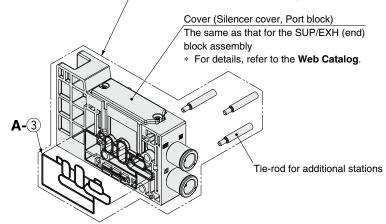

#### Intermediate SUP/EXH block assembly accessories and the number of accessories

Accessories	Quantity
Tie-rod for additional stations	3 pcs.
A-③ Manifold block gasket	1 pc.

\* Gasket is mounted.

#### **Clamp bracket**

Series	Part no.
JSY3000	SY30M-15-1A

#### **≜**Caution


The manifold base cannot be disassembled by the customer. Specify the mounting location of the intermediate SUP/EXH block assembly on the manifold specification sheet.



EX260 Series

Manifold Options


# JSY3000-L Series




#### Dimensions


#### Blanking plate


#### **JSY3000** series

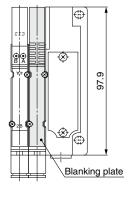

#### ■ Individual SUP/EXH spacer

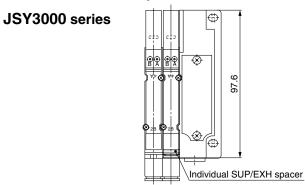

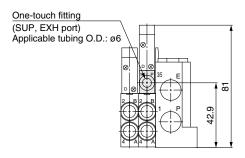



■ Trademark EtherCAT<sup>®</sup> is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

SMC

# 64-station Compatible Manifold Plug-in Compact 5-Port Solenoid Valve

A Safety Instructions Be sure to read the "Handling Precautions for SMC Products" (M-E03-3) and "Operation Manual" before use.

#### SMC Corporation Akihabara UDX 15F,

4-14-1, Sotokanda, Chiyoda-ku, Tokyo 101-0021, JAPAN Phone: 03-5207-8249 Fax: 03-5298-5362 https://www.smcworld.com © 2024 SMC Corporation All Rights Reserved