High Purity Chemical Liquid Valve Non-Metallic Exterior

LVQ Series

The LQ2 insert/integrated fitting type space-saving fitting for the LVQ series high-purity chemical liquid valve is to be discontinued as of March 2025. Select the LQ1 fitting instead.



I VC


LVA LVH

LVD

LVW

L₀3 I VN

TD TĪD TH TIH

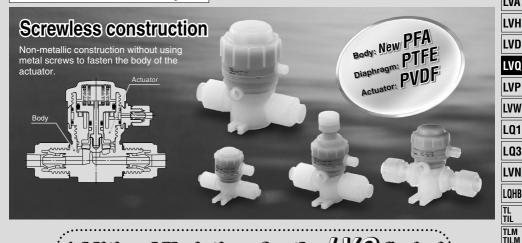

Additional Variations for the $oldsymbol{LVQ}$ Series!


 Insert bushing, LQ1 integrated fitting type Hyper fitting LVQ-V Series




Manually 90° turn type Multi-turn type operated LVQH Series


- Tube extension type LVQ-T Series
- High purity chemical liquid valves, High back pressure (0.5 MPa) tolerant Added the LVQ□□H series.
- Additional options High temperature (Max. 170°C), Buffer material FFKM, Ammonium hydroxide compatible, High flow type


Insert bushing/Flare, integrated fitting types are available.

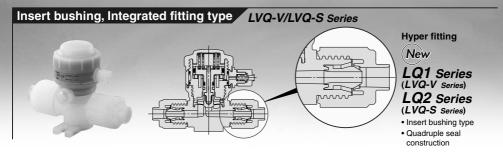


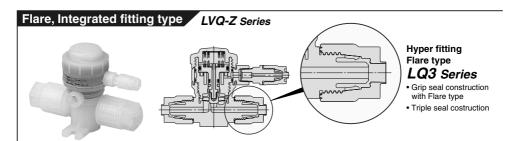

Added manual type.
 Two types of handle operation methods can be selected.

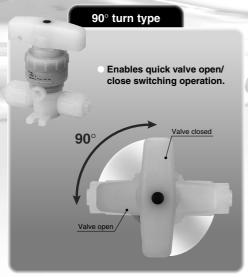

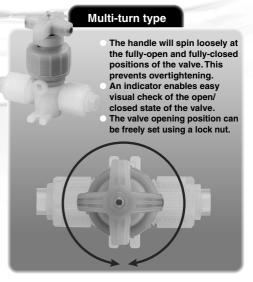

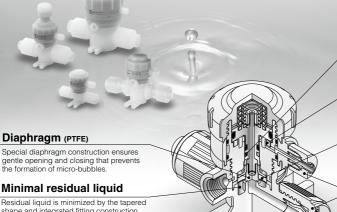

Guide ring

Eliminates lateral motion of the poppet which reduces internal leakage.

Piston damper

Absorbs piston momentum to minimize impact-induced particle generation.

IVC

LVA

LVH

LVD

LVQ

LVP

LVW

LQ1

L03

LVN

LQHB

TL TIL TLM TD TID

TIH

Buffer

Protects diaphragm from deformation and damage due to back pressure.

Integrated fitting construction


Offers quadruple seal construction. Nut lock mechanism—no additional tightening required. High flexural strength. Different tubing sizes can be selected.

gentle opening and closing that prevents the formation of micro-bubbles.


shape and integrated fitting construction, allowing liquid to flow smoothly, achieving improved flow-through characteristics.

Body (New PFA)

Compatible with chemicals such as acids, bases and super pure water.

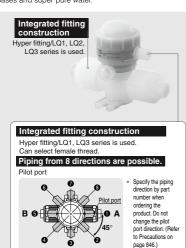

Space saving type

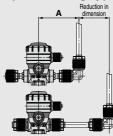

		(11111)
Model	A	Reduction in dimension
LVQ20	56.5	40.5 or more
LVQ30	70	49.5 or more
LVQ40	80	61.5 or more
LVQ50	104.5	64.5 or more
LVQ60	114.5	73.5 or more

Piping example



Options



With flow rate adjustment



With by-pass



With flow rate adjustment & by-pass



With indicator



With indicator & by-pass



Variations

Insert Bushing, Integrated Fitting Type LVQ/LVQH Series

miscrt Dusin	moert busining, integrated 1 itting Type LV &/ I Series																	
	Flow rate								Apı	olicab	le tul	oing (0.D.					
	Orifice characteristics		Series				Metri	c size	!					In	ch si	ze		
	diameter	Kv (Cv)		3	4	6	8	10	12	19	25	1/8	3/16	1/4	3/8	1/2	3/4	1
LVQ Series	ø 4	0.3 (0.35)	LVQ(H)20	•	•	<u></u>						•	•	<u>-</u>				
~ ~	ø 8	1.1 (1.3)	LVQ(H)30	${\mathbb H}$	+	- ∳-	<u></u>	-	+	+	+		+	•	-			+
	ø10	1.6 (1.9)	LVQ(H)40	+	+	+	+	•	-	+	+	+	+	+	•	<u>-</u>		+
	ø16	4.2 (5)	LVQ(H)50	\mathbb{H}	+	+	+	+	•	-	+	+	+	+	+	•	-	+
LVQH Series	ø 22	6.8 (8)	LVQ(H)60	+	+	+	+	+	+	•	<u>-</u>	+	+	+	+	+	•	-
													W	ith rec	lucer	0	Basic	size


■ Insert Bushing, Integrated Fitting Type
Space Saving/Space Saving Connection LVQS/LVQHS Series

	Orifice diameter	Flow rate characteristics	istics Series		Fit	ting s	ize	
	diameter	Kv (Cv)		2	3	4	5	6
LVQS Series	ø 4	0.3 (0.35)	LVQ(H)S20	+	\mp	\mp	\mp	\mp
	ø 8	1.1 (1.3)	LVQ(H)S30	H	-	+	+	+
	ø 10	1.6 (1.9)	LVQ(H)S40	₩	+	-	+	+
	ø 16	4.2 (5)	LVQ(H)S50	\vdash	+	+	-	+
LVQHS Series	ø 22	6.8 (8)	LVQ(H)S60	\vdash	+	+	+	-

■ Flare, Integrated Fitting Type LVQ-Z/LVQH-Z Series

Γ		Flow rate									Аp	plica	ble t	ubir	ıg (D.D.							
	Orifice diameter	characteristics	Series	Series				Met	ic s	size								In	ch si	ze			
	ulailletei	Kv (Cv)		3	-	4	6	8	1	10	12	19	25	5 1	/8	3/16	6 1	/4	3/8	1/2	3/4	, 1	1
LVQ-Z Series	ø 4	0.3 (0.35)	LVQ20(H)-Z	H	-	┝	•	+		⊢	+	+	\dashv	—	•	+	—	-	+	+	+	\dashv	\vdash
	ø8	1.1 (1.3)	LVQ30(H)-Z	Н		H	+	+	—	∳-	+	+	\dashv		⊢	+		╀	-	+	+	\dashv	\vdash
	ø10	1.6 (1.9)	LVQ40(H)-Z	Н		H	+	+	_	⊢	•	+	\dashv	_	H	+	_	\vdash	+	-	+	\dashv	\vdash
	ø16	4.2 (5)	LVQ50(H)-Z	Н		⊢	+	+		⊬	+	- ∳	\dashv		┝	+		╀	+	+	- ∳	\dashv	H
LVQH-Z Series	ø 22	6.8 (8)	LVQ60(H)-Z	Н		H	+	+		\vdash	+	+	-	—	\vdash	+		\vdash	+	+	+	-	-

Flare, Integrated Fitting Type Space Saving/Space Saving Connection LVQS-Z/LVQHS-Z Series

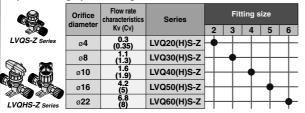

Tube Extension Type LVQ-T/LVQH-T Series


Tube Extension Type LVG-1/LVGH-1 Series															
	0-161	Flow rate							Гubin	g si	ze				
	Orifice diameter	characteristics	Series		M	leti	ric s	ize			Inch size			ze	
	ulailletei	Kv (Cv)		6	10		12	19	25	1/4	4	3/8	1/2	3/4	1
LVQ-T Series	ø 4	0.3 (0.35)	LVQ20(H)-T	+	\dashv		+	+	+	•	—	+	+	+	+
~ ~	ø 8	1.1 (1.3)	LVQ30(H)-T	+	-∳		╫	+	+	+		•	+	+	+
	ø 10	1.6 (1.9)	LVQ40(H)-T	+	+	_	┿	+	+	+	_	+	+	+	+
	ø 16	4.2 (5)	LVQ50(H)-T	+	+	_	+	•	+	+	_	+	+	-	+
LVQH-T Series	ø 22	6.8 (8)	LVQ60(H)-T	+	+		+	+	•	+		+	+	+	-

774

Guide to Pamphlet on Fluoropolymer Fitting Installation Methods

* The pamphlets can be downloaded from the SMC home page. http://www.smcworld.com




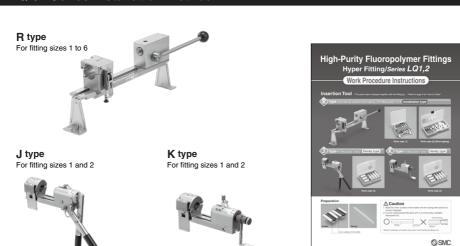

M-E05-1

LQ3 Series Installation Method For fitting sizes 2 to 6



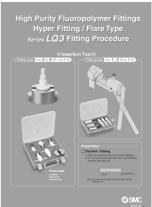

M-E06-4

LVC

LVA

LVH

LVQ

LVP

LQ1

LQ3

LVN

TL TIL

TLM TILM TD TID

TH TIH

I-N-D-E-X

0	Air Operated Insert Bushing, Integrated Fitting Type Hyper Fitting LVQ Series	L01, L0	<u>12</u> P.778
insert Bushing, Integrated Fitting Type	Air Operated Insert Bushing, Integrated Fitting Type Space Saving/Space Saving Connection LVQS Series		L01 L01 P.786
ing, Integrate	Manually Operated Insert Bushing, Integrated Fitting Type Hyper Fitting LVQH Series		<u>a1, La2</u> P.795
Insert Bushi	Manually Operated Insert Bushing, Integrated Fitting Type Space Saving/Space Saving Connection LVQHS Series		L01 P.799
	Fittings and Special Tools		P.804
0	Air Operated Flare, Integrated Fitting Type Hyper Fitting • LVQ-Z Series	Las	P.805
d Fitting Type	Air Operated Flare, Integrated Fitting Type Space Saving/Space Saving Connection LVQS-Z Series		L03 P.813
Flare, Integrated Fitting Type	Manually Operated Flare, Integrated Fitting Type Hyper Fitting • LVQH-Z Series		<u>Q3</u> P.822
FI	Manually Operated Flare, Integrated Fitting Type Space Saving/Space Saving Connection LVQHS-Z Series		LQ3 P.826

I-N-D-E-X

LQ1 Tube Extension Type Air Operated Tube Extension Type LVQ-T Series P.831 **Manually Operated** Tube Extension Type LVQH-T Series ... P.838 Air Operated, 0.5 MPa Back Pressure Tolerant LQ1 Insert Bushing, Integrated Fitting Type **Hyper Fitting** LQ1, LQ2 LVQ . H Series Air Operated, 0.5 MPa Back Pressure Tolerant Flare, Integrated Fitting Type LQ3 **Hyper Fitting** ■ LVQ □ □ H-Z Series P.842 **Applicable Fluids** P.844 Specific Product Precautions P.845, 846

LVC

LVA LVH

LVD

LVQ

LVP

LQ1

LQ3

LQHB

TL TIL TLM TILM TD TID


TH Tih

Air Operated Insert Bushing, Integrated Fitting Type Hyper Fitting

LVQ Series



How to Order

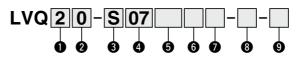

Body class

Symbol	Body class	Orifice dia.
2	2	ø4
3	3	ø8
4	4	ø10
5	5	ø16
6	6	ø22

2 Valve type

0	N.C.					
1	1 N.O.					
2 Double acting						

Note) For valve type combinations, refer to variations on the next page.

3 Fitting type

Symbol	Fitting type	Body class
٧	LQ1	2, 3, 4, 5, 6
S	LQ2	2, 3, 4, 5

Note) Insert bushing is used in common.

4 Applicable tubing size Note)

Cumbal	Connection tubing		Boo	dy cl	ass	
Symbol	size		3	4	5	6
Metric	size					
03	3 x 2	•				
04	4 x 3	•				
06	6 x 4	0	•			
08	8 x 6		•			
10	10 x 8		0	•		
12	12 x 10			0	•	
19	19 x 16				0	•
25	25 x 22					0
Inch s	size					
03	1/8" x 0.086"	•				
05	3/16" x 1/8"	•				
07	1/4" x 5/32"	0	•			
11	3/8" x 1/4"		0	•		
13	1/2" x 3/8"			0	•	
19	3/4" x 5/8"				0	•
25	1" x 7/8"					0

○Basic size ● With reducer

Note) Refer to page 846 for details of the applicable tubing sizes.

5 Port B (OUT) different dia. size

Symbol	Application
Nil	Ports A & B same size
Refer to the applicable tubing size table to the left.	Different diameter tubings can be selected within the same body class.

6 Pilot port type


Nil	LQ1 integrated fitting	Connection tubing size 1/8" x 0.086"(3 x 2) Note)
М	LQ1 integrated fitting	Connection tubing size 4 x 3 Note)
R	Threaded	Rc1/8
N	Threaded	NPT1/8

Note) Refer to page 846 for details of the applicable tubing sizes.

Pilot port direction

T not port un cotion								
Symbol	Direction							
Nil	0							
P2	0							
P3	6							
P4	0							
P5	6							
P6	6							
P7	0							
P8	0							

Pilot port piping direction

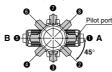

 Specify the piping direction by part number when ordering the product. Do not change the pilot port direction. (Refer to Precautions on page 846.)

Air Operated Insert Bushing, Integrated Fitting Type LVQ Series

A Option 1

O Op	tion i
Nil	None
1	With flow rate adjustment
2	With by-pass
3	With flow rate adjustment & by-pass
4	With indicator
5	High back pressure (0.42 MPa)
6	High back pressure with flow rate adjustment
7	High back pressure with by-pass
8	High back pressure with flow rate adjustment & by-pass
9	High back pressure with indicator
24	With indicator & by-pass

Note) Refer to variations in the table below for valve type and option 1 combinations. Options in the same table can not be combined each other. Option 2

0				Nete								
Symbol	Nil	1	2	3	4	5	6	7	8	9	24	Note
Nil	0	0	0	0	0	0	0	0	0	0	0	_
J	0	0	_	_	_	_	_	_	_	_	_	For high temperature
K	0	0	0	0	0	0	0	0	0	0	0	Buffer material FFKN
N	0	0	0	0	0	0	0	0	0	0	0	For ammonium hydroxide
Р	0	_	-	-	0	0	-	_	_	-	_	High flow type LVQ6□ only

Note 1) Options 2 in the same table cannot be combined each other.

Note 2) Only option 1 (with flow rate adjustment) is available for use in high-temperature environments. However, it cannot be used in combination with any of the high back pressure specifications.

Variations

		Model	LVQ20	LVQ30	LVQ40	LVQ50	LVQ60
	Or	ifice diameter	ø4	ø8	ø10	ø16	ø22
	Tubing O.D.	Metric	6	10	12	19	25
Туре	Symbol Valve to	/pe Inch	1/4	3/8	1/2	3/4	1
Basic	TDV TDD TDV	N.C.	0	0	0	0	0
N.C. N.O. Double		N.O.	0	0	0	0	0
acting	N.C. N.O. Double acting	Double acting	0	0	0	0	0
With flow rate adjustment	∳PA B#A ¥ N.C.	N.C.	0	0	0	0	0
With by-pass Double acting	∳PA ∳PA B⊟A B⊟A	N.C.	0	0	0	0	0
N.C.	B A B A ♣ A PB N.C. Double acting	Double acting	0	0	0	0	0
With flow rate adjustment & by-pass	∜PA B ≱ A ¥ N.C.	N.C.	0	0	0	0	0
With indicator	∜PA B ↓ A ≩ N.C.	N.C.	0	0	0	0	0
High back pressure	∳PA B II A R.C.	N.C.	0	0	0	0	0
With indicator & by-pass	∳PA B ₩ N.C.	N.C.	0	0	0	0	0

____ 778-1 ®

LVC LVA LVH

LVD LVP LVW LQ1

L03

LVN

LQHB TL TIL

TLM TILM TD TID TH TIH






⚠ Specific Product Precautions

Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 845 and 846 for Air Operated Chemical Liquid Valve Precautions.

Piping

1. Connect tubing by special tools.

For information on tubing connection and special tools, please see the pamphlet "High Purity Fluoropolymer Fittings Hyper Fitting LQ1/2 Series Work Procedure Instructions" (M-E05-1). (The pamphlet can be downloaded from the SMC home page.)

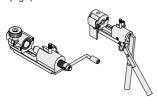

 Tighten the nut until it touches the end surface of the body, and then tighten it an additional 1/8 turn. If the nut won't turn any further, then it means a sufficient tightening has occurred. Refer to the proper tightening torques shown below.

Tightening Torque for Piping

Body class	Torque (N·m)								
body class	LQ1	LQ2							
2	0.3 to 0.4	1.5 to 2.0							
3	0.8 to 1.0	3.0 to 3.5							
4	1.0 to 1.2	7.5 to 9.0							
5	2.5 to 3.0	11.0 to 13.0							
6	5.5 to 6.0	_							

Standard Specifications

Mod	lel	LVQ20	LVQ30	LVQ40	LVQ50	LVQ60					
Tubing O.D.Note 1)	Metric	6	10	12	19	25					
Tubing O.D. No. 17	Inch	1/4	3/8	1/2	3/4	1					
Fishing	IN/OUT port		LQ1 o	r LQ2		LQ1					
Fitting type	Pilot port	LQ1									
Orifice diamete	er	ø4	ø8	ø10	ø16	ø22					
Flow rate	Kv	0.3	1.1	1.6	4.2	6.8 (8.1) Note 2)					
characteristics	Cv	0.35	1.3	1.9	5	8 (9.5) Note 2)					
Withstand pres	ssure (MPa)			1							
Operating pressure	Standard	−98 kP	a to 0.5 MP	a ^{Note 3)}	-98 kPa to 0	.4 MPa Note 3)					
<a→b flow=""></a→b>	High temperature		a Note 3)								
.	Standard		0.2 o	r less							
Back pressure (MPa)	High back pressure	0.42 or less									
(WFa)	High temperature		0.3 or less		0.2 or less						
Valve leakage	(cm³/min)	0 (With water pressure)									
Pilot air pressi	ure (MPa)	0.3 to 0.5 (High back pressure: 0.45 to 0.55)									
Pilot port size			1/8" (ø3)	, ø4, Rc 1/8,	NPT 1/8						
Fluid	Standard			0 to 100							
temperature (°C)	High temperature			0 to 170							
Ambient tempe	erature (°C)			0 to 60							
Weight (kg)		0.08	0.17	0.22	0.70	0.81					

Note 1) Refer to page 846 for details of the applicable tubing sizes.

Note 2) (): High flow type

Note 3) This product cannot be used for vacuum retention. Also, connecting the vacuum to the B port may reduce the life of the product.

Applicable Different Diameter Tubings with Reducer

Different diameter tubings can be selected (within the same body class) by using a nut and an insert bushing (reducer).

• With reducer

D. d.	Connection tubing O.D.																	
Body		Metric size								Inch size								
Oldoo	3	4	6	8	10	12	19	25	1/8	3/16	1/4	3/8	1/2	3/4	1			
2	•	•	0	_	_	_	_	_	•	•	0	_	_	_	_			
3	_	_	•	•	0	_	_	_	_	_	•	0	_	_	_			
4	_	_	_	_	•	0	_	_	_	_	_	•	0	_	_			
5	_	_	_	_	_	•	0	_	_	_	_	_	•	0	_			
6	_	_	_	_	_	_	•	0	_	_	_	_	_	•	0			

Note) Refer to page 804 for information on changing tubing sizes.

LVC

LVA

LVD

LVQ

LVW LQ1

LQ3

LVN

LQHB TL


TIL TLM TILM


TD TID TH TIH


LVQ Series

Construction

Basic N.C.

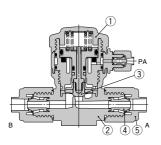

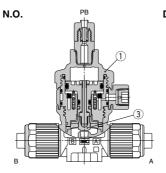


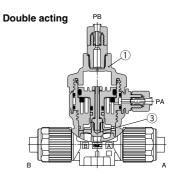




with reducer


With flow rate adjustment

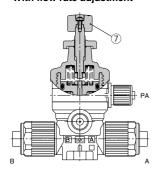

With by-pass

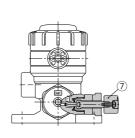

With indicator

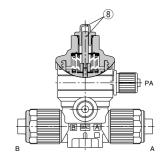


Component Parts


No.	Description	Material
1	Actuator	PVDF
2	Body	PFA
3	Diaphragm	PTFE
4	Insert bushing	PFA
5	Nut	PFA
6	Collar	PFA
7	Flow rate adjuster	PVDF
8	Indicator/Cover	PP


Dimensions

Basic, High back pressure

N.C. valve

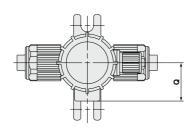

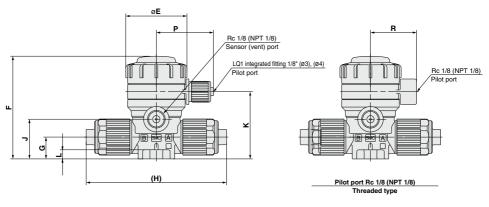

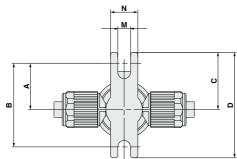

* Drawings show the LVQ□0-S.

LVQ 0-S	Dime	nsion	s (N.C	C. Val	ve)												(mm)
Model	Α	A B C D E F G H		J	к		М	N	Р	Q	R						
Model	_ ^	P	•	ן ו	_	-	l G	۷□	S□	٦		_	IVI	14	-	u	n
LVQ20-° □	25.5	46	31.5	58	33.6	56.5	12	70	77	21.8	37	5	7	15	31.3	21	25.3
LVQ30-∛□	28.5	57	34.5	69	45.4	77	16.5	83	95	32	50	6	7	20	37.2	25	31.2
LVQ40-⁵□	28.5	57	34.5	69	45.4	82.5	22	95	109	37.5	55.5	6	7	20	37.2	25	31.2
LVQ50-°□	42	84	48	96	75	127	25	130	141	50.2	78.2	10	7	20	50.8	38.5	45
LVQ60-V□*	42	84	48	96	75	136.8	32	150	_	60	88	10	7	20	50.8	38.5	45

^{*} The LVQ60 is available only with "V".

LVC LVA LVH LVD LVQ

LVW

LQ1 LQ3

LVN LQHB TL TIL TLM TILM TD TID

TH TIH

LVQ Series


Dimensions

With flow rate adjustment, High back pressure with flow rate adjustment

N.C. valve

Dimensions	(mm)				
Model	S				
LVQ20- [∨] s □-1	83				
LVQ30-∛ □-1	113.5				
LVQ40- [∨] s □-1	119				
LVQ50- [∨] s □-1	171.5				
LVQ60-V□-1*	182.5				


^{*} The LVQ60 is available only with "V".

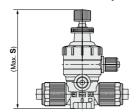



With by-pass, High back pressure with by-pass N.C. valve



(H)

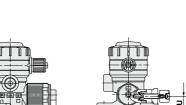

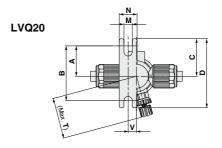

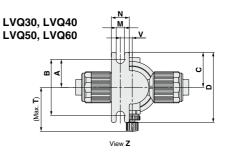

* Drawings show the LVQ□0-S.

Dimensions											(mm)
Model	Α	В	С	D	М	N	т	U	v	H V□ S□	
LVQ20-5 □-2	25.5	46	31.5	58	7	15	34.3	10.6	7	64	77
LVQ30- s □-2	25.5	51	31.5	63	7	15	36.9	16.5	10	83	95
LVQ40- [∨] s □-2	25.5	51	31.5	63	7	15	37.9	22	10	95	109
LVQ50-5 □-2	38	76	44	88	7	20	64	25	17	130	141
LVQ60-V□-2*	38	76	44	88	7	20	66	32	17	150	

^{*} The LVQ60 is available only with "V".


782


With flow rate adjustment & by-pass,


High back pressure with flow rate adjustment & by-pass

N.C. valve



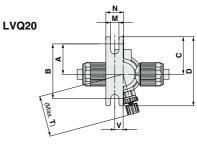

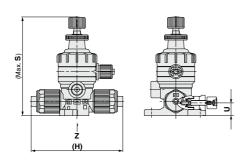

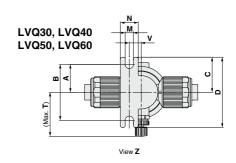

* Drawings show the LVQ 0-S.

LVC LVA LVH LVD LVQ LVP LVW

LQ1

L03 LVN LQHB TL TIL

TLM TILM

TD TID TH TIH

ensions	


Dimensions												(mm)
Model	Α	В	С	D	м	N	s	т.	U	v	H	1
Wodei	^	В	· ·	ן ו	IVI	IN.	3	' '	٠	٧	۷□	S□
LVQ20-5 □-3	25.5	46	31.5	58	7	15	83	34.3	10.6	7	64	77
LVQ30-ў □-3	25.5	51	31.5	63	7	15	113.5	36.9	16.5	10	83	95
LVQ40- [∨] _s □-3	25.5	51	31.5	63	7	15	119	37.9	22	10	95	109
LVQ50-s □-3	38	76	44	88	7	20	171.5	64	25	17	130	141
LVQ60-V□-3*	38	76	44	88	7	20	182.5	66	32	17	150	_

^{*} The LVQ60 is available only with "V".

With indicator, High back pressure with indicator N.C. valve

Dimensions	(mm)
Model	S
LVQ20-5 □-4	70.5
LVQ30-5 □-4	88.5
LVQ40- ^v □-4	94
LVQ50-° □-4	134.5
LVQ60-V□-4*	144

^{*} The LVQ60 is available only with "V".

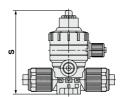

* Drawings show the LVQ = 0-S.





LVQ Series


Dimensions

Basic

N.O. valve

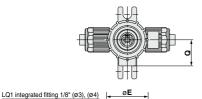


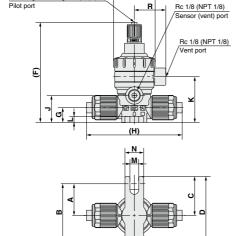


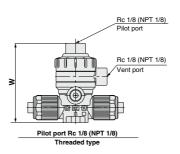

* Drawings show the LVQ = 0-S.

Double acting valve

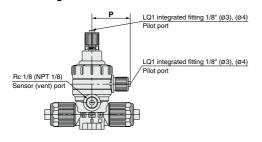

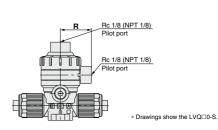



LVQ\[\frac{1}{2}-\frac{1}{8}\[\]	Dime	nsion	s (N.C). Val	ve, Do	ouble A	cting	Valve	∍)									(mm)
Mandal		В	С	_	Е	_	G	ı	1		v		м	N	Р	Q	R	w
Model	Α	P		ט	_	Г	G	۷□	S□	J	Γ.	_	IVI	IN	Ρ.	Q	К	VV
LVQ2¹-°s□	25.5	46	31.5	58	33.6	81	12	70	77	21.8	37	5	7	15	31.3	21	25.3	64
LVQ3½-%□	28.5	57	34.5	69	45.4	99	16.5	83	95	32	50	6	7	20	37.2	25	31.2	82
LVQ4¹-°s□	28.5	57	34.5	69	45.4	104.5	22	95	109	37.5	55.5	6	7	20	37.2	25	31.2	87.5
LVQ5 ¹ ₂ - ^V ₈ □	42	84	48	96	75	145	25	130	141	50.2	78.2	10	7	20	50.8	38.5	45	128
LVQ6½-V□	* 42	84	48	96	75	154.5	32	150	_	60	88	10	7	20	50.8	38.5	45	137.5


^{*} The LVQ60 is available only with "V".

With by-pass Double acting valve



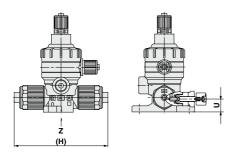

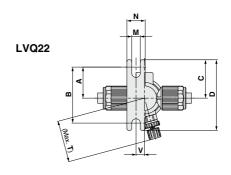

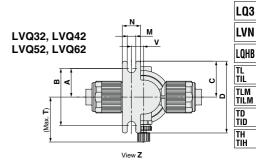

* Drawings show the LVQ = 0-S.

LVC

LVA LVH LVD LVQ LVP LVW LQ1

DII	nensions (ມດ	eiduc	Actin	g var	ve)							(mm)
	Model	А	В	С	D	м	N	_	U	v	H	1
	Model	A	_ P		ט	IVI	IN	'	U	v	V□	S□
L	VQ22-∛□-2	25.5	46	31.5	58	7	15	34.3	10.6	7	64	77
L	VQ32-∛□-2	25.5	51	31.5	63	7	15	36.9	16.5	10	83	95
L	VQ42-∛□-2	25.5	51	31.5	63	7	15	37.9	22	10	95	109
L	VQ52-∛□-2	38	76	44	88	7	20	64	25	17	130	141

88

20 66

76 44

17 150

LVQ62-V□-2* 38 * The LVQ60 is available only with "V".


Air Operated Insert Bushing, Integrated Fitting Type Space Saving/Space Saving Connection

LVQS Series



The LQ2 insert/integrated fitting type space-saving fitting for the LVQ series high-purity chemical liquid valve is to be discontinued as of March 2025. Select the LQ1 fitting instead.

How to Order

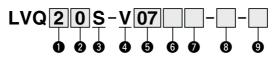

Body class

Symbol	Body class	Orifice dia.
2	2	ø4
3	3	ø8
4	4	ø10
5	5	ø16
6	6	ø22

2 Valve type

ı	0	N.C.
	1	N.O.
	2	Double acting

Note) For valve type combinations, refer to variations on the next page.

Body type

90	ouy type
s	Space saving connection

4 Fitting type

Symbol	Fitting type	Body class
V	LQ1	2, 3, 4, 5, 6

Applicable fitting size

Symbol	Fitting size		Boo	dy cl	ass	
Symbol	Fitting size	2	3	4	5	6
07	2	0				
11	3		0			
13	4			0		
19	5				0	
25	6					0

Note) Refer to page 787 for How to Order fitting parts. Select a tube with the same size as the valve side fitting.

6 Pilot port type


integrated fitting 1/8" x 0.086" (3 x 2) No.				
101 Connection tubing siz	Nil		Connection tubing size 1/8" x 0.086" (3 x 2) Note)	
integrated fitting 4 x 3 Note)	М	LQ1 integrated fitting	Connection tubing size 4 x 3 Note)	
R Threaded Rc1/8	R	Threaded	Rc1/8	
N Threaded NPT1/8	N	Threaded	NPT1/8	

Note) Refer to page 846 for details of the applicable tubing sizes.

Pilot port direction

•	or port un coulon
Symbol	Direction
Nil	0
P2	0
P3	0
P4	4
P5	6
P6	6
P7	0
P8	0

Pilot port piping direction

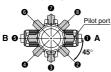

 Specify the piping direction by part number when ordering the product. Do not change the pilot port direction. (Refer to Precautions on page 846.)

Air Operated Insert Bushing, Integrated Fitting Type LVQS Series

(a) Option 1

	LIOII I
Nil	None
1	With flow rate adjustment
2	With by-pass
3	With flow rate adjustment & by-pass
4	With indicator
5	High back pressure (0.42 MPa)
6	High back pressure with flow rate adjustment
7	High back pressure with by-pass
8	High back pressure with flow rate adjustment & by-pass
9	High back pressure with indicator
24	With indicator & by-pass

Note) Refer to variations in the table below for valve type and option 1 combinations. Options in the same table can not be combined each other. Option 2

Op Op	uon	_										
	Applicable option											Note
Symbol	Nil	1	2	3	4	5	6	7	8	9	24	Note
Nil	0	0	0	0	0	0	0	0	0	0	0	_
J	0	0	_	_	_	_	_	_	_	_	_	For high temperature
K	0	0	0	0	0	0	0	0	0	0	0	Buffer material FFKM
N	0	0	0	0	0	0	0	0	0	0	0	For ammonium hydroxide
Р	0	_	-	_	0	0	_	_	-	_	-	High flow type LVQ6□ only

Note 1) Options 2 in the same table cannot be combined each other.

Note 2) Only option 1 (with flow rate adjustment) is available for use in hightemperature environments. However, it cannot be used in combination
with any of the high back pressure specifications.

Variations

		Model	LVQ20	LVQ30	LVQ40	LVQ50	LVQ60
	Ori	fice diameter	ø4	ø8	ø10	ø16	ø22
Туре	Symbol Symbol Valve ty	le fitting size	2	3	4	5	6
Basic N.C.	<u>∳P</u> A <u>∳P</u> B <u>∳P</u> A	N.C.	0	0	0	0	0
N.O. Double	B A B A B A	N.O.	0	0	0	0	0
acting	▼ FB N.C. N.O. Double acting	Double acting	0	0	0	0	0
With flow rate adjustment	ÿ PA B † A ▼ N.C.	N.C.	0	0	0	0	0
With by-pass Double acting	∳PA ∳PA B⊟A B⊟A	N.C.	0	0	0	0	0
N.C.	TMAT TMAT ↑PB N.C. Double acting	Double acting	0	0	0	0	0
With flow rate adjustment & by-pass	∳PA B <mark>*</mark> *A ¥ N.C.	N.C.	0	0	0	0	0
With indicator	∳PA B H N.C.	N.C.	0	0	0	0	0
ligh back pressure	∳PA BHA N.C.	N.C.	0	0	0	0	0
With indicator & by-pass	∳PA B A S N.C.	N.C.	0	0	0	0	0

SMC

LVC

LVA

LVH

LVQ

LVP

LVW

LQ1

L03

LVN

LQHB

TL TIL

TLM TILM TD TID TH TIH



How to Order Space Saving Fittings

Applicable tubing sizeNote 1) Note 2) Applicable 5

l	Size	No.	tubing size (mm)	Reducing
l	2	1	6 x 4	0
l	2	2	4 x 3	•
l	3	1	10 x 8	0
l	3	2	8 x 6	•
l	3	3	6 x 4	•
l	4	1	12 x 10	0
l	4	2	10 x 8	•
l	5	1	19 x 16	0
l	5	2	12 x 10	•
l	6	1	25 x 22	0
ı	6	2	19 x 16	•

Size	Symbol Applicable tubing size (inch)		Reducing
2	Α	1/4" x 5/32"	0
2	В	3/16" x 1/8"	•
2	С	1/8" x 0.086"	•
3	Α	3/8" x 1/4"	0
3	В	1/4" x 5/32"	•
4	Α	1/2" x 3/8"	0
4	В	3/8" x 1/4"	•
5	Α	3/4" x 5/8"	0
5	В	1/2" x 3/8"	•
6	Α	1" x 7/8"	0
6	В	3/4" x 5/8"	•

O Basic size With reducer LVC LVA LVH LVD LVQ

LVP

LVW

LQ1 L03

LVN

LQHB


TL TIL

TLM TILM TD TID TH

TIH

Note 1) Select the same size as the fitting on the valve.

Note 2) Refer to page 846 for details of the applicable tubing sizes.

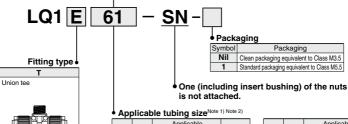

Size	No.	Applicable tubing size (mm)	Reducing
2	1	6 x 4	0
2	2	4 x 3	•
3	1	10 x 8	0
3	2	8 x 6	•
3	3	6 x 4	•
4	1	12 x 10	0
4	2	10 x 8	•
5	1	19 x 16	0
5	2	12 x 10	•

Size	Symbol	Applicable tubing size (inch)	Reducing
2	Α	1/4" x 5/32"	0
2	В	3/16" x 1/8"	•
2	C	1/8" x 0.086"	•
3	Α	3/8" x 1/4"	0
3	В	1/4" x 5/32"	•
4	Α	1/2" x 3/8"	0
4	В	3/8" x 1/4"	•
5	Α	3/4" x 5/8"	0
5	В	1/2" x 3/8"	•

 Basic size With reducer

Note 1) Select the same size as the fitting on the valve.


Note 2) Refer to page 846 for details of the applicable tubing sizes.

Piping Example

Union elbow

Panel mount union

Union

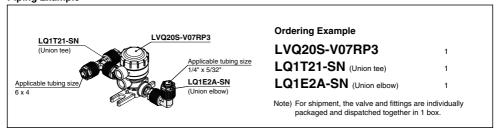

787 A

LVQS Series



Standard Specifications

Mod	el	LVQ20S	LVQ30S	LVQ40S	LVQ50S	LVQ60S				
Connection fit	ting size	2	3	4	5	6				
Fishing Arms	IN/OUT port	LQ1								
Fitting type	Pilot port	LQ1								
Orifice diamet	Orifice diameter		ø8	ø10	ø16	ø22				
Flow rate	Kv	0.3	1.1	1.6	4.2	6.8 (8.1) Note 1)				
characteristics	Cv	0.35	1.3	1.9	5	8 (9.5) Note 1)				
Withstand pre	ssure (MPa)			1						
Operating pressure	Standard	–98 kF	a to 0.5 MP	-98 kPa to 0.4 MPa Note 3)						
<a→b flow=""></a→b>	High temperature	-98 kPa to 0.3 MPa Note 3)								
	Standard		0.3 or less	0.2 o	r less					
Back pressure (MPa)	High back pressure	0.42 or less								
(4)	High temperature		0.3 or less	0.2 or less						
Valve leakage	(cm³/min)	0 (With water pressure)								
Pilot air pressi	ure (MPa)	0.3 to 0.5 (High back pressure: 0.45 to 0.55)								
Pilot port size	Note 2)	1/8" (ø3), ø4, Rc 1/8, NPT 1/8								
Fluid	Standard			0 to 100						
temperature (°C)	High temperature		·	0 to 170		·				
Ambient temp	erature (°C)	0 to 60								
Weight (kg)		0.085	0.175	0.223	0.725	0.835				

Note 1) (): High flow type

Note 2) Refer to page 846 for details of the applicable tubing sizes.

Note 3) This product cannot be used for vacuum retention. Also, connecting the vacuum to the B port may reduce the life of the product.

▲ Specific Product Precautions

Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 845 and 846 for Air Operated Chemical Liquid Valve Precautions.

Piping

⚠ Caution

- 1. Take extra care with the insert bushing when connecting the fittings.
- 2. Tighten the nut until it touches the end surface of the body, and then tighten it an additional 1/8 turn. If the nut won't turn any further, then it means a sufficient tightening has occurred. Refer to the proper tightening torques shown below.


Tightening Torque for Piping

rigitterining	i orque for i ipirig
B. I. I.	Torque (N·m)
Body class	LQ1
2	0.3 to 0.4
3	0.8 to 1.0
4	1.0 to 1.2
5	2.5 to 3.0
6	5.5 to 6.0


Air Operated Insert Bushing, Integrated Fitting Type LVQS Series

Construction


Basic N.C.

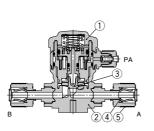

Basic N.O.

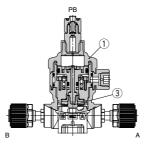

Basic Double acting

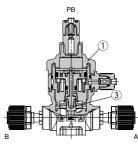


LVH LVD

LVC LVA


LVP

LVW LQ1 LQ3


With flow rate adjustment

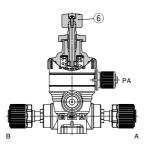

With by-pass

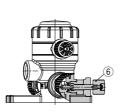

With indicator

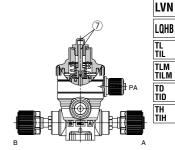

Component Parts

Component raite								
	Material	Description	No.					
	PVDF	Actuator	1					
	PFA	Body	2					
	PTFE	Diaphragm	3					
	PFA	Insert bushing	4					
	PFA	Nut	5					
	PVDF	Flow rate adjuster	6					
	PP	Indicator/Cover	7					
	PFA PVDF	Nut Flow rate adjuster	5					

SMC


789 A


LVQS Series


Dimensions

Basic, High back pressure

N.C. valve

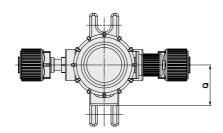

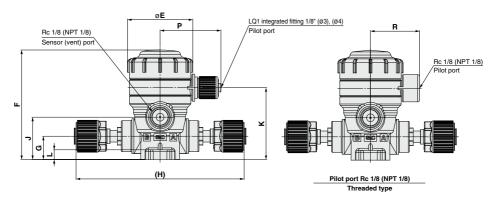

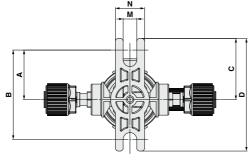

* Drawings show the LVQ□0-S.


L	.VQ□0S-V□	Dime	Dimensions (N.C. Valve)										(mm)				
	Model	Α	В	С	D	Е	F	G	Н	J	K	L	M	N	Р	Q	R
	LVQ20S-V07	25.5	46	31.5	58	33.6	56.5	12	89	21.8	37	5	7	15	31.3	21	25.3
	LVQ30S-V11	28.5	57	34.5	69	45.4	77	16.5	106	32	50	6	7	20	37.2	25	31.2
	LVQ40S-V13	28.5	57	34.5	69	45.4	82.5	22	120	37.5	55.5	6	7	20	37.2	25	31.2
	LVQ50S-V19	42	84	48	96	75	127	25	164	50.2	78.2	10	7	20	50.8	38.5	45
	LVQ60S-V25	42	84	48	96	75	136.8	32	177	60	88	10	7	20	50.8	38.5	45

Air Operated Insert Bushing, Integrated Fitting Type LVQS Series

With flow rate adjustment, High back pressure with flow rate adjustment

N.C. valve

Dimensions	(mm)
Model	S
LVQ20S-V07-1	83
LVQ30S-V11-1	113.5
LVQ40S-V13-1	119
LVQ50S-V19-1	171.5
LVQ60S-V25-1	182.5

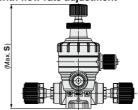

* Drawing shows the LVQ□0-S.

LVC

LVA LVH


LVD


LVQ


LVW


LQ1
LQ3
LVN
LQHB
TL
TIL
TLM
TILM
TID
TID
TH
TIH

With by-pass, High back pressure with by-pass N.C. valve

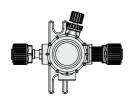

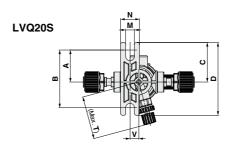

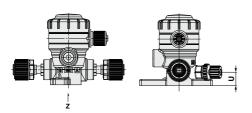

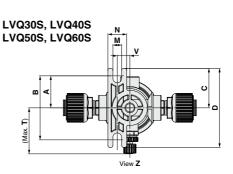

Dimensions									(mm)
Model	Α	В	С	D	М	N	Т	U	٧
LVQ20S-V07-2	25.5	46	31.5	58	7	15	34.3	10.6	7
LVQ30S-V11-2	25.5	51	31.5	63	7	15	36.9	16.5	10
LVQ40S-V13-2	25.5	51	31.5	63	7	15	37.9	22	10
LVQ50S-V19-2	38	76	44	88	7	20	64	25	17
LVQ60S-V25-2	38	76	44	88	7	20	66	32	17

* Drawings show the LVQ□0-S.

LVQS Series


Dimensions


With flow rate adjustment & by-pass,


High back pressure with flow rate adjustment & by-pass

N.C. valve



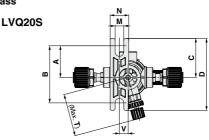

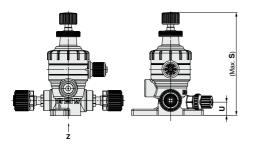

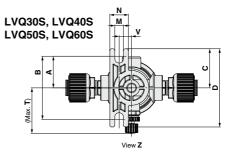


* Drawings show the LVQ□0-S.

Dimensions										(mm
Model	Α	В	С	D	M	N	S	Т	U	٧
LVQ20S-V07-3	25.5	46	31.5	58	7	15	83	34.3	10.6	7
LVQ30S-V11-3	25.5	51	31.5	63	7	15	113.5	36.9	16.5	10
LVQ40S-V13-3	25.5	51	31.5	63	7	15	119	37.9	22	10
LVQ50S-V19-3	38	76	44	88	7	20	171.5	64	25	17
LVQ60S-V25-3	38	76	11	ΩΩ	7	20	182.5	66	32	17


With indicator, High back pressure with indicator N.C. valve

Dimensions	(mm)
Model	S
LVQ20S-V07-4	70.5
LVQ30S-V11-4	88.5
LVQ40S-V13-4	94
LVQ50S-V19-4	134.5
LVQ60S-V25-4	144

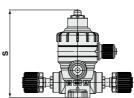

* Drawing shows the LVQ□0-S.

Air Operated Insert Bushing, Integrated Fitting Type LVQS Series

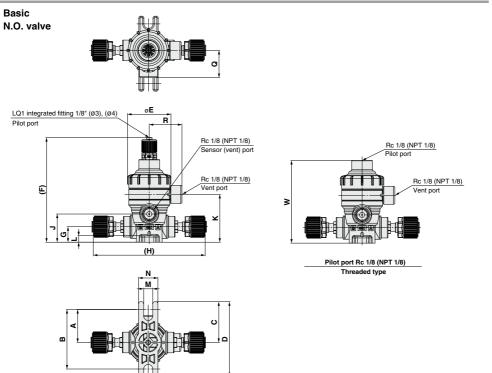

* Drawings show the LVQ□0-S.

LVC LVA LVH

LVD

LVQ

LVP

LVW


LQ1 LQ3 LVN


LQHB

TL TIL TLM TILM

TD TID

TH Tih

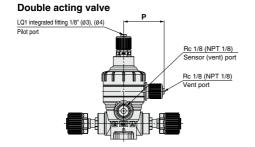

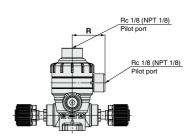


* Drawings show the LVQ□0-S.

LVQ_2S-V_	_VQL_½S-VL Dimensions (N.O. Valve, Double Acting Valve) (mm)																	
Model	A	В	С	D	Е	_	G	ı	1		к		м	N	Р	Q	R	w
Model	^	В	· ·	ן ו	_	-	l G	۷□	S□	٦	, n		IVI	IN.		l Q	n	VV
LVQ22S-V07	25.5	46	31.5	58	33.6	81	12	89	92	21.8	37	5	7	15	31.3	21	25.3	64
LVQ32S-V11	28.5	57	34.5	69	45.4	99	16.5	106	112	32	50	6	7	20	37.2	25	31.2	82
LVQ42S-V13	28.5	57	34.5	69	45.4	104.5	22	120	126	37.5	55.5	6	7	20	37.2	25	31.2	87.5
LVQ51S-V19	42	84	48	96	75	145	25	164	168	50.2	78.2	10	7	20	50.8	38.5	45	128
LVQ62S-V25	42	84	48	96	75	154.5	32	177	_	60	88	10	7	20	50.8	38.5	45	137.5

LVQS Series

Dimensions

With by-pass Double acting valve

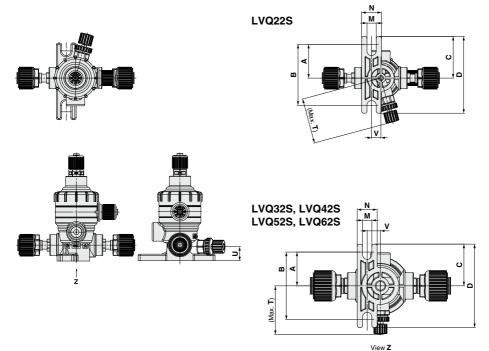


Di	Dimensions (Double Acting Valve) (mm)											
	Model	Α	В	С	D	M	N	Т	U	٧		
	LVQ22S-V07-2	25.5	46	31.5	58	7	15	34.3	10.6	7		
	LVQ32S-V11-2	25.5	51	31.5	63	7	15	36.9	16.5	10		
	LVQ42S-V13-2	25.5	51	31.5	63	7	15	37.9	22	10		
	LVQ52S-V19-2	38	76	44	88	7	20	64	25	17		
	LV062S-V25-2	38	76	44	88	7	20	66	32	17		

Manually Operated Insert Bushing, Integrated Fitting Type Hyper Fitting

LVQH Series



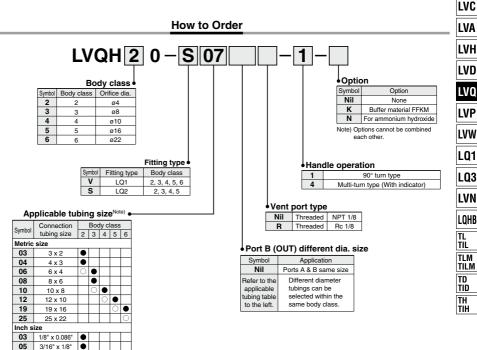

○ Basic size ◆ With reducer

Note) Refer to page 846 for details of the applicable tubing sizes.

1/4" x 5/32"

3/8" x 1/4"

1/2" x 3/8"

3/4" x 5/8" 1" x 7/8"

07

11

13

19

Variations

		Model	LVQH20	LVQH30	LVQH40	LVQH50	LVQH60
	Tubing	Orifice diameter	ø4	ø8	ø10	ø16	ø22
	/ /,		6	10	12	19	25
Туре	\ '	Symbol	1/4	3/8	1/2	3/4	1
90° turn type		E A	0	0	0	0	0
Multi-turn type		¶ [*] B⊢⊢A	0	0	0	0	0



Standard Specifications

Mod	iel	LVQH20	LVQH30	LVQH40	LVQH50	LVQH60	
Tubing O.D. Note 1	Metric	6	10	12	19	25	
Tubing O.D.	Inch	1/4	3/8	1/2	3/4	1	
Fitting type			LQ1 c	r LQ2		LQ1	
Orifice diamete	er	ø4	ø8	ø10	ø16	ø22	
Flow rate	Kv	0.3	1.1	1.6	4.2	6.8	
characteristics	Cv	0.35	1.3	1.9	5	8	
Withstand pres	ssure (MPa)			1			
Fluid pressure	<a→b></a→b>	-98 kPa to 0.5 MPa Note 2) -98 kPa to 0				0.4 MPa Note 2)	
Back pressure	(MPa)	0.3 or less 0.2 d				r less	
Valve leakage	(cm³/min)		0 (Wit	h water pre	ssure)		
Fluid temperat	ure (°C)	0 to 100					
Ambient tempe	erature (°C)			0 to 60			
Waight (kg)	LVQH□0-1	0.12	0.27	0.31	1.10	1.16	
Weight (kg)	LVQH□0-4	0.11	0.20	0.22	0.67	0.87	

Note 1) Refer to page 846 for details of the applicable tubing sizes.

Note 2) This product cannot be used for vacuum retention. Also, connecting the vacuum to the B port may reduce the life of the product.

▲ Specific Product Precautions


Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 845 and 846 for Air Operated Chemical Liquid Valve Precautions.

Piping

⚠ Caution

1. Connect tubing by special tools.

For information on tubing connection and special tools, please see the pamphlet "High Purity Fluoropolymer Fittings Hyper Fitting LQ1/2 Series Work Procedure Instructions" (M-E05-1). (The pamphlet can be downloaded from the SMC home page.)

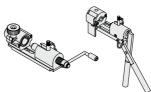


2. Tighten the nut until it touches the end surface of the body, and then tighten it an additional 1/8 turn. If the nut won't turn any further, then it means a sufficient tightening has occurred. Refer to the proper tightening torques shown below.

Tightening Torque for Piping

B 1 1	Torque (N·m)				
Body class	LQ1	LQ2			
2	0.3 to 0.4	1.5 to 2.0			
3	0.8 to 1.0	3.0 to 3.5			
4	1.0 to 1.2	7.5 to 9.0			
5	2.5 to 3.0	11.0 to 13.0			
6	5.5 to 6.0	-			

Construction


90° turn type

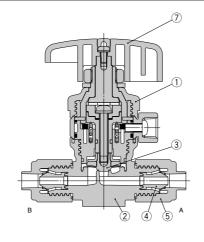



With reducer

Multi-turn type (With indicator)

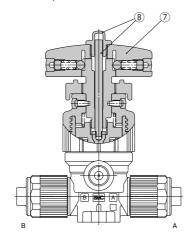

Component Parts

No.	Description	Material
1	Actuator	PVDF
2	Body	PFA
3	Diaphragm	PTFE
4	Insert bushing	PFA
5	Nut	PFA
6	Collar	PFA
7	Handle	PVDF
8	Indicator/Cover	PP

LVC

LVA

LVH

LVD

LVP

LVW

LQ1

LQ3

LVN LQHB

TL TIL

TLM TILM TD TID

TH Tih

LVQH Series

Dimensions


90° turn type


Dimensions (mm) Н Model Α В С D F G V□ S□ LVQH20-5 □-1 25.5 77 46 31.5 58 79 12 70 LVQH30-ÿ□-1 28.5 57 34.5 69 103 16.5 83 95 LVQH40-∛□-1 28.5 34.5 108 57 69 22 95 109 LVQH50-°□-1 42 48 96 165 84 25 130 141 LVQH60-V□-1* 42 84 48 96 175 32 150

Model	J	к	L	М	N	Q	Υ
LVQH20-∜ □-1	21.8	37	5	7	15	21	55
LVQH30- [∨] s □-1	32	50	6	7	20	25	80
LVQH40-° □-1	37.5	55.5	6	7	20	25	80
LVQH50- [∨] _s □-1	50.2	78.2	10	7	20	38.5	110
LVQH60-V□-1*	60	88	10	7	20	38.5	110

^{*} The LVQ60 is available only with "V".

Locking (Valve closed) Non-locking (Valve open)

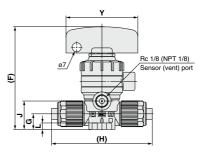

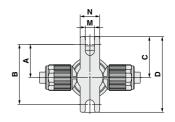


Multi-turn type (With indicator)

Dimensions		(mm)
Model	S	Υ
LVQH20- ^v □-4	93.6	50
LVQH30-∛ □-4	111.2	50
LVQH40- [∨] s □-4	116.7	50
LVQH50- ^v □-4	170.7	71
LVQH60-V□-4*	180.2	71

ith "V".

* The LVQ60 is available only wit
* Drawings show the LVQ□0-S.
798

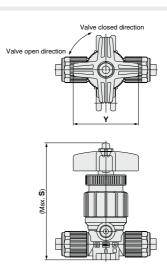


^{*} Drawings show the LVQ□0-S.

Manually Operated Insert Bushing, Integrated Fitting Type Space Saving/Space Saving Connection

LVQHS Series



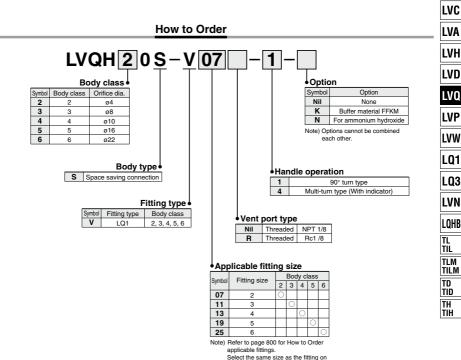

Variations

	Model	LVQH20S	LVQH30S	LVQH40S	LVQH50S	LVQH60S
	Orifice diameter	ø4	ø8	ø10	ø16	ø22
Type	mbol fitting size	2	3	4	5	6
90° turn type	B _{II} A	0	0	0	0	0
Multi-turn type	# B	0	0	0	0	0

the valve.

How to Order Space Saving Fittings


• Applicable tubing size

Size	No.	Applicable tubing size (mm)	Reducing
2	1	6 x 4	0
2	2	4 x 3	•
3	1	10 x 8	0
3	2	8 x 6	•
3	3	6 x 4	•
4	1	12 x 10	0
4	2	10 x 8	•
5	1	19 x 16	0
5	2	12 x 10	•
6	1	25 x 22	0
6	2	19 x 16	•

Size	Symbol	Applaicable tubing size (inch)	Reducing
2	Α	1/4" x 5/32"	0
2	В	3/16" x 1/8"	•
2	С	1/8" x 0.086"	•
3	Α	3/8" x 1/4"	0
3	В	1/4" x 5/32"	•
4	Α	1/2" x 3/8"	0
4	В	3/8" x 1/4"	•
5	Α	3/4" x 5/8"	0
5	В	1/2" x 3/8"	•
6	Α	1" x 7/8"	
6	В	3/4" x 5/8"	•

○ Basic size With reducer

Note 1) Select the same size as the fitting on the valve.

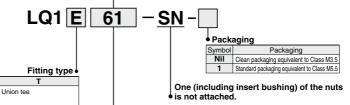

Applicable tubing size

Size	No.	Applicable tubing size (mm)	Reducing
2	1	6 x 4	
2	2	4 x 3	•
3	1	10 x 8	0
3	2	8 x 6	•
3	3	6 x 4	•
4	1	12 x 10	
4	2	10 x 8	
5	1	19 x 16	
5	2	12 x 10	•


Size	Symbol	Applicable tubing size (mm)	Reducing
2	Α	1/4" x 5/32"	0
2	В	3/16" x 1/8"	•
2	С	1/8" x 0.086"	•
3	Α	3/8" x 1/4"	0
3	В	1/4" x 5/32"	•
4	Α	1/2" x 3/8"	0
4	В	3/8" x 1/4"	•
5	Α	3/4" x 5/8"	0
5	В	1/2" x 3/8"	•

Note 1) Select the same size as the fitting on the valve.

Piping Example

Panel mount union

Union elbow

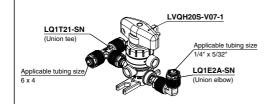

Union

Ordering Example

LVQH20S-V07-1 1
LQ1T21-SN (Union tee) 1
LQ1E2A-SN (Union elbow) 1

Note) For shipment, the valve and fittings are individually packaged and dispatched together in 1 box.

Standard Specifications



Model		LVQH20S	LVQH30S	LVQH40S	LVQH50S	LVQH60S	
Connection fitting size		2	3	4	5	6	
Fitting type		LQ1					
Orifice diameter		ø4	ø8	ø10	ø16	ø22	
Flow rate characteristics	Kv		0.3	1.1	1.6	4.2	6.8
	Cv		0.35	1.3	1.9	5	8
Withstand pressure (MPa)		1					
Fluid pressure <a→b></a→b>		-98 kPa to 0.5 MPa Note) -98 kPa to 0.4 MPa			0.4 MPa Note)		
Back pressure (MPa)		0.3 or less 0.2 or less			r less		
Valve leakage (cm³/min)		0 (With water pressure)					
Fluid temperature (°C)		0 to 100					
Ambient temperature (°C)		0 to 60					
Weiaht (ka) -	LVQH□()S-1	0.14	0.30	0.33	1.14	1.18
	LVQH□(S-4	0.13	0.23	0.24	0.71	0.89

Note) This product cannot be used for vacuum retention. Also, connecting the vacuum to the B port may reduce the life of the product.

▲Specific Product Precautions

Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 845 and 846 for Air Operated Chemical Liquid Valve Precautions.

Piping

∧ Caution

- 1. Take extra care with the insert bushing when connecting the fittings.
- 2. Tighten the nut until it touches the end surface of the body, and then tighten it an additional 1/8 turn. If the nut won't turn any further, then it means a sufficient tightening has occurred. Refer to the proper tightening torques shown below.

Fightening Torque for Pipin

rightening forque for Pipin			
D 1 1	Torque (N·m)		
Body class	LQ1		
2	0.3 to 0.4		
3	0.8 to 1.0		
4	1.0 to 1.2		
5	2.5 to 3.0		
6	5.5 to 6.0		

LVC

LVA

LVD

LVP

LVW LQ1

LQ3

LVN

TL TIL

TILM TD TID


TH TIH

801 ©


LVQHS Series

Construction

90° turn type

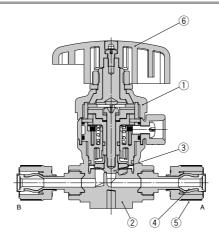

Multi-turn type (With indicator)

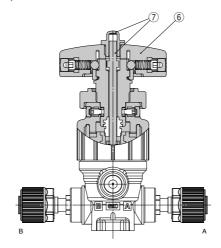

Component Parts

No.	Description	Material
1	Actuator	PVDF
2	Body	PFA
3	Diaphragm	PTFE
4	Insert bushing	PFA
5	Nut	PFA
6	Handle	PVDF
7	Indicator/Cover	PP

Manually Operated Insert Bushing, Integrated Fitting Type LVQHS Series


Dimensions

90° turn type

Dimensions							(mn
Model	Α	В	С	D	F	G	Н
LVQH20S-V□-1	25.5	46	31.5	58	79	12	89
LVQH30S-V□-1	28.5	57	34.5	69	103	16.5	106
LVQH40S-V□-1	28.5	57	34.5	69	108	22	120
LVQH50S-V□-1	42	84	48	96	165	25	164
LVQH60S-V□-1	42	84	48	96	175	32	177

Model	J	L	M	N	Q	Υ
LVQH20S-V□-1	21.8	5	7	15	21	55
LVQH30S-V□-1	32	6	7	20	25	80
LVQH40S-V□-1	37.5	6	7	20	25	80
LVQH50S-V□-1	50.2	10	7	20	38.5	110
LVQH60S-V□-1	60	10	7	20	38.5	110


Drawings show the LVQ□0-S.

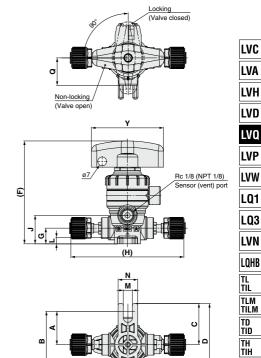

Multi-turn type (With indicator)

Dimensions (mm)					
Model	S	Υ			
LVQH20S-V□-4	93.6	50			
LVQH30S-V□-4	111.2	50			
LVQH40S-V□-4	116.7	50			
LVQH50S-V□-4	170.7	71			
LVQH60S-V□-4	180.2	71			

^{*} Drawings show the LVQ□0-S.

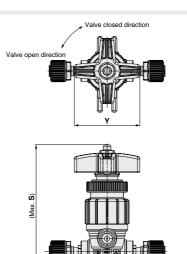

LVQ Series **Fittings and Special Tools**

Fittings

How to Change Tubing Sizes

The tubing size can be changed within the same body class (body size) by replacing the nut and insert bushing.

						Conn	ection	tubing	g O.D.					
Body class			M	etric si	ze					lr	nch siz	:e		
Ciass	4	6	8	10	12	19	25	1/8	3/16	1/4	3/8	1/2	3/4	1
2	•	0	_	_	_	_	_	•	•	0	_	_	_	_
3	_	•	•	0	_	_	_	_	_	•	0	_	_	_
4	_	_	_	•	0	_	_	_	_	_	•	0	_	_
5	_	_	_	_	•	0	_	_	_	_	_	•	0	_
6	_	_	_	_	_	•	0	_	_	_	_	_	•	0

Changing the tubing size

Example) Changing the tubing from an O.D. 1/4" to O.D. 1/8" within the body class 2.

Prepare an insert bushing and nut for 1/8" O.D. tubing (LQ-2U03) and change the tubing size.


(Refer to How to Order Fitting Parts.)




	Component parts							
	Nut	Insert	Collar (Insert assembly)					
O Basic size	Yes	Yes	No					
Reducer type	Yes	Yes	Yes					

1. Connect tubing by special tools.

For information on tubing connection and special tools, please see the pamphlet "High Purity Fluoropolymer Fittings Hyper Fitting LQ1/2 Series Work Procedure Instructions" (M-E05-1). (The pamphlet can be downloaded from the SMC home page.)

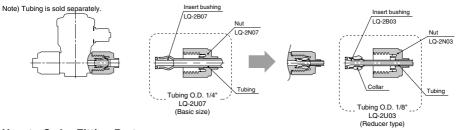

How to Order Fitting Parts

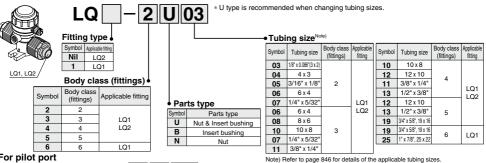

For pilot port

LQ1 - 1 U 03

	Body class (fittings)							
	Symbol	Body class (fittings)	Applicable fitting					
رُ	1	1	LQ1					

Parts type

Symbol	Parts type				
U	Nut & Insert bushing				
В	Insert bushing				
N	Nut				

• Tubing sizeNote 1) Note 2)

Symbol	Tubing size	Body class (fittings)
03	1/8" x 0.086"(3 x 2)	-
04	4 x 3	'

Note 1) Cannot change to tubing with different diameter

Note 2) Refer to page 846 for details of the applicable tubing sizes.






Air Operated Flare, Integrated Fitting Type Hyper Fitting

LVQ-Z Series



How to Order

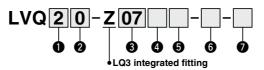

Body class

Body class	Orifice dia.
2	ø4
3	ø8
4	ø10
5	ø16
6	ø22
	2 3 4

2 Valve type

0	N.C.
1	N.O.
2	Double acting

Note) For valve type combinations, refer to variations on the next page.

4 Pilot port type


Nil	With LQ3 fitting	Connection tubing size 1/8" x 0.086" (3 x 2) Note)			
M	With LQ3 fitting	Connection tubing size 4 x 3 Note)			
R	Threaded	Rc1/8			
N	Threaded	NPT1/8			

Note) Refer to page 846 for details of the applicable tubing sizes.

6 Pilot port direction

Direction
0
2
8
4
9
6
0
8

Pilot port piping direction

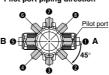

 Specify the piping direction by part number when ordering the product. Do not change the pilot port direction. (Refer to Precautions on page 846.)

3 Applicable tubing size Note)

	pp.ioubic tubiii					
Symbol	Connection tubing		Boo	dy cl	ass	
Syllibol	size	2	3	4	5	6
Metric	c size					
03	3 x 2	0				
04	4 x 3	0				
06	6 x 4	0				
08	8 x 6		0			
10	10 x 8		0			
12	12 x 10			0		
19	19 x 16				0	
25	25 x 22					0
Inch s	size					
03	1/8" x 0.086"	0				
07	1/4" x 5/32"	0				
11	3/8" x 1/4"		0			
13	1/2" x 3/8"			0		
19	3/4" x 5/8"				0	
25	1" x 7/8"					0

Note) Refer to page 846 for details of the applicable tubing sizes.

Air Operated Flare, Integrated Fitting Type LVQ-Z Series

(A) Option 1

Op Op	uon i
Nil	None
1	With flow rate adjustment
2	With by-pass
3	With flow rate adjustment & by-pass
4	With indicator
5	High back pressure (0.42 MPa)
6	High back pressure with flow rate adjustment
7	High back pressure with by-pass
8	High back pressure with flow rate adjustment & by-pass
9	High back pressure with indicator
24	With indicator & by-pass

Note) Refer to variations in the table below for valve type and option 1 combinations. Options in the same table can not be combined each other. Option 2

-		_										
0					Nete							
Symbol	Nil	1	2	3	4	5	6	7	8	9	24	Note
Nil	0	0	0	0	0	0	0	0	0	0	0	_
J	0	0	_	_	_	_	_	_	_	_	_	For high temperature
K	0	0	0	0	0	0	0	0	0	0	0	Buffer material FFKN
N	0	0	0	0	0	0	0	0	0	0	0	For ammonium hydroxide
Р	0	_	-	_	0	0	_	_	-	_	_	High flow type LVQ6□ only

Note 1) Options 2 in the same table cannot be combined each other.

Note 2) Only option 1 (with flow rate adjustment) is available for use in high-temperature environments. However, it cannot be used in combination with any of the high back pressure specifications.

Variations

/ariations		Model	LVQ20	LVQ30	LVQ40	LVQ50	LVQ60
		rifice diameter					
	Tubing O.D	mice diameter	ø4	ø8	ø10	ø16	ø22
			6	10	12	19	25
- Гуре	Symbol	ype Inch	1/4	3/8	1/2	3/4	1
Basic	∳PA ∳PB ∲PA	N.C.	0	0	0	0	0
N.C. N.O. Double	B B B B B B B B B B B B B B B B B B B	N.O.	0	0	0	0	0
acting acting	N.C. N.O. Double acting	Double acting	0	0	0	0	0
Vith flow rate odjustment	∳PA B## A W.C.	N.C.	0	0	0	0	0
Vith Double acting by-pass	∳PA ∳PA B⊞A B⊞A	N.C.	0	0	0	0	0
N.C.	Ter Ter ₹ APB N.C. Double acting	Double acting	0	0	0	0	0
Vith flow rate djustment by-pass	∳PA B∰A N.C.	N.C.	0	0	0	0	0
Vith indicator	v PA B ↓ A N.C.	N.C.	0	0	0	0	0
ligh back ressure	∳PA B A N.C.	N.C.	0	0	0	0	0
Vith indicator & by-pass	∳PA B A N.C.	N.C.	0	0	0	0	0

LVC

LVA

LVH

LVQ

LVP

LVW

LQ1

LQ3

LVN

LQHB

TL TIL TLM TILM

TD TID TH TIH



Standard Specifications

Mod	del	LVQ20	LVQ30	LVQ40	LVQ50	LVQ60				
T. L. C. D. Note :	Metric	6	10	12	19	25				
Tubing O.D.Note 1	Inch	1/4	3/8	1/2	3/4	1				
Orifice diamet	er	ø4	ø8	ø10	ø16	ø22				
Flow rate	Kv	0.3	1.1	1.6	4.2	6.8 (8.1) Note 2)				
characteristics	Cv	0.35	1.3	1.9	5	8 (9.5) Note 2)				
Withstand pre	ssure (MPa)		•	1	•	•				
Operating pressure	Standard	–98 kF	a to 0.5 MP	-98 kPa to 0.4 MPa Note 3)						
<a→b flow=""></a→b>	High temperature	-98 kPa to 0.3 MPa Note 3)								
	Standard		0.3 or less	0.2 o	r less					
Back pressure (MPa)	High back pressure	0.42 or less								
(4)	High temperature		0.3 or less	0.2 or less						
Valve leakage	(cm³/min)	0 (With water pressure)								
Pilot air press	ure (MPa)	0.3 to 0.5 (High back pressure: 0.45 to 0.55)								
Pilot port size		1/8" (ø3), Rc 1/8, NPT 1/8								
Fluid	Standard			0 to 100						
temperature (°C)	High temperature	0 to 170								
Ambient temp	erature (°C)	0 to 60								
Weight (kg)		0.08	0.18	0.22	0.72	0.87				

Note 1) Refer to page 846 for details of the applicable tubing sizes.

Note 2) (): High flow type

Note 3) This product cannot be used for vacuum retention. Also, connecting the vacuum to the B port may reduce the life of the product.

⚠ Specific Product Precautions

Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 845 and 846 for Air Operated Chemical Liquid Valve Precautions.

Piping

⚠ Caution

1. Connect tubing by special tools.

For information on tubing fittings and special tools, please see the pamphlet "High Purity Fluoropolymer Fittings Hyper Fitting/Flare Type LQ3 Series Fitting Procedure" (M-E06-4). (The pamphlet can be downloaded from the SMC home page.)



Tighten the nut until it touches the end surface of the body, and then tighten it an additional 1/8 turn. If the nut won't turn any further, then it means a sufficient tightening has occurred. Refer to the proper tightening torques shown below.

Tightening Torque for Piping

Body class	Torque (N·m)
2	1.6 to 1.8
3	3.2 to 3.5
4	5.0 to 5.3
5	10.0 to 10.5
6	22.5 to 23.0




Air Operated Flare, Integrated Fitting Type LVQ-Z Series

Construction

Basic N.C.

N.O.


Double acting

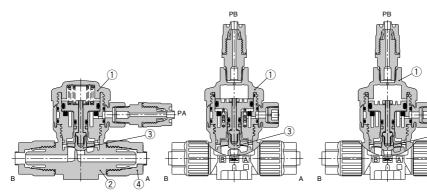


With flow rate adjustment

With by-pass

With indicator

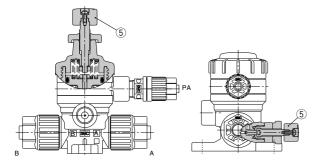

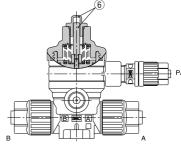

Component Parts


No.	Description	Material
1	Actuator	PVDF
2	Body	PFA
3	Diaphragm	PTFE
4	Nut	PFA
5	Flow rate adjuster	PVDF
6	Indicator/Cover	PP

LVC
LVA
LVH
LVD
LVQ
LVP
LVW
LQ1
LQ3
LVN

TL TIL TLM TILM TD TID TH TIH

LVQ-Z Series


Dimensions

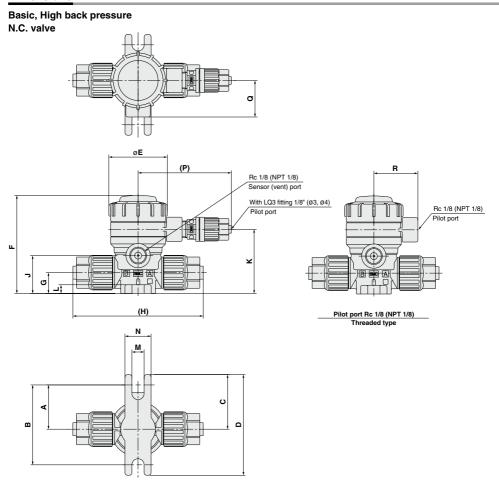


LVQ 0-Z	Di	mens	ions	(N.C.	Valve	e)										(mm)
Model	Α	В	С	D	E	F	G	Н	J	K	L	M	N	P	Q	R
LVQ20-Z□□	25.5	46	31.5	58	33.6	56.5	12	75	21.8	37	5	7	15	53.5	21	25.3
LVQ30-Z□□	28.5	57	34.5	69	45.4	77	16.5	103	32	50	6	7	20	59.5	25	31.2
LVQ40-Z□□	28.5	57	34.5	69	45.4	82.5	22	114	37.5	55.5	6	7	20	59.5	25	31.2
LVQ50-Z□□	42	84	48	96	75	127	25	150	50.2	78.2	10	7	20	73	38.5	45
LVQ60-Z□□	42	84	48	96	75	136.8	32	167	60	88	10	7	20	73	38.5	45


With flow rate adjustment N.C. valve


(mm)
S
83
113.5
119
171.5
182.5

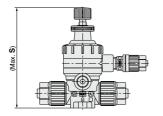


With by-pass N.C. valve

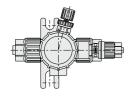

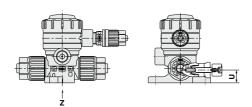

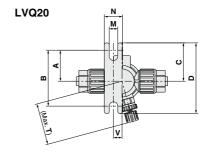

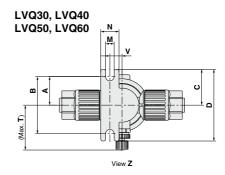

Dimensions									(mm)
Model	Α	В	С	D	M	N	Т	U	٧
LVQ20-Z□□-2	25.5	46	31.5	58	7	15	34.3	10.6	7
LVQ30-Z□□-2	25.5	51	31.5	63	7	15	36.9	16.5	10
LVQ40-Z□□-2	25.5	51	31.5	63	7	15	37.9	22	10
LVQ50-Z□□-2	38	76	44	88	7	20	64	25	17
LVQ60-Z□□-2	38	76	44	88	7	20	66	32	17

LVC

LVA

LVD

LVQ

LVP

LQ1

LQ3 LVN

TL TIL TLM TILM TD TID


TH TIH


LVQ-Z Series


Dimensions


With flow rate adjustment & by-pass

N.C. valve

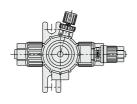

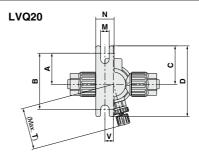

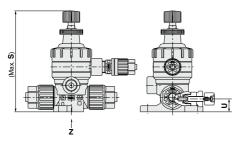


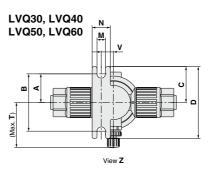

Dimensions										(mm)
Model	Α	В	С	D	M	N	S	Т	U	٧
LVQ20-Z□□-3	25.5	46	31.5	58	7	15	83	34.3	10.6	7
LVQ30-Z□□-3	25.5	51	31.5	63	7	15	113.5	36.9	16.5	10
LVQ40-Z□□-3	25.5	51	31.5	63	7	15	119	37.9	22	10
LVQ50-Z□□-3	38	76	44	88	7	20	171.5	64	25	17
LVQ60-Z□□-3	38	76	44	88	7	20	182.5	66	32	17

With indicator N.C. valve


Dimensions	(mm)
Model	S
LVQ20-Z□□-4	70.5
LVQ30-Z□□-4	88.5
LVQ40-Z□□-4	94
LVQ50-Z□□-4	134.5
LVQ60-Z□□-4	144

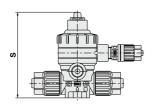



Air Operated Flare, Integrated Fitting Type LVQ-Z Series


Basic

N.O. valve

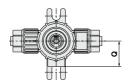


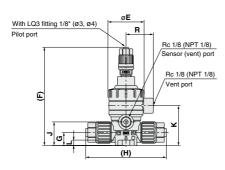

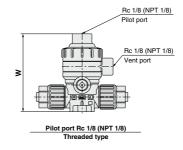

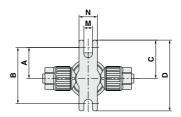

Double acting valve

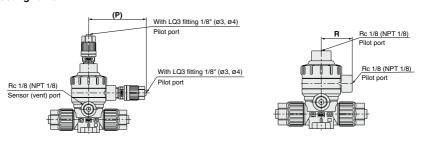

LVQ 12-Z	LVQ□¹-Z□□ Dimensions (N.O. Valve, Double Acting Valve)														(mm)		
Model	Α	В	В	D	E	F	G	Н	J	K	L	M	N	Р	Q	R	W
LVQ2¹-Z□□	25.5	46	31.5	58	33.6	89.5	12	75	21.8	37	5	7	15	53.5	21	25.3	64
LVQ3 ¹ ₂ -Z□□	28.5	57	34.5	69	45.4	107.5	16.5	103	32	50	6	7	20	59.5	25	31.2	82
LVQ4½-Z□□	28.5	57	34.5	69	45.4	113	22	114	37.5	55.5	6	7	20	59.5	25	31.2	87.5
LVQ5¹₂-Z□□	42	84	48	96	75	153.2	25	150	50.2	78.2	10	7	20	73	38.5	45	128
LVQ6¹-Z□□	42	84	48	96	75	163	32	167	60	88	10	7	20	73	38.5	45	137.5

LVC

LVA

LVH

LVD

LVQ

LVW

LQ1

LQ3

LVN


TL TIL TLM TILM


TD TID TH TIH


LVQ-Z Series


Dimensions

With by-pass Double acting valve

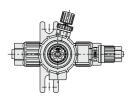

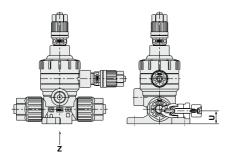

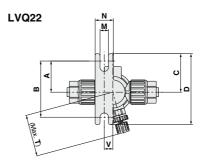

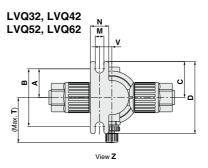

Dimensions	(Double	Actina	Valve)	

Dimensions (L	Dimensions (Double Acting valve)												
Model	Α	В	С	D	M	N	Т	U	٧				
LVQ22-Z□□-2	25.5	46	31.5	58	7	15	34.3	10.6	7				
LVQ32-Z□□-2	25.5	51	31.5	63	7	15	36.9	16.5	10				
LVQ42-Z□□-2	25.5	51	31.5	63	7	15	37.9	22	10				
LVQ52-Z□□-2	38	76	44	88	7	20	64	25	17				
LVQ62-Z□□-2	38	76	44	88	7	20	66	32	17				




Air Operated Flare, Integrated Fitting Type Space Saving/Space Saving Connection

LVQS-Z Series



How to Order

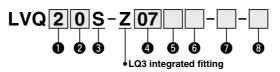

Body class

Symbol	Body class	Orifice dia.
2	2	ø4
3	3	ø8
4	4	ø10
5	5	ø16
6	6	ø22

Valve type

	. 71.
0	N.C.
1	N.O.
2	Double acting

Note) For valve type combinations, refer to variations on the next page.

3 Body type

S		Space saving connection

4 Applicable fitting size

Cumbal	Fitting size	Body class								
Symbol	Fitting size	2	3	4	5	6				
07	2	0								
11	3		0							
13	4			0						
19	5				0					
25	6					0				

Note) Refer to page 814 for How to Order fitting parts. Select a tube with the same size as the valve side fitting.

6 Pilot port type


Nil	With LQ3 fitting	Connection tubing size 1/8" x 0.086" (3 x 2) Note)					
М	With LQ3 fitting	Connection tubing size 4 x 3 Note)					
R	Threaded	Rc1/8					
N	Threaded	NPT1/8					

Note) Refer to page 846 for details of the applicable tubing sizes.

6 Pilot port direction

Symbol	Direction
Nil	0
P2	0
P3	6
P4	4
P5	9
P6	6
P7	0
P8	8

Pilot port piping direction

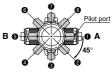

 Specify the piping direction by part number when ordering the product. Do not change the pilot port direction. (Refer to Precautions on page 846.)

Air Operated Flare, Integrated Fitting Type LVQS-Z Series

Ontion 1

Nil	None
1	With flow rate adjustment
2	With by-pass
3	With flow rate adjustment & by-pass
4	With indicator
5	High back pressure (0.42 MPa)
6	High back pressure with flow rate adjustment
7	High back pressure with by-pass
8	High back pressure with flow rate adjustment & by-pass
9	High back pressure with indicator
24	With indicator & by-pass

Note) Refer to variations in the table below for valve type and option 1 combinations. Options in the same table can not be combined each other. Option 2

0				Ap	plica	ble	optio	n				Nete
Symbol	Nil	1	2	3	4	5	6	7	8	9	24	Note
Nil	0	0	0	0	0	0	0	0	0	0	0	_
J	0	0	_	_	_	_	_	_	_	_	_	For high temperature
K	0	0	0	0	0	0	0	0	0	0	0	Buffer material FFKN
N	0	0	0	0	0	0	0	0	0	0	0	For ammonium hydroxide
Р	0	-	-	_	0	0	_	_	_	_	_	High flow type LVQ6□ only

Note 1) Options 2 in the same table cannot be combined each other.

Note 2) Only option 1 (with flow rate adjustment) is available for use in high-temperature environments. However, it cannot be used in combination with any of the high back pressure specifications.

Variations

		Model	LVQ20S	LVQ30S	LVQ40S	LVQ50S	LVQ60S
	Copper	fice diameter	ø4	ø8	ø10	ø16	ø22
Туре	Symbol Valve typ	on fitting size	2	3	4	5	6
Basic N.C.	<u>∳P</u> A <u>∳P</u> B <u>∳P</u> A	N.C.	0	0	0	0	0
N.O. Double	B A B A B A	N.O.	0	0	0	0	0
acting		Double acting	0	0	0	0	0
With flow rate adjustment	∳PA B#14 ₩ N.C.	N.C.	0	0	0	0	0
With by-pass Double acting	∳PA ∳PA B⊟A B⊟A	N.C.	0	0	0	0	0
N.C.	B A B A	Double acting	0	0	0	0	0
With flow rate adjustment & by-pass	∳PA B ★ A N.C.	N.C.	0	0	0	0	0
With indicator	∳PA BHHA N.C.	N.C.	0	0	0	0	0
High back pressure	ÿPA B III A N.C.	N.C.	0	0	0	0	0
With indicator & by-pass	∳PA B A N.C.	N.C.	0	0	0	0	0

LVC

LVA

LVH

LVO

LVP

LVW

LQ1


LQ3


LVN

LQHB

TL TIL TLM TILM TD

TH TIH

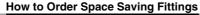

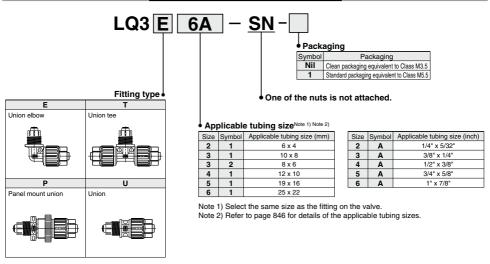

Piping Example



Standard Specifications



Mod	lel	LVQ20S	LVQ30S	LVQ40S	LVQ50S	LVQ60S				
Connection fit	ting size	2	3	4	5	6				
Orifice diamete	er	ø4	ø8	ø10	ø16	ø22				
Flow rate	te Kv		0.3 1.1		4.2	6.8 (8.1) Note 1)				
characteristics	Cv	0.35	1.3	1.9	5	8 (9.5) Note 1)				
Withstand pres	ssure (MPa)			1						
Operating pressure	Standard	–98 kF	a to 0.5 MP	a Note 3)	-98 kPa to 0	.4 MPa Note 3)				
<a→b flow=""></a→b>	High temperature		–98 kF	a to 0.3 MP	a Note 3)					
	Standard	0.3 or less 0.2 or less								
Back pressure (MPa)	High back pressure		0.42 or less							
(,	High temperature		0.3 or less		0.2 o	r less				
Valve leakage	(cm³/min)		0 (Wit	th water pre	ssure)					
Pilot air pressu	ure (MPa)	0.3	to 0.5 (High	back pressu	re: 0.45 to 0).55)				
Pilot port size	lote 2)		1/8" (ø3)	, ø4, Rc 1/8,	NPT 1/8					
Fluid	Standard			0 to 100						
temperature (°C)	High temperature	0 to 170								
Ambient tempe	erature (°C)		0 to 60							
Weight (kg)		0.085 0.175 0.223 0.725 0.835								
Note 1) (): High fl	low type					•				

Note 1) (): High flow type

Note 2) Refer to page 846 for details of the applicable tubing sizes.

Note 3) This product cannot be used for vacuum retention. Also, connecting the vacuum to the B port may reduce the life of the product.

▲ Specific Product Precautions

Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 845 and 846 for Air Operated Chemical Liquid Valve Precautions.

Piping

⚠ Caution

 Tighten the nut until it touches the end surface of the body, and then tighten it an additional 1/8 turn. If the nut won't turn any further, then it means a sufficient tightening has occurred. Refer to the proper tightening torques shown below.

Tightening Torque for Piping

	ordeo ioi i ibiiig
Body class	Torque (N·m)
2	1.6 to 1.8
3	3.2 to 3.5
4	5.0 to 5.3
5	10.0 to 10.5
6	22.5 to 23.0

LVC

LVA

LVD

LVQ

LVW LQ1

LQ3

LQHB TL TIL

TLM TILM

TH.


TIH

LVQS-Z Series

Construction

Basic


N.C. N.O. Double acting

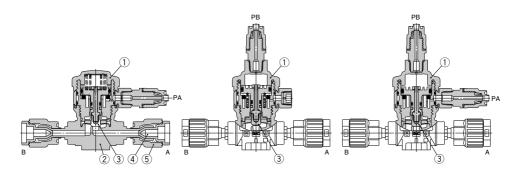



With flow rate adjustment

With by-pass

With indicator

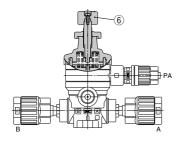

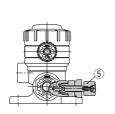

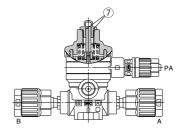

Component Parts


No.	Description	Material
1	Actuator	PVDF
2	Body	PFA
3	Diaphragm	PTFE
4	Plug	PP
5	Nut	PFA
6	Flow rate adjuster	PVDF
7	Indicator/Cover	PP


Air Operated Flare, Integrated Fitting Type LVQS-Z Series


Dimensions

Basic, High back pressure

N.C. valve

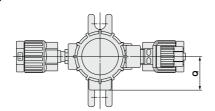

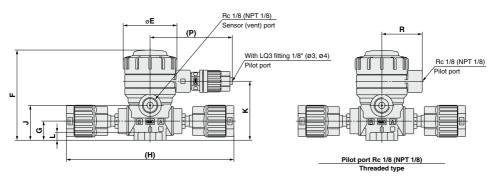

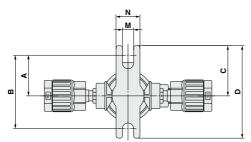

LVQ□0S-Z□	Dim	ensi	ons (N	I.C. V	alve)											(mm)
Model	Α	В	С	D	E	F	G	Н	J	K	L	М	N	Р	Q	R
LVQ20S-Z□	25.5	46	31.5	58	33.6	56.5	12	105	21.8	37	5	7	15	53.5	21	25.3
LVQ30S-Z□	28.5	57	34.5	69	45.4	77	16.5	137	32	50	6	7	20	59.5	25	31.2
LVQ40S-Z□	28.5	57	34.5	69	45.4	82.5	22	151	37.5	55.5	6	7	20	59.5	25	31.2
LVQ50S-Z□	42	84	48	96	75	127	25	202	50.2	78.2	10	7	20	73	38.5	45
LVQ60S-Z□	42	84	48	96	75	136.8	32	236	60	88	10	7	20	73	38.5	45

LVC

LVA

LVD

LVQ

LVP

LVW LQ1

LQ3

LVN LQHB

TL TIL TLM TILM


TD TID TH TIH

LVQS-Z Series


Dimensions


With flow rate adjustment, High back pressure with flow rate adjustment N.C. valve


Dimensions	(mm)				
Model	S				
LVQ20S-Z□-1	83				
LVQ30S-Z□-1	113.5				
LVQ40S-Z□-1	119				
LVQ50S-Z□-1	171.5				
I VQ60S-7□-1	182 5				

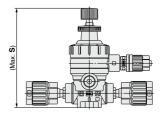


With by-pass, High back pressure with by-pass N.C. valve

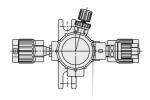

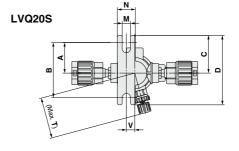

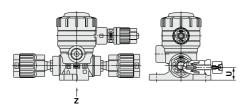

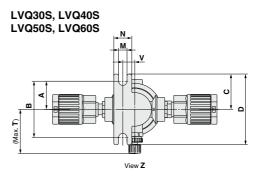



Dimensions									(mm)
Model	Α	В	С	D	M	N	Т	U	٧
LVQ20S-Z□-2	25.5	46	31.5	58	7	15	34.3	10.6	7
LVQ30S-Z□-2	25.5	51	31.5	63	7	15	36.9	16.5	10
LVQ40S-Z□-2	25.5	51	31.5	63	7	15	37.9	22	10
LVQ50S-Z□-2	38	76	44	88	7	20	64	25	17
LVQ60S-Z□-2	38	76	44	88	7	20	66	32	17

With flow rate adjustment & by-pass,

High back pressure with flow rate adjustment & by-pass

N.C. valve

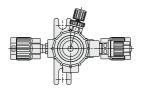

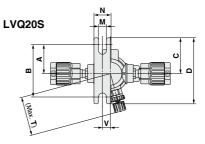


LVC LVA LVH LVD LVQ LVP


LQ1

LQ3 LVN LQHB

TL TLM TILM TD TID TH TIH

S T

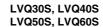


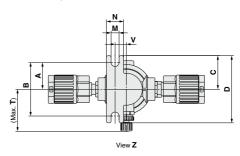

Dimensions										(mm)
Model	Α	В	С	D	M	N	S	Т	U	٧
LVQ20S-Z□-3	25.5	46	31.5	58	7	15	83	34.3	10.6	7
LVQ30S-Z□-3	25.5	51	31.5	63	7	15	113.5	36.9	16.5	10
LVQ40S-Z□-3	25.5	51	31.5	63	7	15	119	37.9	22	10
LVQ50S-Z□-3	38	76	44	88	7	20	171.5	64	25	17
LVQ60S-Z□-3	38	76	44	88	7	20	182.5	66	32	17

With indicator, High back pressure with indicator N.C. valve

Dimensions	(mm)
Model	S
LVQ20S-Z□-4	70.5
LVQ30S-Z□-4	88.5
LVQ40S-Z□-4	94
LVQ50S-Z□-4	134.5
LVQ60S-Z□-4	144

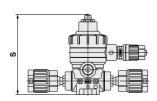





LVQS-Z Series


Dimensions

Basic N.O. valve

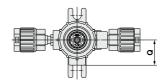

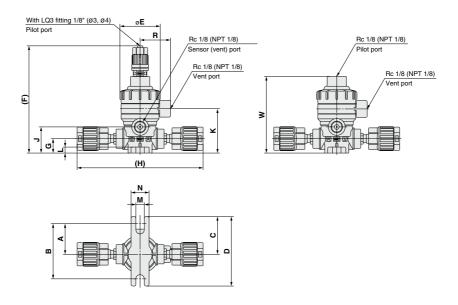

Double acting valve

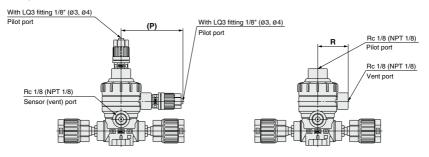


LVQ□2S-Z□ Dimensions (N.O. Valve, Double Acting Valve)												(mm)					
Model	Α	В	С	D	E	F	G	Н	J	K	L	М	N	Р	Q	R	W
LVQ2½S-Z□	25.5	46	31.5	58	33.6	89.5	12	105	21.8	37	5	7	15	53.5	21	25.3	64
LVQ3½S-Z□	28.5	57	34.5	69	45.4	107.5	16.5	137	32	50	6	7	20	59.5	25	31.2	82
LVQ4 ¹ S-Z□	28.5	57	34.5	69	45.4	113	22	151	37.5	55.5	6	7	20	59.5	25	31.2	87.5
LVQ5½S-Z□	42	84	48	96	75	153.2	25	202	50.2	78.2	10	7	20	73	38.5	45	128
LVQ6½S-Z□	42	84	48	96	75	163	32	236	60	88	10	7	20	73	38.5	45	137.5


With by-pass Double acting valve




LVQ22S

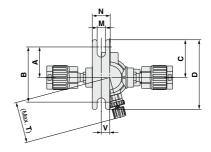

LVQ32S, LVQ42S LVQ52S, LVQ62S

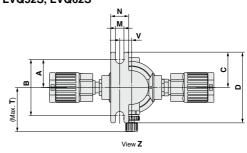

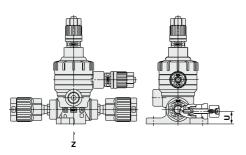

Dimensions (Double Acting Valve)

Dimensions (Double Acting Valve)												
Model	Α	В	С	D	M	N	Т	U	V			
LVQ22-S-Z□-2	25.5	46	31.5	58	7	15	34.3	10.6	7			
LVQ32-S-Z□-2	25.5	51	31.5	63	7	15	36.9	16.5	10			
LVQ42-S-Z□-2	25.5	51	31.5	63	7	15	37.9	22	10			
LVQ52-S-Z□-2	38	76	44	88	7	20	64	25	17			
I VQ62-S-7□-2	38	76	44	88	7	20	66	32	17			

LVC

LVH LVD

LVQ

LVP

LVW LQ1

LQ3

LVN LQHB TL TIL


TLM
TILM
TILM
TD
TID
TH
TIH

Manually Operated Flare, Integrated Fitting Type Hyper Fitting

LVQH-Z Series



How to Order

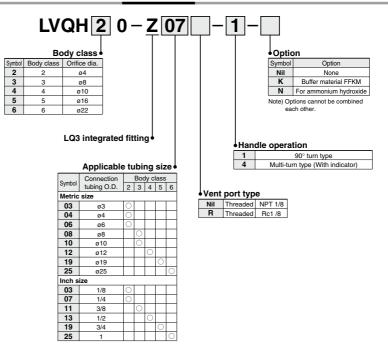

Variations

		Model	LVQH20	LVQH30	LVQH40	LVQH50	LVQH60
	Tubing (Orifice diameter	ø4	ø8	ø10	ø16	ø22
	/ "			10	12	19	25
Туре	S	mbol Inch	1/4	3/8	1/2	3/4	1
90° turn type		TF B B H H A	0	0	0	0	0
Multi-turn type		B H A	0	0	0	0	0

Standard Specifications



Mod	lel	LVQH20	LVQH30	LVQH40	LVQH50	LVQH60			
Tubing O.D.	Metric	6	10	12	19	25			
Tubing O.D.	Inch	1/4	3/8	1/2	3/4	1			
Orifice diamete	er	ø4	ø8	ø10	ø16 ø22				
Flow rate	Kv	0.3	1.1	1.6	4.2	6.8			
characteristics	Cv	0.35	1.3	1.9	5	8			
Withstand pres	ssure (MPa)		•	1	•	•			
Fluid pressure	<a→b></a→b>	–98 kl	Pa to 0.5 MF	Pa Note)	-98 kPa to 0	0.4 MPa Note)			
Back pressure	(MPa)		0.3 or less		0.2 o	r less			
Valve leakage	(cm³/min)		0 (Wit	th water pres	ssure)				
Fluid temperat	ure (°C)			0 to 100					
Ambient tempe	erature (°C)			0 to 60) to 60				
Weight (kg)	LVQH□0-1		0.27	0.32	1.14	1.20			
weight (kg)	LVQH□0-4	0.11	0.25	0.23	0.72	0.82			
Note) This product	cannot be used	for vacuum re	tention Also	connecting the	a vacuum to th	ne B nort may			

Note) This product cannot be used for vacuum retention. Also, connecting the vacuum to the B port may reduce the life of the product.

▲Specific Product Precautions

Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 845 and 846 for Air Operated Chemical Liquid Valve Precautions.

Piping

⚠ Caution

1. Connect tubing by special tools.

For information on tubing fittings and special tools, please see the pamphlet "High Purity Fluoropolymer Fittings Hyper Fitting Flare Type LQ3 Series Fitting Procedure" (M-E06-4). (The pamphlet can be downloaded from the SMC home page.)



Tighten the nut until it touches the end surface of the body, and then tighten it an additional 1/8 turn. If the nut won't turn any further, then it means a sufficient tightening has occurred. Refer to the proper tightening torques shown below.

Tightening Torque for Piping

Body class	Torque (N·m)
2	1.6 to 1.8
3	3.2 to 3.5
4	5.0 to 5.3
5	10.0 to 10.5
6	22.5 to 23.0

ØSMC

LVC

LVA

LVD

LVQ

LVW

LQ1

LVN

LQHB TL TIL

TLM TILM

TD TID


TH

ΤΪΉ


LVQH-Z Series

Construction

90° turn type

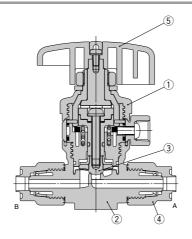

Multi-turn type (With indicator)

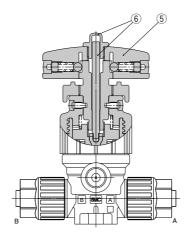


Component Parts


No.	Description	Material
1	Actuator	PVDF
2	Body	PFA
3	Diaphragm	PTFE
4	Nut	PFA
5	Handle	PVDF
6	Indicator/Cover	PP


Manually Operated Flare, Integrated Fitting Type LVQH-Z Series

Dimensions

90° turn type

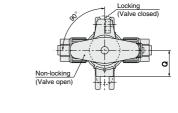

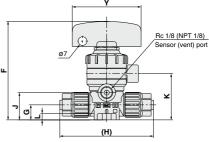


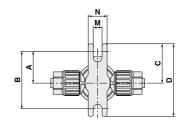


Dimensions							(mm)
Model	Α	В	С	D	F	G	Н
LVQH20-Z□□-1	25.5	46	31.5	58	79	12	75
LVQH30-Z□□-1	28.5	57	34.5	69	103	16.5	103
LVQH40-Z□□-1	28.5	57	34.5	69	108	22	114
LVQH50-Z□□-1	42	84	48	96	165	25	150
LVQH60-Z□□-1	42	84	48	96	175	32	167

Model	J	K	L	M	N	Q	Υ
LVQH20-Z□□-1	21.8	37	5	7	15	21	55
LVQH30-Z□□-1	32	50	6	7	20	25	80
LVQH40-Z□□-1	37.5	55.5	6	7	20	25	80
LVQH50-Z□□-1	50.2	78.2	10	7	20	38.5	110
LVQH60-Z□□-1	60	88	10	7	20	38.5	110

Multi-turn type (With indicator)

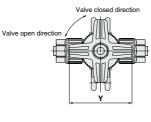

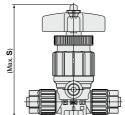

Dimensions		(mm)
Model	S	Y
LVQH20-Z□-4	93.6	50
LVQH30-Z□-4	111.2	50
LVQH40-Z□-4	116.7	50
LVQH50-Z□-4	170.7	71
LVQH60-Z□-4	180.2	71



LVC LVA

LVH

LVQ

LVP

LQ1

LQ3

LVN LQHB


TL TIL TLM TILM TD TID

TID TH TIH

Manually Operated Flare, Integrated Fitting Type Space Saving/Space Saving Connection

LVQHS-Z Series ROHS

How to Order

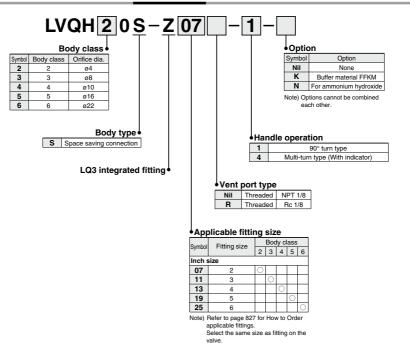


Variations

	Model	LVQ20S	LVQ30S	LVQ40S	LVQ50S	LVQ60S
C	Orifice diameter	ø4	ø8	ø10	ø16	ø22
Type	mbol fitting size	2	3	4	5	6
90° turn type	E A	0	0	0	0	0
Multi-turn type	∏' ** B 1 H A	0	0	0	0	0

Manually Operated Flare, Integrated Fitting Type LVQHS-Z Series

How to Order Space Saving Fittings

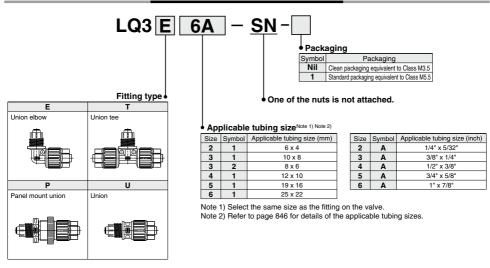

Piping Example



LVH

LVA

LVC

LVD

LVQ

LVP

LQ1

LQ3

LQHB

TL TIL TLM TILM

TID Th Tih

LVQHS-Z Series



Standard Specifications

Me	odel	LVQH20S	LVQH30S	LVQH40S	LVQH50S	LVQH60S	
Connection f	itting size	2	3	4	5	6	
Orifice diame	eter	ø4	ø8	ø10	ø16	ø22	
Flow rate	Kv	0.3	1.1	1.6	4.2	6.8	
characteristic	S Cv	0.35	1.3	1.9	5	8	
Withstand pr	essure (MPa)	sure (MPa) 1					
Fluid pressu	re <a→b></a→b>	-98 kl	Pa to 0.5 MF	a ^{Note)}	-98 kPa to 0.4 MPa Note)		
Back pressu	re (MPa)		0.3 or less		0.2 o	r less	
Valve leakag	e (cm³/min)		0 (Wit	th water pres	ssure)		
Fluid temper	ature (°C)			0 to 100			
Ambient tem	ent temperature (°C) 0 to 60						
Waight (kg)	LVQH□0S-1	0.14	0.28	0.34	1.14	1.15	
Weight (kg)	LVQH□0S-4	0.13	0.21	0.25	0.72	0.86	

Note) This product cannot be used for vacuum retention. Also, connecting the vacuum to the B port may reduce the life of the product.

▲ Specific Product Precautions

Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 845 and 846 for Air Operated Chemical Liquid Valve Precautions.

Piping

 Tighten the nut until it touches the end surface of the body, and then tighten it an additional 1/8 turn. If the nut won't turn any further, then it means a sufficient tightening has occurred. Refer to the proper tightening torques shown below.


Tightening Torque for Piping

	Body class	Torque (N·m)
	2	1.6 to 1.8
	3	3.2 to 3.5
	4	5.0 to 5.3
	5	10.0 to 10.5
Г	6	22.5 to 23.0


Manually Operated Flare, Integrated Fitting Type LVQHS-Z Series

Construction

90° turn type

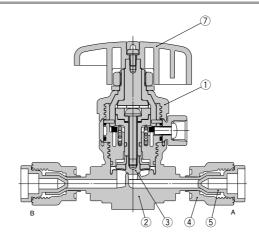

Multi-turn type (With indicator)

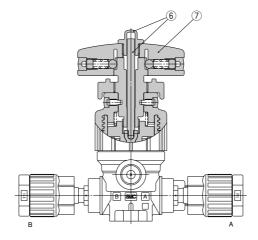

Component Parts

No.	Description	Material					
1	Actuator	PVDF					
2	Body	PFA					
3	Diaphragm	PTFE					
4	Nut	PFA					
5	Plug	PP					
6	Indicator/Cover	PP					
7	Handle	PVDF					

LVC

LVA

LVH

LVQ

LVP

LVW LQ1

LQ3

LVN

LQHB TL TIL

TLM TILM TD TID

TH TIH


LVQHS-Z Series

Dimensions


90° turn type


Dimensions							(mm
Model	Α	В	С	D	F	G	Н
LVQH20S-Z□-1	25.5	46	31.5	58	79	12	105
LVQH30S-Z□-1	28.5	57	34.5	69	103	16.5	137
LVQH40S-Z□-1	28.5	57	34.5	69	108	22	151
LVQH50S-Z□-1	42	84	48	96	165	25	202
LVQH60S-Z□-1	42	84	48	96	175	32	236

Model	J	K	L	M	N	Q	Υ
LVQH20S-Z□-1	21.8	37	5	7	15	21	55
LVQH30S-Z□-1	32	50	6	7	20	25	80
LVQH40S-Z□-1	37.5	55.5	6	7	20	25	80
LVQH50S-Z□-1	50.2	78.2	10	7	20	38.5	110
LVQH60S-Z□-1	60	88	10	7	20	38.5	110

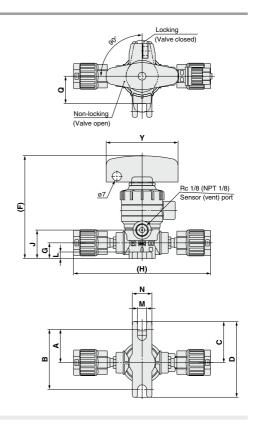

Multi-turn type (With indicator)

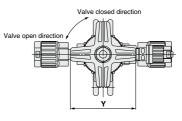

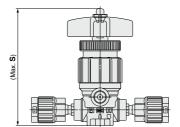


Dimensions		(mm)
Model	S	Υ
LVQH20S-Z□-4	93.6	50
LVQH30S-Z□-4	111.2	50
LVQH40S-Z□-4	116.7	50
LVQH50S-Z□-4	170.7	71
LVQH60S-Z□-4	180.2	71



Air Operated Tube Extension Type LVQ-T Series



How to Order

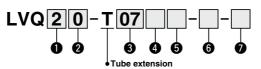

Body class

Symbol	Body class	Orifice dia.
2	2	ø4
3	3	ø8
4	4	ø10
5	5	ø16
6	6	ø22

4 Pilot port type

Nil	With LQ1 fitting	Connection tubing O.D. 1/8" (Ø3)
М	With LQ1 fitting	Connection tubing O.D. ø4
R	Threaded	Rc1/8
N	Threaded	NPT1/8

2 Valve type


0	N.C.
1	N.O.
2	Double acting

Note) For valve type combinations, refer to variations on the next page.

6 Pilot port direction

Symbol	Direction
Nil	0
P2	0
P3	6
P4	9
P5	6
P6	6
P7	0
P8	8

Pilot port piping direction

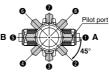

 Specify the piping direction by part number when ordering the product. Do not change the pilot port direction. (Refer to Precautions on page 846.)

3 Applicable tubing size

_	ppiioabie tabiii					_		
Symbol	Connection tubing	Body class						
Syllibol	O.D.		3	4	5	6		
Metri	c size							
06	ø6	0						
10	ø10		0					
12	ø12			0				
19	ø19				0			
25	ø25					0		
Inch s	size							
07	1/4	0						
11	3/8		0					
13	1/2			0				
19	3/4				0			
25	1					0		

Air Operated Tube Extension Type LVQ-T Series

6 Option 1

Nil	None
1	With flow rate adjustment
2	With by-pass
3	With flow rate adjustment & by-pass
4	With indicator
5	High back pressure (0.42 MPa)
6	High back pressure with flow rate adjustment
7	High back pressure with by-pass
8	High back pressure with flow rate adjustment & by-pass
9	High back pressure with indicator

Note) Refer to variations in the table below for valve type and option 1 combinations. Options in the same table can not be combined each other. Option 2

0	Applicable option									Nete	
Symbol	Nil	1	2	3	4 5 6 7 8 9		Note				
Nil	0	0	0	0	0	0	0	0	0	0	_
J	0	0	_	_	_	_	_	_	_	_	For high temperature
K	0	0	0	0	0	0	0	0	0	0	Buffer material FFKM
N	0	0	0	0	0	0	0	0	0	0	For ammonium hydroxide
Р	0	_	_	_	0	0	_	-	_	_	High flow type LVQ6□ only

Note 1) Options 2 in the same table cannot be combined each other.

Note 2) Only option 1 (with flow rate adjustment) is available for use in high-temperature environments. However, it cannot be used in combination with any of the high back pressure specifications.

Variations

		Model	LVQ20	LVQ30	LVQ40	LVQ50	LVQ60
		rifice diameter	ø4	ø8	ø10	ø16	ø22
	Tubing O.D		6	10	12	19	25
Туре	Symbol	type Inch	1/4	3/8	1/2	3/4	1
Basic	†PA †PB †PA	N.C.	0	0	0	0	0
N.C. N.O. Double	B B B B B B B B B B B B B B B B B B B	N.O.	0	0	0	0	0
acting	N.C. N.O. Double actin	g Double acting	0	0	0	0	0
With flow rate adjustment	∳PA B##A N.C.	N.C.	0	0	0	0	0
With by-pass	∳PA ∳PA B⊟A B⊟A	N.C.	0	0	0	0	0
N.C. Double acting	B A B A	Double acting	0	0	0	0	0
With flow rate adjustment & by-pass	∳PA B∯A N.C.	N.C.	0	0	0	0	0
With indicator	∳PA B A N.C.	N.C.	0	0	0	0	0
High back pressure	∳PA B A N.C.	N.C.	0	0	0	0	0

LVC LVA

LVA

LVD

LVQ

LVP

LVW

LQ1

LQ3

LVN


LQHB

TL TIL TLM TILM

TD TID

TIH

LVQ-T Series

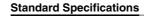




Mod	Model		LVQ30	LVQ40	LVQ50	LVQ60		
Tubing O.D.	Metric	6	10	12	19	25		
Tubing O.D.	Inch	1/4	3/8	1/2	3/4	1		
Orifice diamet	er	ø4	ø8	ø10	ø16	ø22		
Flow rate	Kv	0.3	1.1	1.6	4.2	6.8 (8.1) Note 1)		
characteristics	Cv	0.35	1.3	1.9	5	8 (9.5) Note 1)		
Withstand pre	ssure (MPa)			1				
Operating pressure	Standard	−98 kF	a to 0.5 MPa	-98 kPa to 0.4 MPa Note 2)				
<a→b flow=""></a→b>	High temperature		−98 kF	a to 0.3 MPa	Note 2)			
	Standard		0.3 or less	0.2 or less				
Back pressure (MPa)	High back pressure	0.42 or less						
(WIT a)	High temperature		0.3 or less	0.2 or less				
Valve leakage	(cm³/min)	0 (With water pressure)						
Pilot air press	ure (MPa)	0.3 to 0.5 (High back pressure: 0.45 to 0.55)						
Pilot port size		1/8" (ø3), ø4, Rc 1/8, NPT 1/8						
Fluid	Standard	0 to 100						
temperature (°C)	High temperature			0 to 170				
Ambient temp	erature (°C)	0 to 60						
Weight (kg)		0.08	0.15	0.16	0.60	0.70		


Note 1) (): High flow type


Note 2) This product cannot be used for vacuum retention. Also, connecting the vacuum to the B port
may reduce the life of the product.


Construction




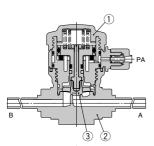


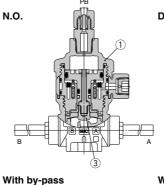

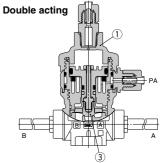

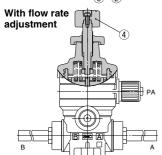

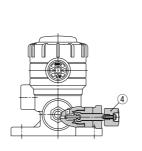

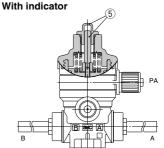

Component Parts


No.	Description	Material
1	Actuator	PVDF
2	Body	PFA
3	Diaphragm	PTFE
4	Flow rate adjuster	PVDF
5	Indicator/Cover	PP


Air Operated LVQ-T Series


Dimensions

Basic, High back pressure

N.C. valve

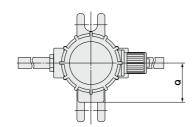

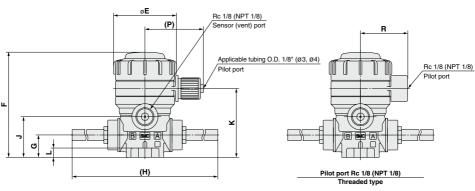

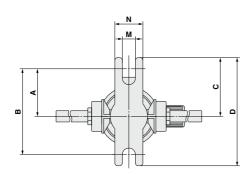

LVQ⊡0-T⊡	Dim	ensic	ons (N	.c. v	alve)											(mm)
Model	Α	В	С	D	Е	F	G	Н	J	K	L	M	N	P	Q	R
LVQ20-T□	25.5	46	31.5	58	33.6	56.5	12	111.5	21.8	37	5	7	15	31.3	21	25.3
LVQ30-T□	28.5	57	34.5	69	45.4	77	16.5	136	32	50	6	7	20	37.2	25	31.2
LVQ40-T□	28.5	57	34.5	69	45.4	82.5	22	137	37.5	55.5	6	7	20	37.2	25	31.2
LVQ50-T□	42	84	48	96	75	127	25	180	50.2	78.2	10	7	20	50.8	38.5	45
LVQ60-T□	42	84	48	96	75	137	32	189	60	88	10	7	20	50.8	38.5	45

LQ1

LQ3

LVC LVA LVH

LVD LVQ LVP

LQHB Tl Til

TLM TILM TD TID TH

TH Tih


LVQ-T Series

Dimensions


With flow rate adjustment, High back pressure with flow rate adjustment


N.C. valve


Dimensions	(mm)
Model	S
LVQ20-T□-1	83
LVQ30-T□-1	113.5
LVQ40-T□-1	119
LVQ50-T□-1	171.5
I VQ60-T□-1	182 5

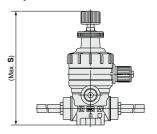


With by-pass, High back pressure with by-pass N.C. valve

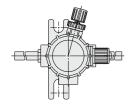

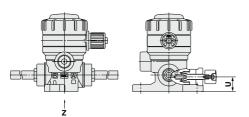

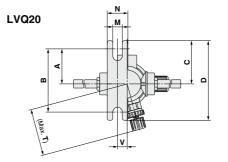

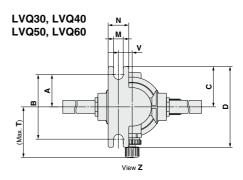

Dimensions									(mm)
Model	Α	В	С	D	M	N	Т	U	٧
LVQ20-T□-2	25.5	46	31.5	58	7	15	34.3	10.6	7
LVQ30-T□-2	25.5	51	31.5	63	7	15	36.9	16.5	10
LVQ40-T□-2	25.5	51	31.5	63	7	15	37.9	22	10
LVQ50-T□-2	38	76	44	88	7	20	64	25	17
LVQ60-T□-2	38	76	44	88	7	20	66	32	17


Air Operated LVQ-T Series

With flow rate adjustment & by-pass,


High back pressure with flow rate adjustment & by-pass


N.C. valve




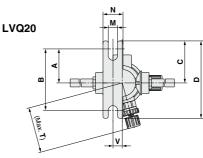

LVC LVA LVH LVD LVQ LVP

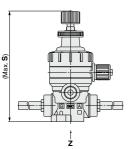

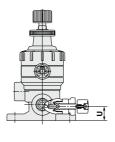


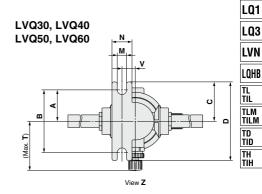

Dimensions										(mm)
Model	Α	В	С	D	M	N	S	Т	C	V
LVQ20-T□-3	25.5	46	31.5	58	7	15	83	34.3	10.6	7
LVQ30-T□-3	25.5	51	31.5	63	7	15	113.5	36.9	16.5	10
LVQ40-T□-3	25.5	51	31.5	63	7	15	119	37.9	22	10
LVQ50-T□-3	38	76	44	88	7	20	171.5	64	25	17
LVQ60-T 3	38	76	44	88	7	20	182.5	66	32	17

With indicator, High back pressure with indicator N.C. valve

Dimensions	(mm)
Model	S
LVQ20-T□-4	70.5
LVQ30-T□-4	88.5
LVQ40-T□-4	94
LVQ50-T□-4	134.5
LVQ60-T□-4	144

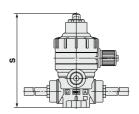






LVQ-T Series


Dimensions

Basic N.O. valve

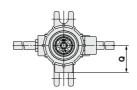


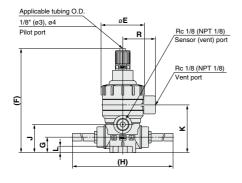

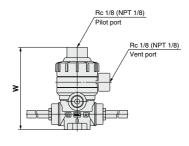

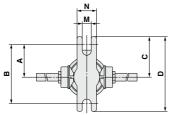

Double acting valve

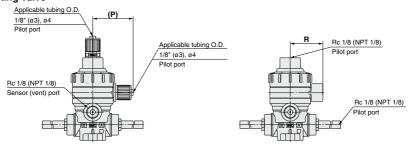

LVQ□½-T□	LVQ□½-T□ Dimensions (N.O. Valve, Double Acting Valve) (mr															(mm)	
Model	Α	В	С	D	E	F	G	Н	J	K	L	M	N	Р	Q	R	W
LVQ2½-T□	25.5	46	31.5	58	33.6	81	12	111.5	21.8	37	5	7	15	31.3	21	25.3	64
LVQ3½-T□	28.5	57	34.5	69	45.4	99	16.5	136	32	50	6	7	20	37.2	25	31.2	82
LVQ4½-T□	28.5	57	34.5	69	45.4	104	22	137	37.5	55.5	6	7	20	37.2	25	31.2	87.5
LVQ5½-T□	42	84	48	96	75	144.5	25	180	50.2	78.2	10	7	20	50.8	38.5	45	128
LVQ6½-T□	42	84	48	96	75	154.5	32	189	60	88	10	7	20	50.8	38.5	45	137.5


Air Operated LVQ-T Series

LVC LVA LVH LVD LVQ


LVW LQ1

With by-pass Double acting valve



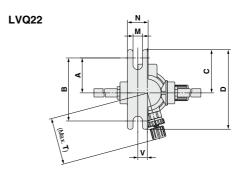

Z

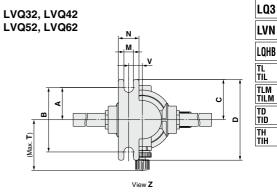

Dimensions									(mm)
Model	Α	В	С	D	M	N	Т	U	٧
LVQ22-T□-2	25.5	46	31.5	58	7	15	34.3	10.6	7
LVQ32-T□-2	25.5	51	31.5	63	7	15	36.9	16.5	10
LVQ42-T□-2	25.5	51	31.5	63	7	15	37.9	22	10
LVQ52-T□-2	38	76	44	88	7	20	64	25	17
LVQ62-T□-2	38	76	44	88	7	20	64	32	17


837 ®

Manually Operated Tube Extension Type

LVQH-T Series



How to Order

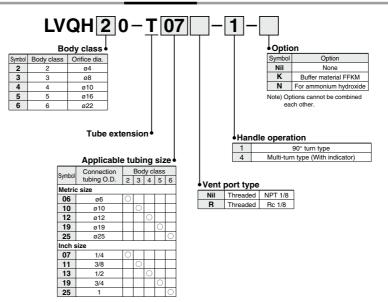

Variations

	Model	LVQH20-T	LVQH30-T	LVQH40-T	LVQH50-T	LVQH60-T
Tubing	Orifice diameter	ø4	ø8	ø10	ø16	ø22
	<u> </u>		10	12	19	25
Туре	Symbol	1/4	3/8	1/2	3/4	1
90° turn type	E A	0	0	0	0	0
Multi-turn type	∏ * B 1 A	0	0	0	0	0

Standard Specifications




Mod	del	LVQH20	LVQH30	LVQH40	LVQH50	LVQH60	
Tubing O.D.	Metric	6	10	12	19	25	
Tubing O.D.	Inch	1/4	3/8	1/2	3/4	1	
Orifice diamet	er	ø4	ø8	ø10	ø16	ø22	
Flow rate	Kv	0.3	1.1	1.6	4.2	6.8	
characteristics	Cv	0.35	1.3	1.9	5	8	
Withstand pre	ssure (MPa)			1			
Fluid pressure	e <a→b></a→b>	–98 k	Pa to 0.5 MP	a ^{Note)}	-98 kPa to 0	0.4 MPa ^{Note)}	
Back pressure	(MPa)		0.3 or less		0.2 or less		
Valve leakage	(cm³/min)		0 (Wit	th water pre	ssure)		
Fluid tempera	ture (°C)			0 to 100			
Ambient temp	erature (°C)	0 to 60					
Weight (kg)	LVQH□0-1	0.12	0.25	0.28	1.04	1.05	
weight (kg)	LVQH□0-4	0.11	0.18	0.19	0.62	0.73	


Note) This product cannot be used for vacuum retention. Also, connecting the vacuum to the B port may reduce the life of the product.

Construction

90° turn type

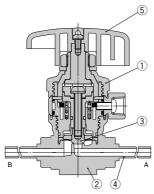

Multi-turn type (With indicator)

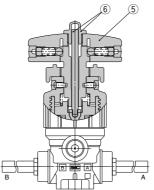

Component Parts

No.	Description	Material
1	Actuator	PVDF
2	Body	PFA
3	Diaphragm	PTFE
4	Insert bushing	PFA
5	Handle	PVDF
6	Indicator/Cover	PP

LVH

LVC

LVQ

LVP

LVW

LQ1

LQ3

LVN

LQHB Tl Til

TLM TILM TD TID

TH TIH


LVQH-T Series

Dimensions


90° turn type

Dimensions							(mm
Model	Α	В	С	D	F	G	Н
LVQH20-T□-1	25.5	46	31.5	58	79	12	111.5
LVQH30-T□-1	28.5	57	34.5	69	103	16.5	136
LVQH40-T□-1	28.5	57	34.5	69	108	22	137
LVQH50-T□-1	42	84	48	96	165	25	180
LVQH60-T□-1	42	84	48	96	175	32	189

Model	J	K	L	M	N	Q	Υ
LVQH20-T□-1	21.8	37	5	7	15	21	55
LVQH30-T□-1	32	50	6	7	20	25	80
LVQH40-T□-1	37.5	55.5	6	7	20	25	80
LVQH50-T□-1	50.2	78.2	10	7	20	38.5	110
LVQH60-T□-1	60	88	10	7	20	38.5	110

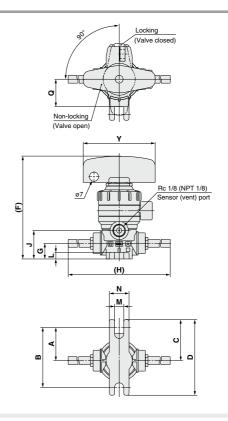

Multi-turn type (With indicator)

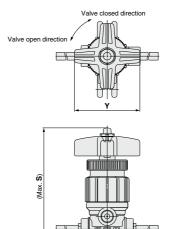

Dimensions		(mm)
Model	S	Υ
LVQH20-T□-4	93.6	50
LVQH30-T□-4	111.2	50
LVQH40-T□-4	116.7	50
LVQH50-T□-4	170.7	71
LVQH60-T□-4	180.2	71




Air Operated, 0.5 MPa Back Pressure Tolerant Insert Bushing, Integrated Fitting Type Hyper Fitting

LVQ UH Series



How to Order

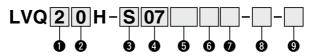

Body class

Symbol	Body class	Orifice dia.
2	2	ø4
3	3	ø8
4	4	ø10
5	5	ø16
6	6	ø22

2 Valve type

0	N.C.					
1	N.O.					
2	Double acting					

Note) For valve type combinations, refer to variations on the next page.

3 Fitting type

•		
Symbol	Fitting type	Body class
٧	LQ1	2, 3, 4, 5, 6
S	LQ2	2, 3, 4, 5

Note) Insert bushing is used in common.

4 Applicable tubing size Note)

Cumbal	Connection tubing		Boo	ody class			
Syllibol	size	2	3	4	5	6	
Metric	c size						
03	3 x 2	•					
04	4 x 3	•					
06	6 x 4	0	•				
08	8 x 6		•				
10	10 x 8		0	•			
12	12 x 10			0	•		
19	19 x 16				0	•	
25	25 x 22					0	
Inch s	size						
03	1/8" x 0.086"	•					
05	3/16" x 1/8"	•					
07	1/4" x 5/32"	0	•				
11	3/8" x 1/4"		0	•			
13	1/2" x 3/8"			0	•		
19	3/4" x 5/8"				0	•	
25	1" x 7/8"					0	

○Basic size ● With reducer

Note) Refer to page 846 for details of the applicable tubing sizes.

5 Port B (OUT) different dia. size

Symbol	Application
Nil	Ports A & B same size
Refer to the applicable tubing size table to the left.	Different diameter tubings can be selected within the same body class.


6 Pilot port type

Nil	LQ1 integrated fitting	Connection tubing O.D. 1/8" (ø3)			
М	LQ1 integrated fitting	Connection tubing O.D ø4			
R	Threaded	Rc1/8			
N	Threaded	NPT1/8			

Pilot port direction

T not port un coulon						
Symbol	Direction					
Nil	0					
P2	0					
P3	0					
P4	4					
P5	6					
P6	6					
P7	0					
P8	0					

Pilot port piping direction

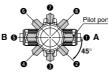

 Specify the piping direction by part number when ordering the product. Do not change the pilot port direction. (Refer to Precautions on page 846.)

Air Operated, 0.5 MPa Back Pressure Tolerant Insert Bushing, Integrated Fitting Type LVQ H Series

Option 1

Nil	None				
1	With flow rate adjustment				
2	With by-pass				
3	With flow rate adjustment & by-pass				
4	With indicator				
24	With indicator & by-pass				

Note) Refer to variations in the table below for valve type and option 1 combinations. Options in the same table cannot be combined each other. 9 Option 2

•	Option 2							
Cumala	ام	A	Appli	cabl	Note			
Syllic	Symbol		ii 1 2 3 4 24		Note			
Nil		0	0	0	0	0	0	_
К		0	0	0	0	0	0	Buffer material FFKM
N		0	0	0	0	0	0	For ammonium hydroxide
Р		0	_	_	_	0	_	High flow type LVQ6□ only

Note) Options 2 in the same table cannot be combined each other.

Variations

			Model	LVQ20H	LVQ30H	LVQ40H	LVQ50H	LVQ60H
	Orifice diameter					ø10	ø16	ø22
		Tubing O.D.	Metric	6	10	12	19	25
Туре	Symbol	Valve typ	Inch	1/4	3/8	1/2	3/4	1
Basic	†PA †PB	<u> </u>	N.C.	0	0	0	0	0
N.C. N.O. Double		BA	N.O.	0	0	0	0	0
acting	N.C. N.O.		Double acting	0	0	0	0	0
With flow rate adjustment	∳P B ₩ N.C	A	N.C.	0	0	0	0	0
With Double acting by-pass		∳PA I∏A	N.C.	0	0	0	0	0
N.C.	B A B A A PB N.C. Double acting		Double acting	0	0	0	0	0
With flow rate adjustment & by-pass	∳P B ∰ N.C	A _A C.	N.C.	0	0	0	0	0
With indicator	∳P. B. W. N.C	A	N.C.	0	0	0	0	0
With indicator & by-pass	∳P B W N.C		N.C.	0	0	0	0	0

LVC

LVA

LVD

LVQ

LVP

LVW LQ1

L03

LVN

LQHB TL TIL

TLM TILM

TD TID TH


TIH

Air Operated, 0.5 MPa Back Pressure Tolerant Flare, Integrated Fitting Type Hyper Fitting

LVQ . Series



How to Order

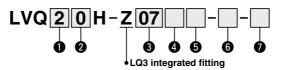

Body class

Symbol	Body class	Orifice dia.
2	2	ø4
3	3	ø8
4	4	ø10
5	5	ø16
6	6	ø22

2 Valve type

0	N.C.				
1	N.O.				
2	Double acting				

Note) For valve type combinations, refer to variations on the next page.

4 Pilot port type


Nil	With LQ3 fitting	Connection tubing size 1/8" x 0.086" (3 x 2) Note)
М	With LQ3 fitting	Connection tubing size 4 x 3 Note)
R	Threaded	Rc1/8
N	Threaded	NPT1/8

Note) Refer to page 846 for details of the applicable tubing sizes.

6 Pilot port direction

Symbol	Direction
Nil	0
P2	0
P3	6
P4	4
P5	9
P6	6
P7	0
P8	8

Pilot port piping direction

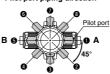

 Specify the piping direction by part number when ordering the product. Do not change the pilot port direction. (Refer to Precautions on page 846.)

Applicable tubing size Note

Symbol	Connection tubing	Body class							
Syllibol	size	2	3	4	5	6			
Metri	c size								
03	3 x 2	0							
04	4 x 3	0							
06	6 x 4	0							
08	8 x 6		0						
10	10 x 8		0						
12	12 x 10			0					
19	19 x 16				0				
25	25 x 22					0			
Inch s	size								
07	1/4" x 5/32"	0							
11	3/8" x 1/4"		0						
13	1/2" x 3/8"			0					
19	3/4" x 5/8"				0				
25	1" x 7/8"					0			

Note) Refer to page 846 for details of the applicable tubing sizes.

Air Operated, 0.5 MPa Back Pressure Tolerant Insert Bushing, Integrated Fitting Type LVQ H-Z Series

6 Option 1

<u> </u>	
Nil	None
1	With flow rate adjustment
2	With by-pass
3	With flow rate adjustment & by-pass
4	With indicator
24	With indicator & by-pass

Note) Refer to variations in the table below for valve type and option 1 combinations. Options in the same table cannot be combined each other. Option 2

• option 2										
0	F	Appli	cabl	Nista						
Symbol	Nil	1	2	3	4	24	Note			
Nil	0	0	0	0	0	0	_			
K	0	0	0	0	0	0	Buffer material FFKM			
N	0	0	0	0	0	0	For ammonium hydroxide			
Р	0	_	_	_	0	_	High flow type LVQ6□ only			

Note) Options 2 in the same table cannot be combined each other.

Variations

			Model	LVQ20H	LVQ30H	LVQ40H	LVQ50H	LVQ60H
		Orif	ice diameter	ø4	ø8	ø10	ø16	ø22
		Tubing O.D.	Metric	6	10	12	19	25
Туре	Symbol	Valve typ	Inch	1/4	3/8	1/2	3/4	1
Basic	∳PA ∳PB	∳₽A	N.C.	0	0	0	0	0
N.C. N.O. Double	B A B A N.C. N.O.	B⊞A	N.O.	0	0	0	0	0
acting acting	N.C. N.O.	Double acting	Double acting	0	0	0	0	0
With flow rate adjustment	∳PA B#J N.C.	A	N.C.	0	0	0	0	0
With Double acting by-pass		∳PA ⊟A	N.C.	0	0	0	0	0
N.C.	≩	↑PB ole acting	Double acting	0	0	0	0	0
With flow rate adjustment & by-pass	∜PA B≱ N.C.	A A	N.C.	0	0	0	0	0
With indicator	∳P.¢ B ≸ N.C.	A	N.C.	0	0	0	0	0
With indicator & by-pass	ÿ P.A B W N.C.		N.C.	0	0	0	0	0

SMC

LVC

LVA

LVD

LVQ

LVP

LVW LQ1

LO3

LUJ

LVN

TL TIL

TLM TILM TD TID

TH Tih





↑ Specific Product Precautions

Be sure to read this before handling the products. Refer to back page 50 for Safety Instructions and pages 845 and 846 for Air Operated Chemical Liquid Valve Precautions.

Piping

1. Connect tubing by special tools.

For information on tubing connection and special tools, please see the pamphlet "High Purity Fluoropolymer Fittings Hyper Fitting LQ1/2 Series Work Procedure Instructions" (M-E05-1) and "High Purity Fluoropolymer Fittings Hyper Fitting/Flare Type LQ3 Series Fitting Procedure" (M-E06-4). (The pamphlet can be downloaded from the SMC home page.)



Tighten the nut until it touches the end surface of the body, and then tighten it an additional 1/8 turn. If the nut won't turn any further, then it means a sufficient tightening has occurred. Refer to the proper tightening torques shown below.

Tightening Torque for Piping

Body	Torque (N·m)							
class	LQ1	LQ1 LQ2						
2	0.3 to 0.4	1.5 to 2.0	1.6 to 1.8					
3	0.8 to 1.0	3.0 to 3.5	3.2 to 3.5					
4	1.0 to 1.2	7.5 to 9.0	5.0 to 5.3					
5	2.5 to 3.0	11.0 to 13.0	10.0 to 10.5					
6	5.5 to 6.0	_	22.5 to 23.0					

Specifications

Mod	Model		LVQ30H	LVQ40H	LVQ50H	LVQ60H			
Tubing O.D.Note 1)	Metric	6	10	12	19	25			
Tubing O.D.	Inch	1/4	3/8	1/2	3/4	1			
Orifice diameter	er	ø4	ø8	ø10	ø16	ø22			
Flow rate	Kv	0.3	1.1	1.6	4.2	6.8 (8.1) Note 1)			
characteristics	Cv	0.35	1.3	1.9	5	8 (9.5) Note 1)			
Withstand pres	ssure (MPa)	1							
Operating pressu	re <a→b flow=""></a→b>	-98 kPa to 0.5 MPa Note 3)							
Back pressure	(MPa)	0.5 or less							
Valve leakage	(cm³/min)	0 (With water pressure)							
Pilot air pressu	ıre (MPa)	0.5 to 0.8							
Pilot port size	Note 2)	1/8" (ø3), ø4, Rc 1/8, NPT 1/8							
Fluid temperat	ure (°C)	0 to 100							
Ambient tempe	erature (°C)	0 to 60							
Weight (kg)		0.08	0.17	0.22	0.70	0.81			

Note 1) (): High flow type

Note 2) Refer to page 846 for details of the applicable tubing sizes.

Note 3) This product cannot be used for vacuum retention. Also, connecting the vacuum to the B port may reduce the life of the product.

Dimensions

Dimensions are the same as those of the standard specifications.

Applicable Different Diameter Tubings with Reducer (LVQ□□H-V)

Applicable different diameter rubings with Reducer (LVQUUR-s)

Different diameter tubings can be selected (within the same body class) by using a nut and an insert bushing (reducer).

• With reducer

	Connection tubing O.D.													
Body class	Metric size								lr	nch siz	ze			
Oldoo	4	6	8	10	12	19	25	1/8	3/16	1/4	3/8	1/2	3/4	1
2	•	0	_	_	_	_	_	•	•	0	_	_	_	_
3	-	•	•	0	_	_	_	_	_	•	0	_	_	_
4	—	_	_	•	0	_	_	_	—	_	•	0	_	_
5		_	_	_	•	0	-	_		_	_	•	0	_
6		_	_	<u> </u>	_	•	0	_		_		_	•	0

Note) Refer to page 804 for information on changing tubing sizes.

LVC

LVA

LVD

LVQ

LVW LQ1

LQ3

LQHB

TL TIL TLM

TILM TD TID

TH



Material and Fluid Compatibility Check List for Air Operated Chemical Valves

Chemical	Compatibility
Acetone	O Note 1, 2)
Ammonium hydroxide	O Note 2)
Isobutyl alcohol	O Note 1, 2)
Isopropyl alcohol	O Note 1, 2)
Hydrochloric acid	0
Ozone (dry)	0
Hydrogen peroxide Concentration 5% or less, 50°C or less	0
Ethyl acetate	O Note 1, 2)
Butyl acetate	O Note 1, 2)
Nitric acid (except fuming nitric acid) Concentration 10% or less	O Note 2)
Deionized water (pure water)	0
Sodium hydroxide (caustic soda) Concentration 50% or less	0
Nitrogen gas	0
Super pure water	0
Toluene	O Note 1, 2)
Hydrofluoric acid	O Note 2)
Sulfuric acid (except fuming sulfuric acid)	O Note 2)
Phosphoric acid Concentration 80% or less	0

ible symbols	: Can be used : Can be used in certain conditions

The material and fluid compatibility check list provides reference values as a guide only.

Note 1) Since static electricity may be generated, implement suitable countermeasures.

Note 2) Use caution as permeation may occur. The permeated fluid may effect the parts of other materials.

- Compatibility is indicated for fluid temperatures of 100°C or less.
- The material and fluid compatibility check list provides reference values as a guide only, therefore we do not guarantee the application to our product.
- The data above is based on the information presented by the material manufacturers.
- SMC is not responsible for its accuracy and any damage happened because of this data.
- Use a fluid with a viscosity of 300 cp or less. Failure to do so may cause valve closing failure.



LVQ Series Air Operated Chemical Liquid Valve/Precautions 1

Be sure to read this before handling the products.

Design / Selection

1. Confirm the specifications.

Give careful consideration to operating conditions such as the application, fluid and environment, and use within the operating ranges specified in this catalog.

2. Fluids

Operate after confirming the compatibility of the product's component materials with fluids, using the check list on page 844. Contact SMC regarding fluids other than those in the check list. Operate within the indicated fluid temperature range.

3. Maintenance space

Ensure the necessary space for maintenance and inspections.

4. Fluid pressure range

Keep the supplied fluid pressure within the operating pressure range specified in this catalog.

5. Ambient environment

Install the product in an environment where there is no effect from radiant heat caused by heat sources, etc., and use within the ambient operating temperature range. After confirming the compatibility of the product's component materials with the ambient environment, operate so that fluid does not adhere to the product's exterior surfaces.

6. Liquid seals

When circulating fluid

Provide a relief valve in the system so that fluid does not get into the liquid seal circuit.

7. Countermeasures for static electricity

Since static electricity may be generated depending on the fluid being used, implement suitable countermeasures.

Mounting

⚠ Warning

 If air leakage increases or equipment does not operate properly, stop operation.

After mounting, perform suitable function and leak tests to confirm that the mounting is correct.

2. Operation manual

Mount and operate the product after reading the manual carefully and understanding its contents. Also, keep the manual where it can be referred to as necessary.

Piping

↑ Caution

1. Preparation before piping

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil and other debris from inside the pipe.

Install piping so that it does not apply pulling, pressing, bending or other forces on the valve body.

Use the tightening torques shown below for the threaded pilot port.


Tightening Torque for Pilot Port

Pilot port	Torque (N·m)
Rc, NPT 1/8	0.8 to 1.0

3. Metal fittings

In the case of threaded pilot port, do not pipe the metal fittings which can cause damage to the thread part.

4. For information on tubing connection and special tools, please see the pamphlet "High Purity Fluoropolymer Fittings Hyper Fitting LQ1/2 Series Work Procedure Instructions" (M-E05-1) or "High Purity Fluoropolymer Fittings Hyper Fitting/Flare Type LQ3 Series Fitting Procedure" (M-E06-4). (The pamphlets can be downloaded from the SMC home page.)

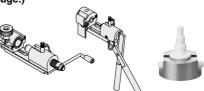

Operating Air Supply

⚠ Warning

1. Use clean air.

Do not use compressed air which includes chemicals, synthetic oils containing organic solvents, salt, or corrosive gases, etc., as this may cause damage or malfunction.

SMC

LVC

LVA

LVH

LVQ

LVP

LVW

LQ1

LQ3 LVN

LQHB

TIL TLM TILM

TD TID TH TIH



LVQ Series Air Operated Chemical Liquid Valve/Precautions 2

Be sure to read this before handling the products.

Use of Tubing

1. Refer to the applicable tubing sizes shown below for tubing to be used.

Applicable tubing sizes

	Connection	O.D. (mm)		Internal thickness (mm)	
	tubing size	Standard size	Tolerance	Standard size	Tolerance
	ø3 x ø2	3.0	+0.2	0.5	±0.06
	ø4 x ø3	4.0			
	ø6 x ø4	6.0		1.0	±0.1
Metric sizes	ø8 x ø6	8.0			
Wellic Sizes	ø10 x ø8	10.0			
	ø12 x ø10	12.0			
	ø19 x ø16	19.0	+0.3 -0.1	1.5	±0.15
	ø25 x ø22	25.0			
	1/8" x 0.086"	3.18	+0.2 -0.1 +0.3 -0.1	0.5	±0.1
	3/16" x 1/8"	4.75		0.8	
	1/4" x 5/32"	6.35		1.2	±0.12
Inch sizes	3/8" x 1/4"	9.53		1.6	±0.15
	1/2" x 3/8"	12.7			
	3/4" x 5/8"	19.0			
	1" x 7/8"	25.4			

Operating Environment

⚠ Warning

- 1. Do not use in a location having an explosive atmosphere.
- 2. Do not use in locations where vibration or impact occurs.
- Do not use in locations where radiated heat will be received from nearby heat sources.
- Do not use in environments which exceed the ambient temperature specifications of the product.

Maintenance

⚠ Warning

- Maintenance should be performed in accordance with the procedures in the operation manual. Incorrect handling can cause damage or malfunction of machinery and equipment, etc.
- Before removing equipment or compressed air supply/exhaust devices, shut off the air and power supplies, and exhaust compressed air from the system.
 - Further, when restarting equipment after remounting or replacement, first confirm safety and then check the equipment for normal operation.
- Perform work after removing residual chemicals and carefully replacing them with pure water or air, etc.
- 4. Do not disassemble the product. Products which have been disassembled cannot be guaranteed.

 If disassembly is necessary, contact SMC.
- In order to obtain optimum performance from valves, perform periodic inspections to confirm that there are no leaks from valves or fittings, etc.

Maintenance

⚠ Caution

Removal of drainage
 Flush drainage from filters regularly.

Precautions

- 1. Operate within the ranges of the maximum operating pressure and back pressure.
- 2. Do not change the pilot port direction. Products which have been disassembled cannot be guaranteed.

- Please note that when the product is shipped from the factory, gases such as N₂ and air may leak from the valve at a rate of 1 cm³/min (when pressurized).
- When operated at a very low flow rate, the product with flow rate adjustment may vibrate, etc. depending on the operating conditions. Therefore, operate only after careful examination of the flow rate, pressure and piping conditions.
- Water hammering may occur depending on the fluid pressure conditions. In most cases, improvement is possible by adjusting the pilot pressure with a speed controller, etc., but the flow rate, pressure and piping conditions should be reviewed.
- To adjust the flow rate with flow rate adjustment, open gradually starting from the fully closed condition.

Opening is accomplished by turning the adjustment knob counterclockwise. Additionally, do not apply any unreasonable force to the adjustment handle when nearing a fully opened or closed condition. This may result in deformation of the orifice sheet surface or damage to the threaded part of the adjustment handle.

The handle is in the fully closed condition when the product is shipped from the factory.

In addition, do not apply excessive force to the adjustment knob even when the lock nut is in a tightened state. Operate the adjustment knob when the lock nut is in a loosened state.

- 5. After long periods of nonuse, perform a test run before beginning regular operation.
- Since the product is packaged in a clean room, use sufficient care in handling when opened.

Return of Product

If the product to be returned is contaminated or is possibly contaminated with substances that are harmful to humans, for safety reasons, please contact SMC beforehand and then employ a specialist cleaning company to decontaminate the product. After the decontamination prescribed above has been carried out, submit a Product Return Request Sheet or the Detoxification/Decontamination Certificate to SMC and await SMC's approval and further instructions before attempting to return the item.

Please refer to the International Chemical Safety Cards (ICSC) for a list of harmful substances.

If you have any further questions, please don't hesitate to contact your SMC sales representative.

