Electro-Pneumatic Regulator/ Electronic Vacuum Regulator

ITV Series





For the stepless control of air pressure in proportion to electrical signals

Serial communication specification

Applicable Fieldbus protocols

Link

DeviceNet*



IO-Link

RS-232C specification


Compact and lightweight (Integrated communication parts)

Weight: 350 g*1 (ITV1000)

Power consumption: 4 W*1 or less

*1 Values for the communication type (PROFIBUS DP)




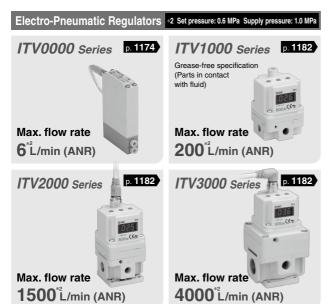





Electro-Pneumatic Regulator/Electronic Vacuum Regulator ITV Series

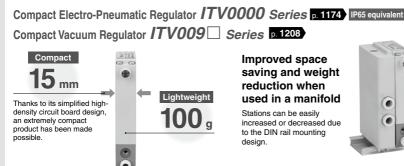


Improved space saving and weight reduction when used in a manifold

Stations can be easily increased or decreased due to the DIN rail mounting design.




■2 types of cable connectors



- Built-in One-touch fittings
- With error indication
- 2 types of brackets



- Linearity: ±1% F.S. or less
- Hvsteresis: 0.5% F.S. or less
- Repeatability: ±0.5% F.S. or less
- High-speed response time: 0.1 s (Without load)
- * This is not a guaranteed value as it depends on the operating environment.
- High stability Sensitivity: 0.2% F.S. or less



Electro-Pneumatic Regulator ITV1000/2000/3000 Series p. 1182 IP65 Electronic Vacuum Regulator ITV209 Series p. 1215



ITV3000

ITV2000 Sensitivity: 0.2% F.S. or less

ITV1000

Linearity: ±1% F.S. or less Hysteresis: 0.5% F.S. or less

Cable connections in 2 directions




 Grease-free specification (ITV1000 series)




Application examples

For multi-stage control to analog control

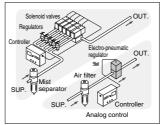


For electrostatic coating control

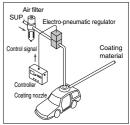

IO-Link Compatible Devices:

Electro-Pneumatic Regulator ITV10 0/20 0/30 0-IL p. 1182 Electronic Vacuum Regulator ITV2090-IL p. 1215

IO-Link communication enables users to check device information and monitor device status in addition to performing pressure control.

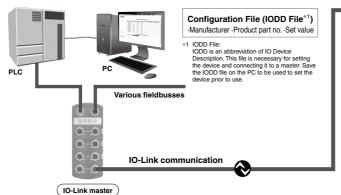



face technology between the sensor/actuator and the I/O terminal that is an international standard: IEC 61131-9.



For the manufacturing of various products The set pressure analog value can be

changed to control the indentation

pressure applied to each workpiece. This allows for a variety of products to he manufactured on the same line

IO-Link Compatible Devices: Electro-Pneumatic Regulator ITV10□0/20□0/30□0-IL Electronic Vacuum Regulator ITV2090-IL

The IO-Link master and device can be connected with one cable.

Only a single cable combining the communication wire and the power supply wire is required.

Uses 4-wire unshielded cables

Special communication cables are not necessary.

A conventional 4-wire unshielded cable can be used for the input and output of sensors, switches, etc.

(Recommended specifications: Conductor resistance 3 Ω . Wire-to-wire capacitance 3 nF or less, 20 m or less)

Implement diagnostic bits in the process data.

The diagnostic bit in the cyclic process data makes it easy to find problems with the

It is possible to find problems with the equipment in real time using the cyclic (periodic) data and to monitor such problems in detail with the noncyclic (aperiodic) data.

Process Data

<pd_in: 4="" b<="" th=""><th>ytes:</th><th>></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th><th></th></pd_in:>	ytes:	>														
Byte				()								1			
Bit	31	30	29	28	27	26	25	24	23	22	21	20	19	18	17	16
Value						Out	put p	ress	ure v	alue	(16 l	oits)				
Byte				- 2	2								3			
Byte Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
	15	14 At	13 onorr	12	11	10	9	_	7 /arnir		5	4	3	2 tificat	1 tion	0 SSC1

Application

OLIT: 2 byton

Byte	Z Dyli	69>)								1			
Bit	15	14	13	12	11	10	9	8	7	6	5	4	3	2	1	0
Value						S	et pre	usse	e va	lue (16 bi	s)				

- · Output pressure is within the set pressure ±10%
- · Notification of energizing time
- · Residual pressure error Target value over range
- · Pressure under range (LLL)
- · Pressure over range (HHH)
- · Power supply voltage drop · Excessive power supply voltage
- · Warning occurred
- · Internal communication error



Series Variations

For the stepless control of air pressure in proportion to electrical signals

-						
	Series	Model	Set pressure range	Input signal	Port size	Page
	ITV0000 Series	ITV001□	0.001 to 0.1 MPa	Current type: 4 to 20 mADC (Sink type)		
		ITV003□	0.001 to 0.5 MPa	Current type: 0 to 20 mADC (Sink type) Voltage type: 0 to 5 VDC	Built-in One-touch fittings Metric size: ø4 Inch size: ø5/32	1174
	E	ITV005□	0.001 to 0.9 MPa	Voltage type: 0 to 10 VDC	111011 3120. 90/02	
ors	ITV1000 Series	ITV101□	0.005 to 0.1 MPa			
Electro-Pneumatic Regulators		ITV103□	0.005 to 0.5 MPa	O	1/8, 1/4	1182
atic Re	1.0	ITV105□	0.005 to 0.9 MPa	Current type: 4 to 20 mADC (Sink type) Current type: 0 to 20 mADC (Sink type)		
menm	ITV2000 Series	ITV201□	0.005 to 0.1 MPa	Voltage type: 0 to 5 VDC Voltage type: 0 to 10 VDC	1/4, 3/8	
ctro-P		ITV203□	0.005 to 0.5 MPa	Preset input (4 points/16 points) 10-bit digital input		1182
	ان ان ان	ITV205□	0.005 to 0.9 MPa	CC-Link compatible DeviceNet® compatible		
	ITV3000 Series	ITV301□	0.005 to 0.1 MPa	PROFIBUS DP compatible IO-Link compatible RS-232C communication		
		ITV303□	0.005 to 0.5 MPa		1/4, 3/8, 1/2	1182
		ITV305□	0.005 to 0.9 MPa			
ulators	ITV009□ Series	ITV009□	-1 to -100 kPa	Current type: 4 to 20 mADC (Sink type) Current type: 0 to 20 mADC (Sink type) Voltage type: 0 to 5 VDC Voltage type: 0 to 10 VDC	Built-in One-touch fittings Metric size: ø4 Inch size: ø5/32	1208
Electronic Vacuum Regulators	ITV209□ Series	ITV209□	–1.3 to –80 kPa	Current type: 4 to 20 mADC (Sink type) Current type: 0 to 20 mADC (Sink type) Voltage type: 0 to 5 VDC Voltage type: 0 to 10 VDC Preset input (4 points/16 points) 10-bit digital input CC-Link compatible DeviceNet® compatible PROFIBUS DP compatible IO-Link compatible RS-232C communication	1/4	1215

CONTENTS



Electro-Pneumatic Regulators

How to Order		
Accessories (Option)		
Working Principle		
Linearity/Hysteresis, Repeatability, Pressure Characteristics, Flow Rate Characteristics - p. 1177 Dimensions		
ITV1000/2000/3000 Series How to Order	Working Principlep.	1176
HOW to Order		
How to Order	Dimensionsp.	1179
How to Order	■ITV4000/2000/2000 o	
Standard Specifications		1100
Communication Specifications p. 1183 Modular Products and Accessory Combinations p. 1184 Accessories (Option)/Part Nos. p. 1184 Working Principle p. 1185 Linearity, Hysteresis, Repeatability, Pressure Characteristics, Flow Rate Characteristics, Relief Characteristics p. 1186 Construction p. 1192 Dimensions p. 1194 Made to Order p. 1203 Electronic Vacuum Regulators ITV009 Series How to Order p. 1209 Accessories (Option) p. 1209 Working Principle p. 1210 Linearity/Hysteresis, Repeatability, Pressure Characteristics, Flow Rate Characteristics p. 1211 Dimensions p. 1212 ITV2090/2091 Series How to Order p. 1215 Standard Specifications p. 1216 Communication Specifications p. 1216 Working Principle p. 1217 Linearity, Hysteresis, Repeatability, Pressure Characteristics, Flow Rate Characteristics p. 1216 Working Principle p. 1216 Linearity, Hysteresis, Repeatability, Pressure Characteristics, Flow Rate Characteristics p. 1216 Working Principle p. 1217 Linearity, Hysteresis, Repeatability, Pressure Characteristics, Flow Rate Characteristics p. 1217 Linearity, Hysteresis, Repeatability, Pressure Characteristics, Flow Rate Characteristics p. 1217 Dimensions p. 1218		
Modular Products and Accessory Combinations		
Accessories (Option)/Part Nos		
Working Principle		
Linearity, Hysteresis, Repeatability, Pressure Characteristics, Flow Rate Characteristics, Relief Characteristics — p. 1186 Construction — p. 1192 Dimensions — p. 1194 Made to Order — p. 1203 Electronic Vacuum Regulators ITV009 Series How to Order — p. 1208 Specifications — p. 1209 Accessories (Option) — p. 1209 Working Principle — p. 1210 Linearity/Hysteresis, Repeatability, Pressure Characteristics, Flow Rate Characteristics — p. 1211 Dimensions — p. 1212 ITV2090/2091 Series How to Order — p. 1215 Standard Specifications — p. 1216 Communication Specifications — p. 1216 Working Principle — p. 1217 Linearity, Hysteresis, Repeatability, Pressure Characteristics, Flow Rate Characteristics — p. 1216 Working Principle — p. 1217 Linearity, Hysteresis, Repeatability, Pressure Characteristics, Flow Rate Characteristics — p. 1217 Dimensions — p. 1218		
Construction p. 1192 Dimensions p. 1194 Made to Order p. 1203 Electronic Vacuum Regulators ITV009 Series How to Order p. 1208 Specifications p. 1209 Accessories (Option) p. 1209 Working Principle p. 1210 Linearity/Hysteresis, Repeatability, Pressure Characteristics, Flow Rate Characteristics p. 1211 Dimensions p. 1212 ITV2090/2091 Series How to Order p. 1215 Standard Specifications p. 1216 Communication Specifications p. 1216 Working Principle p. 1217 Linearity, Hysteresis, Repeatability, Pressure Characteristics, Flow Rate Characteristics p. 1217 Linearity, Hysteresis, Repeatability, Pressure Characteristics, Flow Rate Characteristics p. 1217 Dimensions p. 1218	·	
Dimensions		
Electronic Vacuum Regulators ITV009□ Series How to Order		
Electronic Vacuum Regulators ITV009□ Series How to Order		
HOW to Order	made to Orderp.	1203
HOW to Order	Electronic Vacuum Regulators	
How to Order p. 1208 Specifications p. 1209 Accessories (Option) p. 1209 Working Principle p. 1210 Linearity/Hysteresis, Repeatability, Pressure Characteristics, Flow Rate Characteristics · p. 1211 Dimensions p. 1212 ITV2090/2091 Series How to Order p. 1215 Standard Specifications p. 1216 Communication Specifications p. 1216 Working Principle p. 1217 Linearity, Hysteresis, Repeatability, Pressure Characteristics, Flow Rate Characteristics · p. 1217 Dimensions p. 1218		
Specifications p. 1209 Accessories (Option) p. 1209 Working Principle p. 1210 Linearity/Hysteresis, Repeatability, Pressure Characteristics, Flow Rate Characteristics p. 1211 Dimensions p. 1212 ITV2090/2091 Series How to Order p. 1215 Standard Specifications p. 1216 Communication Specifications p. 1216 Working Principle p. 1217 Linearity, Hysteresis, Repeatability, Pressure Characteristics, Flow Rate Characteristics p. 1217 Dimensions p. 1218		4000
Accessories (Option) p. 1209 Working Principle pp. 1210 Linearity/Hysteresis, Repeatability, Pressure Characteristics, Flow Rate Characteristics p. 1211 Dimensions pp. 1212 ITV2090/2091 Series How to Order pp. 1215 Standard Specifications pp. 1216 Communication Specifications pp. 1216 Working Principle pp. 1217 Linearity, Hysteresis, Repeatability, Pressure Characteristics, Flow Rate Characteristics pp. 1218 Dimensions pp. 1218		
Working Principle		
Linearity/Hysteresis, Repeatability, Pressure Characteristics, Flow Rate Characteristics · p. 1211 Dimensions		
Dimensions		
How to Order p. 1215 Standard Specifications p. 1216 Communication Specifications p. 1216 Working Principle p. 1217 Linearity, Hysteresis, Repeatability, Pressure Characteristics, Flow Rate Characteristics p. 1218 Dimensions p. 1218	Linearity/Hysteresis, Repeatability, Pressure Characteristics, Flow Rate Characteristicsp.	1211
How to Order	Dimensionsp.	1212
How to Order	■ITV2090/2091 Sories	
Standard Specifications p. 1216 Communication Specifications p. 1216 Working Principle p. 1217 Linearity, Hysteresis, Repeatability, Pressure Characteristics, Flow Rate Characteristics p. 1217 Dimensions p. 1218		1215
Communication Specifications p. 1216 Working Principle p. 1217 Linearity, Hysteresis, Repeatability, Pressure Characteristics, Flow Rate Characteristics p. 1217 Dimensions p. 1218	·	
Working Principle p. 1217 Linearity, Hysteresis, Repeatability, Pressure Characteristics, Flow Rate Characteristics p. 1217 Dimensions p. 1218	·	
Linearity, Hysteresis, Repeatability, Pressure Characteristics, Flow Rate Characteristics p. 1217 Dimensions		
Dimensions — p. 1218	3 1	
Accessories (Option)p. 1221	I JIMANSIONS	1210
	Dimensionsp.	
Specific Product Precautions	·	1221




Compact Electro-Pneumatic Regulator


ITV0000 Series

(E UK RoHS



How to Order

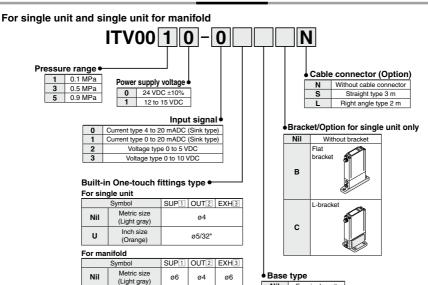

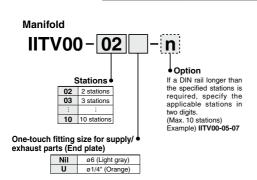

U

Inch size

(Orange)

ø1/4"

ø5/32'

* A DIN rail with the length specified by the number of stations is attached to the manifold. For dimensions of the DIN rail, refer to the external dimensions

How to Order Manifold Assembly (Example)

Indicate the part numbers of electro-pneumatic regulators to be mounted below the manifold part number.

Due to the common supply/exhaust feature, note that different pressure range combinations are not available.

IITV00-03......1 set (Manifold part no.)


For single unit

*ITV0030-3MS-----2 sets (Electro-pneumatic regulator part no. (Stations 1, 2)) *ITV0030-3ML-----1 set (Electro-pneumatic regulator part no. (Station 3))

Indicate part numbers in order starting from the first station on the D side.

► Caution) Combination with having different pressure ranges is not available due to common supply/exhaust features.

The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the electro-pneumatic regulator.

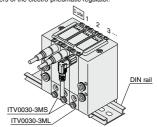



Specifications



Mode	ı	ITV001□	ITV003□	ITV005□		
Min. supply pressu	ıre	S	et pressure + 0.1 MF	Pa		
Max. supply press	ure	0.2 MPa	1.0 MPa			
Set pressure range	9	0.001 to 0.1 MPa	0.001 to 0.5 MPa	0.001 to 0.9 MPa		
	Voltage	24 V	DC ±10%, 12 to 15	VDC		
Power supply	Current		voltage 24 VDC type			
	consumption	Power supply volt	age 12 to 15 VDC ty	pe: 0.18 A or less		
Input signal	Voltage type	0	to 5 VDC, 0 to 10 VE	C		
iliput signai	Current type	4 to 20 m/	ADC, 0 to 20 mADC	(Sink type)		
Input impedance	Voltage type		Approx. 10 kΩ			
input impedance	Current type		Approx. 250 Ω			
Output signal*2	Analog output		Output impedance: A accuracy: ±6% F.S.			
Linearity			±1% F.S. or less			
Hysteresis		0.5% F.S. or less				
Repeatability		±0.5% F.S. or less				
Sensitivity			0.2% F.S. or less			
Temperature chara	acteristics	±	0.12% F.S./°C or les	ss		
Operating tempera	ture range	0 to	50°C (No condensa	tion)		
Enclosure			Equivalent to IP65*3	3		
Connection type		Вι	ıilt-in One-touch fittir	ngs		
	For single unit	Metric size	1, 2,	3: ø4		
Connection size	For single unit	Inch size	1, 2, 3	3: ø5/32"		
Connection Size	Manifold	Metric size	1, 3: ø	6, 2: ø4		
	waimolu	Inch size	1, 3: ø1/4", 2: ø5/32"			
Weight*1		100 g or less (Without options)				
*1 Indicates the weight	tht of a single un	it				

For IITV00-n

Total weight (g) ≤ Stations (n) x 100 + 130 (Weight of end block A, B assembly) + Weight (g) of DIN rail

*2 When measuring ITV analog output from 1 to 5 VDC, if the load impedance is less than 100 k Ω , the analog output monitor accuracy of ±6% F.S. or less may not be available. The product with an accuracy of within ±6% is supplied upon your request.

Output pressure remains unaffected. *3 When using under the conditions equivalent to IP65, connect the fitting or tube to the breathing hole before use. (For details, refer to "Specific Product Precautions 1" on page

1222.) * When there is a downstream flow consumption, pressure may become unstable depending on

piping conditions.

* When the input signal is at 0%, the exhaust solenoid valve is controlled to reduce the outlet pressure to zero. For this reason, a noise may be generated. This noise is normal and does not indicate a fault.

Accessory (Option)/Part Nos.

[Bracket]

Symbol

Description	Part No.	Weight
Flat bracket assembly (including mounting screws)	P39800022	10
L-bracket assembly (including mounting screws)	P39800023] '0

* When mounting, use a tightening torque of 0.3 N·m.

[Cable connector]

Description	Part No.	Weight
Cable connector (4 cores)/Straight type	P398000-500-3	50
Cable connector (4 cores)/Right angle type	P398000-501-2	50

[Cable connector specifications]

F390000-300-3, F390000-301-2						
Conductor	Nominal cross section	4 x AWG23				
Conductor	Outside diameter	Approx. 0.72 m				
Insulator	Outside diameter	Approx. 1.14 mm				
Sheath	Material	PVC				
Finishe	d outside diameter	ø4 mm				
Min.	bending radius	40 mm				




ITV0000 Series


Working Principle

When the input signal rises, the air supply solenoid valve ① turns ON. Due to this, part of the supply pressure passes through the air supply solenoid valve ① and changes to output pressure. This output pressure feeds back to the control circuit ④ via the pressure sensor ③. Here, pressure corrections continue until output pressure becomes proportional to the input signal, enabling output pressure that is proportional to the input signal.


Working Principle Diagram

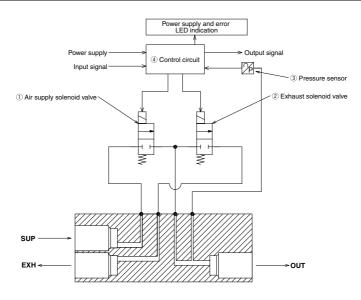



Block Diagram

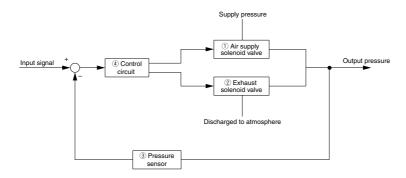


ITV001□ Series

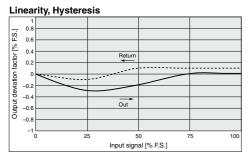


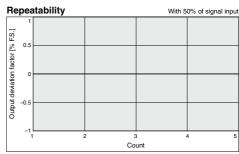


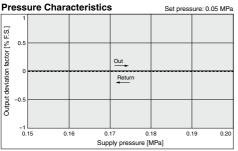


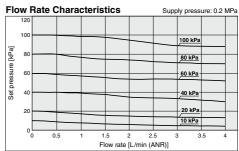


ITV003□ Series

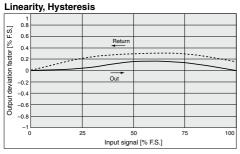

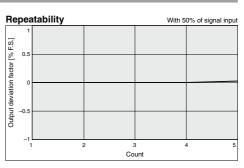


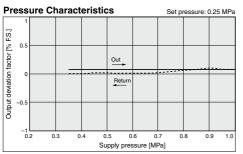

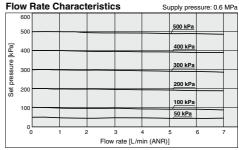



ITV0000 Series

ITV005□ Series

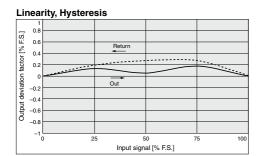




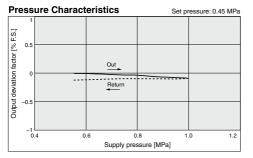

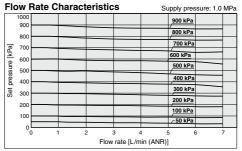

Compact Electro-Pneumatic Regulator ITV0000 Series

Dimensions

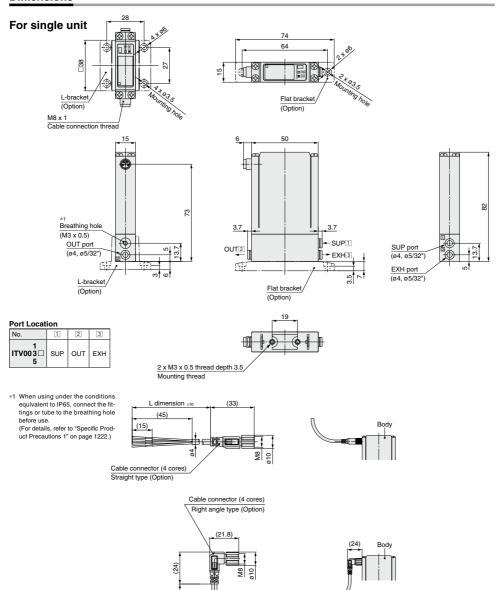



SMC


2000 ±50

Dimensions

Single unit for manifold




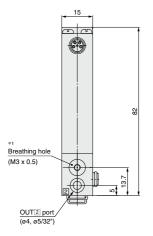

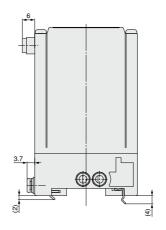




*1 When using under the conditions equivalent to IP65, connect the fittings or tube to the breathing hole before use. (For details, refer to "Specific Product Precautions 1" on page 1222.)



* For dimensions of the cable connector, refer to single unit on page 1179.

Dimensions


Manifold

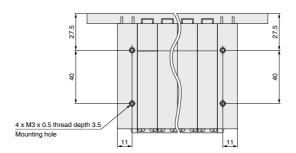



Port Location

No.	1	2	3
1 ITV003□ 5	SUP	OUT	EXH

* Stations are counted starting from the D side.

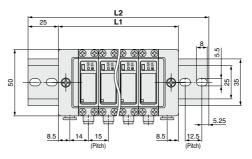

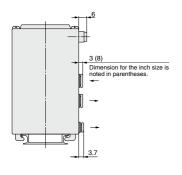

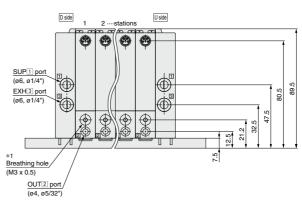

* For dimensions of the cable connector, refer to single unit on page 1179.

									[mm]
Manifold stations n	2	3	4	5	6	7	8	9	10
L1	60	75	90	105	120	135	150	165	180
L2	110.5	123	148	160.5	173	185.5	198	223	235.5
Weight of DIN rail [g]	20	22	27	29	31	34	36	41	43

*1 When using under the conditions equivalent to IP65, connect the fittings or tubing to the breathing hole before use.
(For details, refer to "Specific Product Precautions 1" on page 1222.)


Electro-Pneumatic Regulator

ITV1000/2000/3000 Series

CE UK CAL US ROHS



How to Order

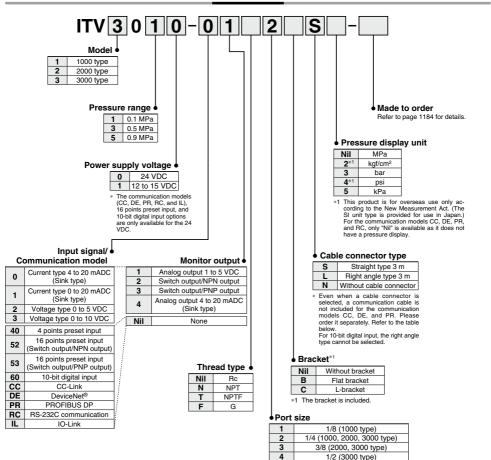

For communication cables, use the parts listed below (Refer to the M8/M12 connector in the Web Catalog for details.)

or order a product certified for the respective protocol (with M12 connector) separately.

Application	Communication cable part no.	Note
CC-Link compatibility	PCA-1567720 (Socket type)	A dedicated Bus adapter is included
CC-Link compatibility	PCA-1567717 (Plug type)	with the product.
DeviceNet®	PCA-1557633 (Socket type)	A T-branch connector is not included
compatibility	PCA-1557646 (Plug type)	with the product.*1
PROFIBUS DP	PCA-1557688 (Socket type)	A T-branch connector is not included
compatibility	PCA-1557691 (Plug type)	with the product.*1

^{*1} SMC does not provide T-branch connectors If required, purchase a commercially available T-branch connector.

ITV1000 ITV2000 ITV3000 Serial-communications

Symbol

Rated pressure

Output pressure [MPa]

0.005 MPa

Standard Specifications

		ITV101□*7	ITV103□*7	ITV105□*7			
Mod	el	ITV201□	ITV203□	ITV205□			
		ITV301□	ITV303□	ITV305□			
Min. supply pr	essure		Set pressure + 0.1 MPa				
Max. supply p	ressure	0.2 MPa	1.01	MPa			
Set pressure r		0.005 to 0.1 MPa	0.005 to 0.5 MPa	0.005 to 0.9 MPa			
	Voltage	24	VDC ±10%, 12 to 15 VI	OC .			
Power supply	Current	Power supply	voltage 24 VDC type: 0.	12 A or less*8			
	consumption		oltage 12 to 15 VDC type				
	Current type*2	4 to 20 n	nADC, 0 to 20 mADC (S	ink type)			
*8	Voltage type	(0 to 5 VDC, 0 to 10 VDC				
Input signal	Preset input	4 points (Negative	common), 16 points (No	common polarity)			
	Digital input		10 bits (Parallel)				
	Current type		250 Ω or less*6				
Input	Voltage type		Approx. 6.5 kΩ				
impedance	Preset input	Power supply voltage 24 VDC type: Approx. 4.7 kΩ					
inipedance	Freset iliput	Power supply	voltage 12 VDC type: A	pprox. 2.0 kΩ			
	Digital input		Approx. 4.7 kΩ				
*3	Analog	1 to 5 VDC (Output impedance: Approx. 1 kΩ)					
Output signal	output	4 to 20 mADC (Sink type) (Output impedance: 250 Ω or less)					
(Monitor		Output accuracy ±6% F.S. or less					
output)	Switch	NPN open collector output: Max. 30 V, 80 mA					
	output	PNP op	en collector output: Max	. 80 mA			
Linearity			±1% F.S. or less				
Hysteresis			0.5% F.S. or less				
Repeatability			±0.5% F.S. or less				
Sensitivity		0.2% F.S. or less					
Temperature ch			±0.12% F.S./°C or less				
Output pressure			±2% F.S. ±1 digit or less				
	Min. unit		f/cm ² : 0.01, bar: 0.01, ps				
Ambient and fluid	temperatures	0 1	to 50°C (No condensation	n)			
Enclosure			IP65				
	ITV10□□		rox. 250 g (Without option				
Weight*8, *9	ITV20□□		rox. 350 g (Without option				
	ITV30□□	Арр	rox. 645 g (Without option	ons)			

- *1 Please refer to Fig. 1 for the relationship between set pressure and input. Because the max. set pressure differs for each pressure display, refer to page 1227.
 *2 -2-wire type 4 to 20 mADC is not available. Power supply voltage (24 VDC or 12 to 15 VDC) is required.
 *3 Select either analog output or switch output.
- «S Select either analog output or switch output. Further, when switch output is selected, select either NPN output or PNP output. When measuring ITV analog output from 1 to 5 VDC, if the load impedance is less than 100 kΩ, the analog output monitor accuracy of within ±6% (full span) may not be available. The product with the accuracy of within ±6% is supplied upon your request. Output pressure remains unaffected.
 «A Adjustment of numerical values such as the zero/span adjustment or preset input type is set based on the min. units for output pressure display (e.g. 0.001 to 0.500 MPa). Note that the unit cannot be changed.
 «5 The min. unit for 0.9 MPa (130 psi) types is 1 psi.
 % Value for the state with no over current circuit included. If an allowance is provided for an over current circuit, the input impedance varies depending on the input current. This is 350 Ω or less for an input current of 20 mADC.
 % The ITV1000 series is a grease-free specification (parts in contact with fluid).
 % Refer to the table below for communication specifications.

- 9 Add 50 g for digital input type, 70 g for 16 points preset input type respectively.
 The above characteristics are confined to the static state. When air is consumed on the output side, the pressure
- When using under IP65 conditions, connect the fitting or tube to the solenoid valve EXH before use. (For details, refer to "Specific Product Precautions 4" on page 1225.)

Input signal [% F.S.] Fig. 1 Input/output characteristics chart


This range is outside of the control (output)


Communication Specifications (CC, DE, PR, RC, IL)

model

Model	ITV□0□0-CC	ITV□0□0-DE	ITV□0□0-PR	ITV□0□0-RC	ITV□0□0-IL
Protocol	CC-Link	DeviceNet®	PROFIBUS DP	RS-232C	IO-Link (Class A)
Version*1	Ver. 1.10	Volume 1 (Edition 3.8), Volume 3 (Edition 1.5)	DP-V0	_	Ver. 1.1
Communication speed	156 k/625 k 2.5 M/5 M/10 Mbps	125 k/250 k/500 kbps	9.6 k/19.2 k/45.45 k 93.75 k/187.5 k/500 k 1.5 M/3 M/6 M/12 Mbps	9.6 kbps	230.4 kbps (COM3)
Configuration file*2	_	EDS	GSD	_	IODD
I/O occupation area (input/output data)	4 words/4 words, 32 bits/32 bits (per station, remote device station)	16 bits/16 bits	16 bits/16 bits	_	4 bytes/2 bytes
Communication data resolution	12 bits (4096 resolution)	12 bits (4096 resolution)	12 bits (4096 resolution)	10 bits (1024 resolution)	12 bits (4096 resolution)
Fail safe	HOLD*3/CLEAR (Switch setting)	HOLD/CLEAR (Switch setting)	CLEAR	HOLD	HOLD/CLEAR
Electric insulation*4	Insulation	Insulation	Insulation	Non-insulation	Non-insulation
Terminating resistor	Built into the product (Switch setting)	Not built into the product	Built into the product (Switch setting)	_	_
Current consumption	0.16 A or less	0.14 A or less	0.16 A or less	0.12 A or less	0.12 A or less
ITV1000	330	320	350	320	320
Weight ITV2000	430	420	450	420	420
ITV3000	730	720	750	720	720

- *1 Please note that versions are subject to change.
- *2 Configuration files can be downloaded from the operation manual page on the SMC website: https://www.smcworld.com
 *3 The output HOLD value when a CC-Link communications error occurs can be set based on the bit area data.
- The insulation between the electrical signal of the communication system and ITV power supply

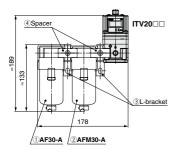

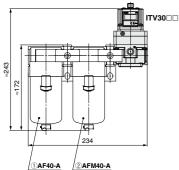

Made to Order

(Refer to pages 1203 to 1207 for details.)

Symbol	Specifications
X102	Reverse type
X224	High-pressure type (SUP 1.2 MPa, OUT 1.0 MPa)
X25	Set pressure range: 1 to 100 kPa (Excludes the ITV3000 series)
X256	Analog output, Current type (Source type)
X88	High-speed response time type (Excludes the ITV3000 series)
X26	For manifold mounting (Excludes the ITV3000 series)
X410	Linearity: ±0.5% F.S. or less
X420	With alarm output

- * Manifolds are compatible with 2 to 8 stations. Please contact SMC for 9 stations or more.
- Products without symbols are also compatible.
 Please contact SMC separately.
- Compliant with CE/UKCA marking

Model	Bracket tightening torque
ITV1000	0.76 ±0.05 N·m
ITV2000/3000	1.5 ±0.05 N⋅m

Modular Products and Accessory Combinations

Applicable products and accessories	Applicable model		
Applicable products and accessories	ITV20□□	ITV30□□	
① Air filter	AF30-A	AF40-A	
② Mist separator	AFM30-A	AFM40-A	
③ L-bracket	B310L-A	B410L-A	
4 Spacer	Y30-A	Y40-A	
5 Spacer with L-bracket (3 + 4)	Y30L-A	Y40L-A	
6 Spacer with T-bracket	_	Y40T-A	

* For ITV10 ., use a modular adapter (Refer to the Web Catalog for details).

Accessories (Option)/Part Nos.

[Bracket]

Applicable model Description		Part no.	Weight
ITV10□□	Flat broadest assembly (including magning assembly	P398010-600	
ITV20□□, 30□□	Flat bracket assembly (including mounting screws)	P398020-600	90
ITV10□□	I brooket accombly (including magnific covery)	P398010-601	90
ITV20□□, 30□□	L-bracket assembly (including mounting screws)	P398020-601]

[Cable connector]

Input signal/	Cable connector (Shipped together)			
Communication model	Cable specifications	Power supply	Communication (For signal)	Weight
Current type Voltage type	Straight type 3 m	P39802	20-500-3	
4 points preset input IO-Link	Right angle type 3 m	P398020-501-3		180
16 points preset input RS-232C	Straight type 3 m	P398020-500-3	P398020-502-3	each
communication	Right angle type 3 m	P398020-501-3	P398020-503-3	
10-bit digital input	Straight type 3 m	INI-39	8-0-59	310
CC-Link PROFIBUS DP	Straight type 3 m	P398020-500-3	Please order separately.	180
DeviceNet®	Right angle type 3 m	P398020-501-3	Refer to page 1182.	180


[Bus adapter]


[Dao adapto.]			
Applicable model	Description	Part no.	Weight
CC-Link	Bus adapter (Included with the product)	EX9-ACY00-MJ	35

L-bracket

Dimensions

Flat bracket





(8.5) 33 2.3



Working Principle

ITV1000

When the input signal rises, the air supply solenoid valve ① turns ON, and the exhaust solenoid valve ② turns OFF. Therefore, supply pressure passes through the air supply solenoid valve ① and is applied to the pilot chamber ③. The pressure in the pilot chamber ③ increases and operates on the upper surface of the diaphragm ④.

As a result, the air supply valve $\hat{\mathbb{S}}$ linked to the diaphragm $\hat{\mathbb{A}}$ opens, and a portion of the supply pressure becomes output pressure.

This output pressure feeds back to the control circuit ® via the pressure sensor ⑦. Here, a correct operation functions until the output pressure is proportional to the input signal, making it possible to always obtain output pressure proportional to the input signal.


Working Principle Diagram Pressure display Power supply Output signal 8 Control circuit Input signal Pressure (7) Pressure sensor 1 Air supply 2 Exhaust Power supply Output signal ® Control solenoid solenoid valve valve Input signal FXH 7 Pressure sensor 2 Exhaust 1 Air supply solenoid valve solenoid valve 4 Diaphragm EXH 3 Pilot chamber 6 Exhaust valve 4 Diaphragm Pilot chamber Supply valve **EXH** Supply valve OUT SUP OUT SUP EXH 6 Exhaust valve


ITV2000/3000

Block Diagram


ITV101□ Series



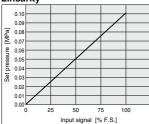


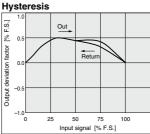


Repeatability

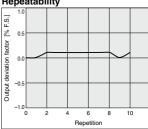


Pressure

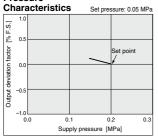

Flow Rate

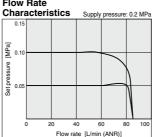



Relief

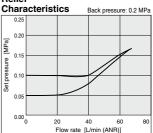


ITV201 ☐ Series

Linearity

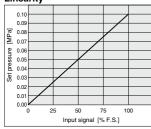


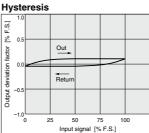


Repeatability

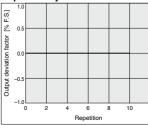


Pressure

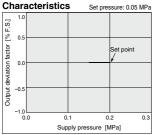

Flow Rate

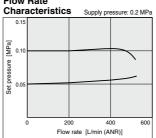


Relief

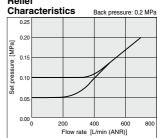


ITV301□ Series




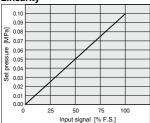


Hysteresis

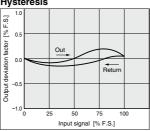


Repeatability

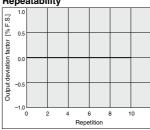


Pressure

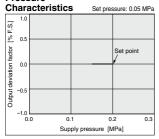

Flow Rate

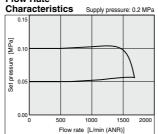


Relief

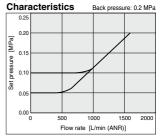


ITV103□ Series




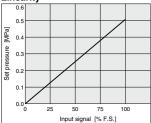


Hysteresis

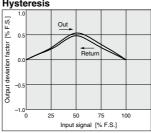


Repeatability

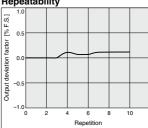


Pressure

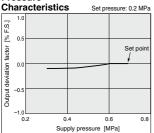

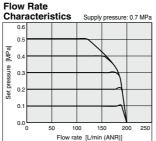


Relief

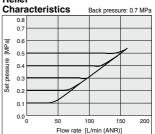


ITV203 ☐ Series


Linearity

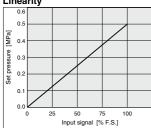


Hysteresis

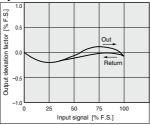


Repeatability

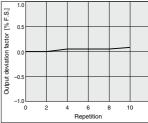


Pressure

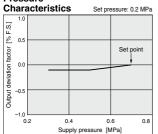

Flow Rate

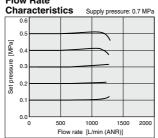



Relief

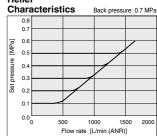


ITV303□ Series



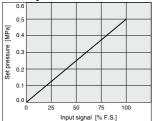


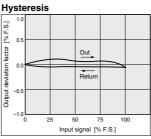


Repeatability

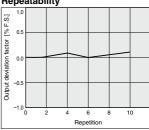


Pressure

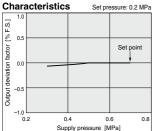

Flow Rate

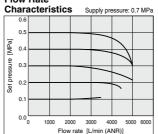


Relief

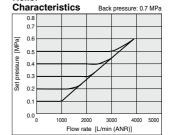




ITV105□ Series




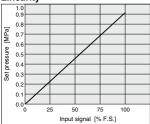


Hysteresis

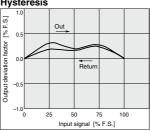


Repeatability

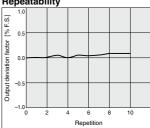


Pressure

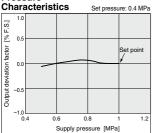

Flow Rate

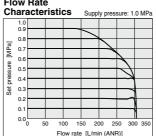



Relief

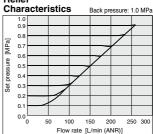


ITV205 ☐ Series

Linearity

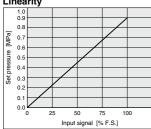


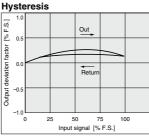


Repeatability

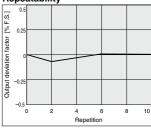


Pressure

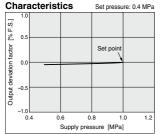

Flow Rate

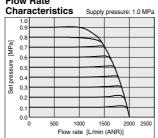


Relief

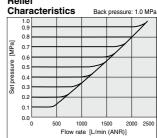


ITV305□ Series




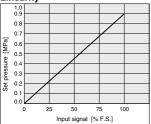


Hysteresis

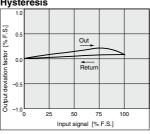


Repeatability

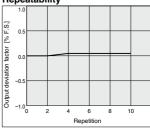


Pressure

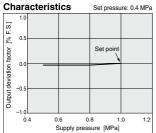

Flow Rate

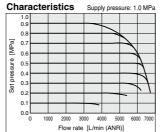


Relief

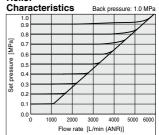



Construction

ITV1000

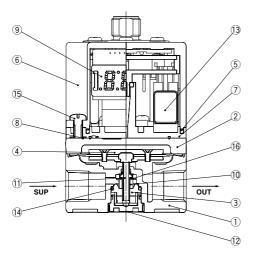


Main Component Parts

	No.	Description	Material
•	1	Body	Aluminum alloy
	2	Cover	Aluminum alloy
•	3	Valve guide	Resin
			Aluminum alloy
•	4	Diaphragm assembly	HNBR
			Steel
	5	Seal	NBR
	6	Bowl assembly	Resin
	0	Bowl assembly	Silicone rubber
	7	Sub-plate	Resin
	8	Seal	NBR
	9	Control circuit assembly	_
•	10	Bumper	NBR
	11	Valve	Stainless steel
•	"	vaive	HNBR
•	12	Guide retainer	Aluminum alloy
	13	Solenoid valve	_
•	14	O-ring	HNBR
	15	Cross recessed round head screw	Steel
•	16	Flat washer	Stainless steel
٠.			

^{*} Parts in contact with fluid are indicated with a mark .

ITV2000

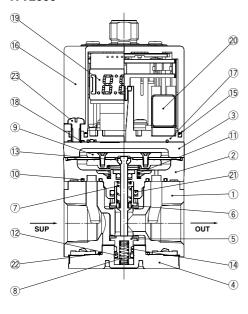

Main Component Parts


-		Component raits	
	No.	Description	Material
♦ _	1	Body	Aluminum alloy
♦ _	2	Intermediate body	Aluminum alloy
	3	Cover	Aluminum alloy
•	4	Valve guide	Aluminum alloy
•	5	Valve (Supply valve)	HNBR/Brass
•	6	Valve (Exhaust valve)	HNBR/Brass
•	7	Valve spring	Stainless steel
•	8	Valve spring	Stainless steel
			Stainless steel
	9	Diaphragm assembly	Aluminum alloy
•	9	Diaphragin assembly	HNBR
			Steel
•	10	Seal	NBR
•	11	Bias spring	Stainless steel
•	12	O-ring	NBR
•	13	Cotter	Stainless steel
•	14	Wear ring	Resin
	15	Seal	NBR
	16	Bowl assembly	Resin
	16		Silicone rubber
_	17	Sub-plate	Resin
_	18	Seal	NBR
	19	Control circuit assembly	_
_	20	Solenoid valve	_
•	21	O-ring	NBR
	22	O-ring	NBR
-	23	Cross recessed round head screw	Steel
-			

^{*} Parts in contact with fluid are indicated with a mark .



Construction

ITV3000

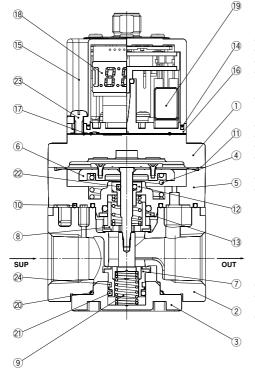

Main Component Parts

	IVIAIII	Component Parts	
	No.	Description	Material
	1	Cover	Aluminum alloy
•	2	Body	Aluminum alloy
•	3	Valve guide	Aluminum alloy
•	4	Bias spring	Stainless steel
•	5	Intermediate body	Aluminum alloy
			HNBR
	6	Diaphragm assembly	Stainless steel
•	0	Diaphragin assembly	Aluminum alloy
			Steel
•	7	Valve (Supply valve)	HNBR/Brass
•	8	Valve (Exhaust valve)	HNBR/Brass
•	9	Valve spring	Stainless steel
•	10	Seal	NBR
	11	Seal	NBR
•	12	Rod guide	Brass
•	13	O-ring retainer	Aluminum alloy
	14	Seal	NBR
	15	Bowl assembly	Resin
	15	Bowl assembly	Silicone rubber
	16	Sub-plate	Resin
	17	Seal	NBR
	18	Control circuit assembly	_
	19	Solenoid valve	_
	20	O-ring	NBR
•	21	O-ring	NBR
•	22	O-ring	NBR
	23	Cross recessed round head screw	Steel
•	24	Wear ring	Resin
	. D	in a contract contract flooring and to all a second	

^{*} Parts in contact with fluid are indicated with a mark ◆.


SMC


Dimensions


ITV10□□

Flat bracket


* Do not attempt to rotate, as the cable connector does not turn.

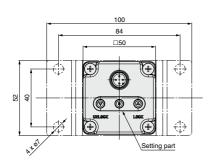


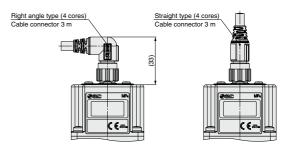

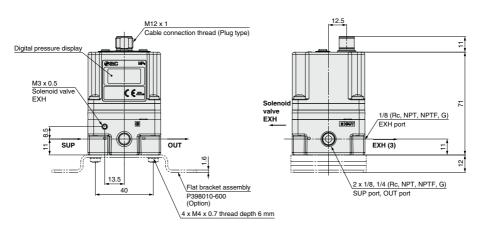


L-bracket

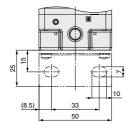




Dimensions (16 points preset input, 10-bit digital input, CC-Link, DeviceNet®)


16 points preset input

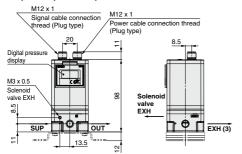

10-bit digital input

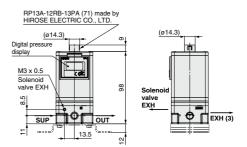


CC-Link: ITV10□0-CC

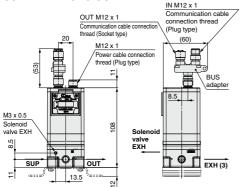

* Dimensions not shown are the same as on page 1194.


DeviceNet®: ITV10□0-DE

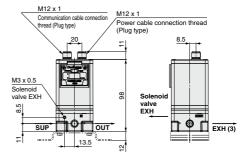

* Dimensions not shown are the same as on page 1194.


Dimensions (PROFIBUS DP, RS-232C, IO-Link)

PROFIBUS DP: ITV10□0-PR

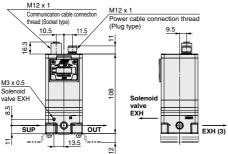


* Dimensions not shown are the same as on page 1194.


RS-232C: ITV10□0-RC

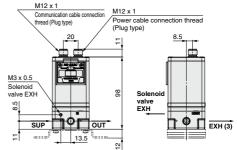


* Dimensions not shown are the same as on page 1194.

IO-Link: ITV10□0-IL

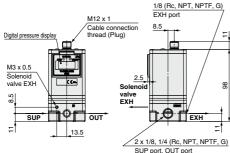







Dimensions


ITV20□□

Flat bracket


* Do not attempt to rotate, as the cable connector does not turn.

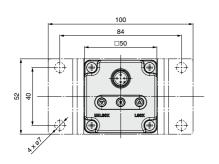


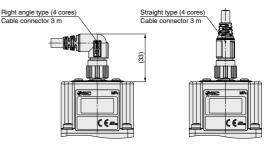

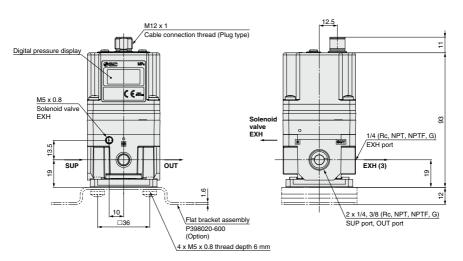

L-bracket

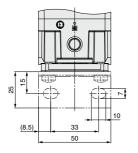


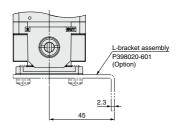

Dimensions (16 points preset input, 10-bit digital input, CC-Link, DeviceNet®)


16 points preset input M12 x 1 M12 x 1 Signal cable connection Power cable connection thread thread (Plug type) (Plug type) Digital pressure display M5 x 0.8 Solenoid valve EXH 120 Soler 13.5 valve EXH (3) OUT SUF 10

10-bit digital input

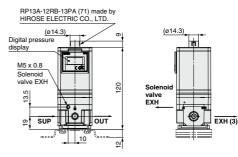

CC-Link: ITV20□0-CC IN M12 x 1 M12 x 1 Communication cable connection Power cable connection thread thread (Plug type) (Plug type) OUT M12 x 1 Communication cable connection thread 53) (Socket type) BUS adapter 8.5 M5 x 0.8 Solenoid 8 valve EXH Solenoid 13.5 valve FXH SUF OUT EXH (3) 6 10


DeviceNet®: ITV20□0-DE

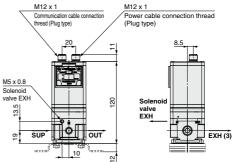

* Dimensions not shown are the same as on page 1197.


Dimensions (PROFIBUS DP, RS-232C, IO-Link)

PROFIBUS DP: ITV20□0-PR

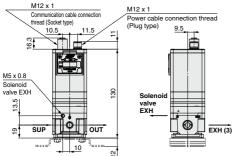


* Dimensions not shown are the same as on page 1197.

RS-232C: ITV20□0-RC

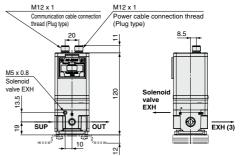


* Dimensions not shown are the same as on page 1197.


IO-Link: ITV20 0-IL

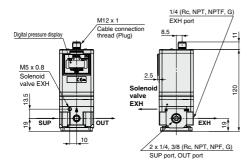





 Order communication cable (other than 16 points, RS-232C) separately. (Refer to page 1182.)



 Do not attempt to rotate, as the cable connector does not turn.

Straight type (4 cores)


Cable connector 3 m


Dimensions


ITV30□□

Flat bracket


* Do not attempt to rotate, as the cable connector does not turn.

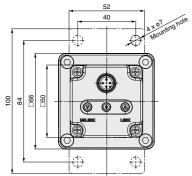


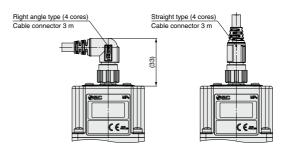

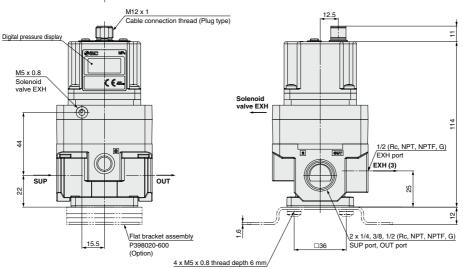

L-bracket

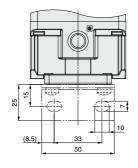

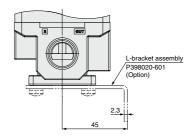

1200



Dimensions (16 points preset input, 10-bit digital input, CC-Link, DeviceNet®)


51


₫,

EXH (3)

16 points preset input M12 x 1 M12 x 1 Signal cable connection Power cable connection thread thread (Plug type) (Plug type) Digital pressure display M5 x 0.8 Solenoid Solenoid valve valve EXH 41 EXH 4 EXH (3) SUP OUT 15.5 2

10-bit digital input

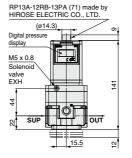



M12 x 1 Communication cable connection Power cable connection thread thread (Plug type) (Plug type) 20 (60) OUT M12 x 1 Communication cable connection thread BUS (Socket type) adapter M5 x 0.8 Solenoid valve

5

IN M12 x 1

Solenoid

EXH

CC-Link: ITV30□-CC

EXH


4

SUF

* Dimensions not shown are the same as on page 1200.

15.5

DeviceNet®: ITV30□-DE

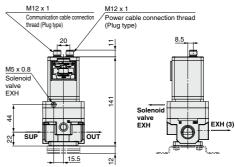

* Dimensions not shown are the same as on page 1200.



Dimensions (PROFIBUS DP, RS-232C, IO-Link)

PROFIBUS DP: ITV30□-PR M12 x 1 M12 x 1 Communication cable connection thread (Socket type Power cable connection thread (Plug type) 10.5 11.5 9.5 6.3 M5 x 0.8 Solenoid valve EXH 151 151 Solenoid 4 valve EXH OUT SUP 15.5

* Dimensions not shown are the same as on page 1200.

RS-232C: ITV30□-RC M12 x 1 M12 x 1 Communication cable connection Power cable connection thread fread (Plug type) (Plug type) M5 x 0.8 Solenoid valve FXH 141 Solenoid valve 4 EXH (3) EXH


Dimensions not shown are the same as on page 1200.


ß


15.5

IO-Link: ITV30□0-IL

separately. (Refer to page 1182.)

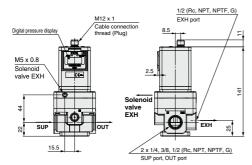







ITV1000/2000/3000 Series Made to Order



Made to Order
Please contact SMC for detailed dimensions, specifications, and lead times,



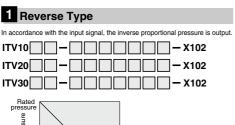




ITV20 5 — X224

ITV30 5 — X224

* For the preset input type, the digital input type, and communication models,

contact SMC for availability.



Input/output characteristics chart


- * The \square in the part numbers indicate the model nos. of the standard products.
- Excludes the preset input type and the digital input type
- * For communication models, contact SMC for availability.

4 Analog Output, Current Type (Source Type)

Monitor output is analog output from 4 to 20 mADC (source type).

ITV10 0 - 4 X25	6
ITV20 0 - 4	6
ITV30 0 - 4 0 0 - X25	6

Monitor output wiring diagram




 For the preset input type, the digital input type, and communication models, contact SMC for availability.

5 With Gauge Port

It is possible to check the outlet pressure when the product is in a de-energized state.

ITV10 X40	0
ITV20	0
ITV30 - X40	0

Model	G port (Rc, NPT, NPTF, G)
ITV1000 type	1/8
ITV2000 type	1/8
ITV3000 type	1/4

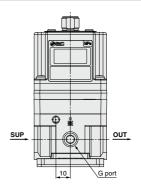

5 High-Speed Response Time Type

Pressure response with no load is approx. 0.1 s.


- This is not a guaranteed value as it depends on the operating environment.
- When the input signal is at 0%, the exhaust solenoid valve is controlled to reduce the outlet pressure to zero. For this reason, a noise may be generated. This noise is normal and does not indicate a fault.
- * When operating for the first time, be sure that the power supply voltage and supply pressure are appropriate in relation to the operating environment and conditions.
- * For this product, by conducting the procedure described below (steps A to D), the parameters compatible with the power supply voltage and supply pressure in use can be obtained.

If the desired output pressure values cannot be reached due to fluctuations in the operating conditions, etc., perform this operation.

- A) Change the power supply voltage in use by ± 0.4 VDC or more.
- B) After inputting the supply pressure used on the inlet side of the ITV, adjust the input signal as described below.
 - $(0\% \rightarrow 100\% \rightarrow 0\%)$ (Change it gradually, waiting 10 s or more between each adjustment.)
 - ** Please contact SMC if difficulty inputting signals occurs.
- C) Change the power supply voltage according to the operating conditions/requirements, and repeat step B.
- D) Input the power supply voltage and a 0% signal, and retain for 6 minutes or more. (Supply pressure is not required.)

When re-obtaining the parameters, we recommend operating with the air sealed in the piping in order to reliably reach the set pressure. In addition, if step A above cannot be carried out, it is possible to conduct an "Initialize" operation as described in the operation manual in order to reset the parameters of the product to those set at the time of shipment. When conducting an "Initialize" operation, the min. set pressure (F_1) and the max. set pressure (F_2) will be reset.

* There is no gain or sensitivity adjustment function.

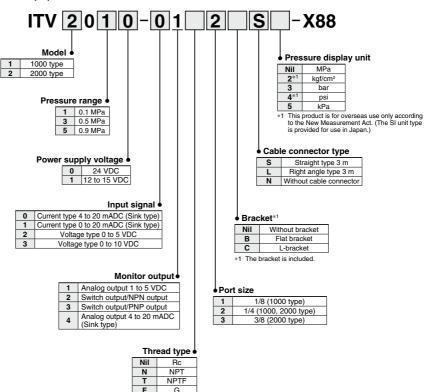


Made to Order ITV1000/2000/3000 Series


6 Manifold Specifications (Excludes the ITV3000 series)

2 through 8-station manifold

How to Order Manifolds

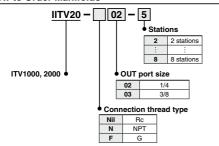

How to Order for Manifold Mounting




- * The \square in the part numbers indicate the model nos. of the standard products.
- For communication models, contact SMC for availability.
- The thread type is Rc only.
- For the ITV1000 series, the port size is 1/8 only.
- For the ITV2000 series, the port size is 1/4 only.
- The bracket accessory cannot be selected.
- * Not applicable to the ITV3000 series

IITV20-02-31 set (3-station manifold base part no.)
*ITV1030-311S-X261 set (Electro-pneumatic regulator part no.)*2
*P398020-131 set (Blanking plate assembly part no.)
*ITV2050-212S-X261 set (Electro-pneumatic regulator part no.)*2
. T

 The asterisk denotes the symbol for the assembly. Prefix it to the part numbers of the electro-pneumatic regulator, etc.

How to Order Manifold Assemblies

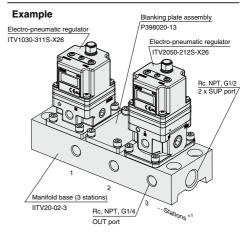

* Refer to the table below for possible mixed combination.

Model	ITV101□	ITV103□	ITV105□	ITV201□	ITV203□	ITV205□
ITV101□	•	_	_	•	_	_
ITV103□	_	•	•	_	•	•
ITV105□	_	•	•	_	•	•
ITV201□	•	_	_	•	_	_
ITV203□	_	•	•	_	•	•
ITV205□	_	•	•	_	•	•


- *1 Electro-pneumatic regulators are counted starting from station 1 on the left side with the OUT ports in the front.
- *2 The port size for mounted electro-pneumatic regulators is Rc1/8 (ITV1000), Rc1/4 (ITV2000) only.
- When there is a large number of stations, use piping with the largest possible inside diameter for the supply side, such as steel piping.
 The use of the straight type cable connector is recommended. To mount right
- angle type, be certain to check that no possible interference occurs.
- When mounting a blanking plate and the regulator with a different pressure set, please inform SMC of the order of a manifold station beside a purchase order.



ITV1000/2000/3000 Series

7 Linearity: ±0.5% F.S. or Less

Application examples: Polishing equipment and peripheral equipment for wafers, LCD glasses, color filters, etc.

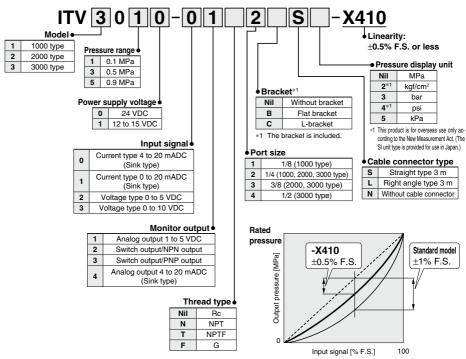

The graph shown above is a typical example. (This graph shows that the output pressure curve is in a negative range when compared to the ideal line.)

Specifications

	· · · · · · · · · · · · · · · · · · ·				
Fluid		Air			
Min. supply pressure		Set pressure + 0.1 MPa			
Max. supply pres	sure	1.0 MPa (Pressure range 0.1 MPa type: 0.2 MPa)			
Proof pressure	(Supply side)	1.5 MPa (Pressure range 0.1 MPa type: 0.3 MPa)			
Fiooi piessuie	(Output side)	1 MPa (Pressure range 0.1 MPa type: 0.2 MPa)			
Set pressure rang	ge	1: 0.005 to 0.1 MPa, 3: 0.005 to 0.5 MPa, 5: 0.005 to 0.9 MPa			
Power supply vol	ltage	0: 24 VDC ±10%, 1: 12 to 15 VDC			
Current consump	tion	0.12 A or less (24 VDC ±10% type)			
Current consump	otion	0.18 A or less (12 to 15 VDC type)			
Input signal		0: 4 to 20 mA, 1: 0 to 20 mA, 2: 0 to 5 VDC, 3: 0 to 10 VDC			
Input impedance		Voltage type: Approx. 6.5 kΩ, Current type: 250 Ω or less			
Output signal		Analog output: 1 to 5 VDC/4 to 20 mADC, Switch output (NPN/PNP)			
Linearity		±0.5% F.S. or less			
Hysteresis		0.5% F.S. or less			
Repeatability		±0.5% F.S. or less			
Sensitivity		0.2% F.S. or less			
Temperature cha	racteristics	±0.12% F.S./°C or less			
Outnut program display	Accuracy	±2% F.S. ±1 digit or less			
Output pressure display	Min. unit	MPa: 0.001, kgf/cm²: 0.01, bar: 0.01, psi: 0.1, kPa: 1			
Ambient and fluid t	emperatures	0 to 50°C (No condensation)			
Enclosure		IP65			
Weight		ITV10□□: Approx. 250 g, ITV20□□: Approx. 350 g, ITV30□□: Approx. 645 g (Without brackets)			


The above characteristics (specifications) are confined to the static state. When air is consumed on the output side, the pressure may fluctuate.



Made to Order ITV1000/2000/3000 Series

8 With Alarm Output

Alarm is output if the set pressure is not reached or maintained for 5 seconds or more. **Application examples:** Pressure management for thrust control, etc.

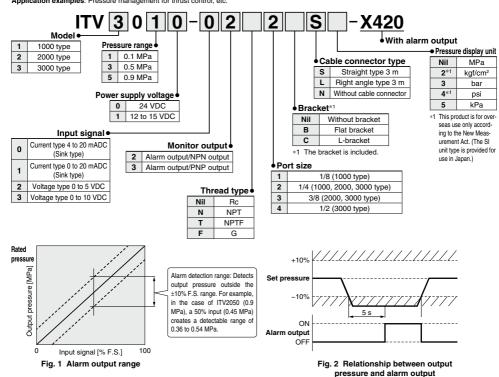

Specifications

Fluid		Air			
Min. supply press	sure	Set pressure + 0.1 MPa			
Max. supply pres	sure	1.0 MPa (Pressure range 0.1 MPa type: 0.2 MPa)			
Proof pressure	(Supply side)	1.5 MPa (Pressure range 0.1 MPa type: 0.3 MPa)			
Proof pressure	(Output side)	1 MPa (Pressure range 0.1 MPa type: 0.2 MPa)			
Set pressure range	ge	1: 0.005 to 0.1 MPa, 3: 0.005 to 0.5 MPa, 5: 0.005 to 0.9 MPa			
Power supply vol	tage	0: 24 VDC ±10%, 1: 12 to 15 VDC			
Current consump	tion	0.12 A or less (24 VDC ±10% type)			
Current consump	ition	0.18 A or less (12 to 15 VDC type)			
Input signal		0: 4 to 20 mA, 1: 0 to 20 mA, 2: 0 to 5 VDC, 3: 0 to 10 VDC			
Input impedance		Voltage type: Approx. 6.5 kΩ, Current type: 250 Ω or less			
Output signal		Alarm output (NPN/PNP)			
Linearity		±1.0% F.S. or less			
Hysteresis		0.5% F.S. or less			
Repeatability		±0.5% F.S. or less			
Sensitivity		0.2% F.S. or less			
Temperature cha	racteristics	±0.12% F.S./°C or less			
Output pressure display	Accuracy	±2% F.S. ±1 digit or less			
Output pressure display	Min. unit	MPa: 0.001, kgf/cm²: 0.01, bar: 0.01, psi: 0.1, kPa: 1			
Ambient and fluid to	emperatures	0 to 50°C (No condensation)			
Enclosure		IP65			
Weight		ITV10□□: Approx. 250 g, ITV20□□: Approx. 350 g, ITV30□□: Approx. 645 g (Without brackets)			

The above characteristics (specifications) are confined to the static state. When air is consumed on the output side, the pressure may fluctuate.



Compact Vacuum Regulator


ITV009□ Series

(E UK ROHS




How to Order



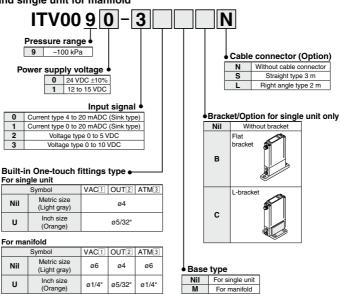

Manifold

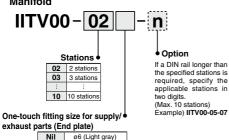

* A DIN rail with the length specified by the number of stations is attached to the manifold. For dimensions of the DIN rail, refer to the external dimensions.

ø1/4" (Orange)

How to Order Manifold Assembly (Example)

Indicate the part numbers of vacuum regulators to be mounted below the manifold part number.

Example)

Due to the common supply/exhaust feature, note that different pressure range combinations are not available.

IITV00-03.....1 set (Manifold part no.)


*ITV0090-3MS-----2 sets (Vacuum regulator part no. (Stations 1, 2)) *ITV0090-3ML-----1 set (Vacuum regulator part no. (Station 3))

Indicate part numbers in order starting from the first station on the D side

> ► Caution) Combination with having different pressure ranges is not available due to common supply/exhaust features.

The asterisk denotes the symbol for the assembly.

Prefix it to the part numbers of the vacuum regulator.

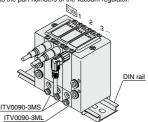



Specifications



Model		ITV009□			
Min. supply pressu	ıre	Set pressure – 1 kPa			
Max. supply press	ure	-101 kPa			
Set pressure range	•		-1 to -100 kPa		
	Voltage		24 VDC ±10%, 12 to 15 VDC		
Power supply	Current consumption	Power supply voltage 24 VDC type: 0.12 A or less Power supply voltage 12 to 15 VDC type: 0.18 A or less			
In to all	Voltage type		0 to 5 VDC, 0 to 10 VDC		
Input signal	Current type	4 to 2	0 mADC, 0 to 20 mADC (Sink type)		
Innut impodence	Voltage type		Approx. 10 kΩ		
Input impedance	Current type		Approx. 250 Ω		
Output signal*2	Analog output	1 to 5 VDC (Output impedance: Approx. 1 kΩ) Output accuracy: ±6% F.S. or less			
Linearity		±1% F.S. or less			
Hysteresis		0.5% F.S. or less			
Repeatability		±0.5% F.S. or less			
Sensitivity		0.2% F.S. or less			
Temperature chara	acteristics	±0.12% F.S./°C or less			
Operating tempera	ture range	0 to 50°C (No condensation)			
Enclosure			IP65 equivalent*3		
Connection type			Built-in One-touch fittings		
	For single	Metric size	1, 2, 3: ø4		
Connection size	unit	Inch size	1, 2, 3: ø5/32"		
Connection size	Manifold	Metric size	1, 3: ø6, 2: ø4		
	Marinold	Inch size	1, 3: ø1/4", 2: ø5/32"		
Weight*1			100 g or less (Without options)		
*1 Indicates the weight of a single unit					

e weight of a single unit

For IITV00-n

Total weight (g) ≤ Stations (n) x 100 + 130 (Weight of end block A, B assembly) + Weight (g)

of DIN rail

2 When measuring ITV analog output from 1 to 5 VDC, if the load impedance is less than 100 KtQ, the analog output monitor accuracy of ±6% F.S. or less may not be available. The product with an accuracy of within ±6% is supplied upon your request.

Output pressure remains unaffected. *3 When using under the conditions equivalent to IP65, connect the fitting or tube to the breathing hole before use. (For details, refer to "Specific Product Precautions 1" on page

- * When there is a downstream flow consumption, pressure may become unstable depending on
- piping conditions.

 * When the power is turned on, a noise may be generated. This noise is normal and does not indicate a fault.

Symbol

1222.)

Accessory (Option)/Part Nos.

[Bracket]

Description	Part No.	Weight
Flat bracket assembly (including mounting screws)	P39800022	10
L-bracket assembly (including mounting screws)	P39800023] '0

* When mounting, use a tightening torque of 0.3 N·m.

[Cable connector]

[Gasic Connector]							
Description	Part No.	Weight					
Cable connector (4 cores)/Straight type	P398000-500-3	50					
Cable connector (4 cores)/Right angle type	P398000-501-2	50					

[Cable connector specifications]

P398000-500-3, P398000-501-2

. 000000 000 0,1 000000 001 2							
Conductor	Nominal cross section	4 x AWG23					
Conductor	Outside diameter	Approx. 0.72 m					
Insulator	Outside diameter	Approx. 1.14 mm					
Sheath	Material	PVC					
Finishe	d outside diameter	ø4 mm					
Min.	40 mm						







Working Principle

When the input signal rises, the vacuum pressure solenoid valve ① turns ON. Due to this, part of the vacuum pressure (VAC.) passes through the vacuum pressure solenoid valve ① and changes to a vacuum pressure. This vacuum pressure feeds back to the control circuit ④ via the pressure sensor ③. Here, the vacuum pressure solenoid valve and the atmospheric pressure solenoid valve work alternately to make continuous pressure corrections until vacuum pressure becomes proportional to the input signal, thus, supplying vacuum pressure that is consistently proportional to the input signal.

Working Principle Diagram

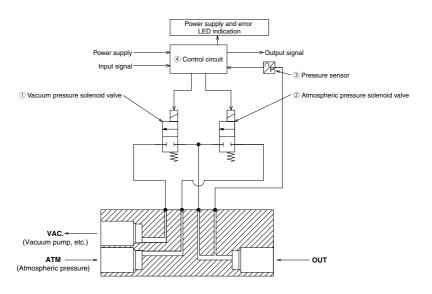



Block Diagram

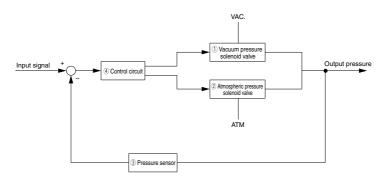



Compact Vacuum Regulator $ITV009 \square$ Series

ITV009□ Series

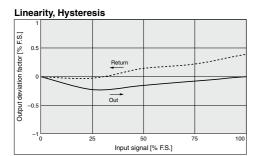

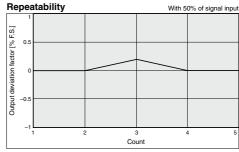


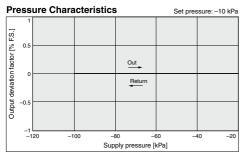

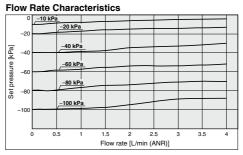


ITV009□ Series


Dimensions

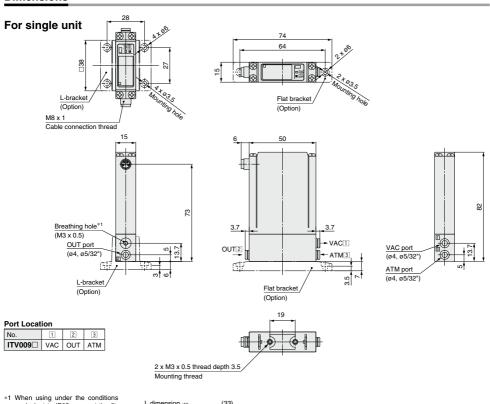



*1 When using under the conditions equivalent to IP65, connect the fittings or tube to the breathing hole before use.

(For details, refer to "Specific Product Precautions 1" on page 1222.)












Dimensions

Single unit for manifold



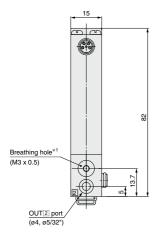


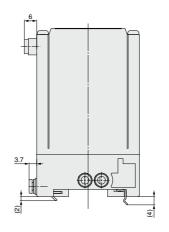



*1 When using under the conditions equivalent to IP65, connect the fittings or tube to the breathing hole before use.

(For details, refer to "Specific Product Precautions 1" on page 1222.)




* For dimensions of the cable connector, refer to single unit on page 1212.

ITV009□ Series

Dimensions


Manifold

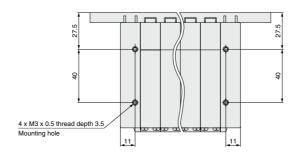



Port Location

i oit Looution						
No.	1	2	3			
ITV009□	VAC	OUT	ATM			

Stations are counted starting from the D side.

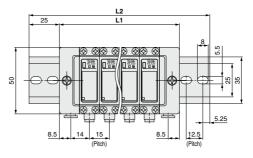

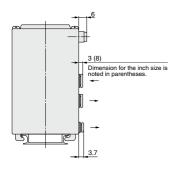

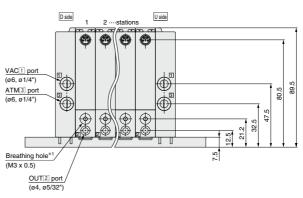

* For dimensions of the cable connector, refer to single unit on page 1212.

									[mm]
Manifold stations n	2	3	4	5	6	7	8	9	10
L1	60	75	90	105	120	135	150	165	180
L2	110.5	123	148	160.5	173	185.5	198	223	235.5
Weight of DIN rail [g]	20	22	27	29	31	34	36	41	43

*1 When using under the conditions equivalent to IP65, connect the fittings or tubing to the breathing hole before use.

(Exceptible, refer to "Specific Productions and the production of the p

(For details, refer to "Specific Product Precautions 1" on page 1222.)


Electronic Vacuum Regulator

ITV2090/2091 Series

CE UK CRU'US (ROHS)



How to Order

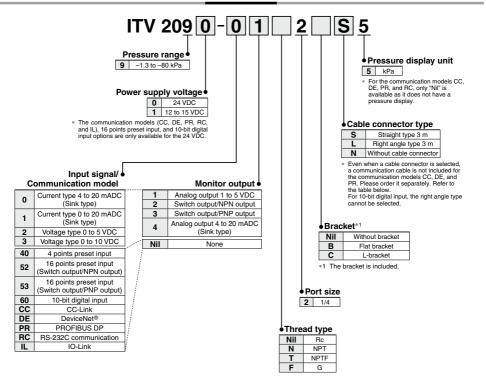

For communication cables, use the parts listed below (Refer to the M8/M12 connector in the Web Catalog for details.)

or order the product certified for the respective protocol (with M12 connector) separately

or order the product contined for the respective protector (with in 12 confidence) coparatory.							
Application	Communication cable part no.	Note					
CC-Link compatibility	PCA-1567720 (Socket type)	A dedicated Bus adapter is included					
CC-Link compatibility	PCA-1567717 (Plug type)	with the product.					
DeviceNet®	PCA-1557633 (Socket type)	A T-branch connector is not included					
compatibility	PCA-1557646 (Plug type)	with the product.*1					
PROFIBUS DP	PCA-1557688 (Socket type)	A T-branch connector is not included					
compatibility	PCA-1557691 (Plug type)	with the product.*1					


^{*1} SMC does not provide T-branch connectors. If required, purchase a commercially available T-branch connector.

For the stepless control of vacuum pressure in proportion to electrical signals





Piping/Wiring Diagram



Standard Specifications

Model		ITV2090	ITV2091		
Min. supply vacuu	um pressure*1	Set pressure – 13.3 kPa			
Max. supply vacu	um pressure	-101 kPa			
Set pressure rang	je	-1.3 to	-80 kPa		
	Voltage	24 VDC ±10%	12 to 15 VDC		
Power supply	Current consumption	Power supply voltage 24 VDC type: 0.12 A or less*6 Power supply voltage 12 to 15 VDC type: 0.18 A or less			
	Current type*2	4 to 20 mADC, 0 to 2	20 mADC (Sink type)		
1	Voltage type	0 to 5 VDC,	0 to 10 VDC		
Input signal*6	Preset input	4 points (Negative common), 1	6 points (No common polarity)		
	Digital input	10 bits (Parallel)		
	Current type	250 Ω α	or less*3		
l	Voltage type	Approx. 6.5 kΩ			
Input impedance	Preset input	Power supply voltage 24 VDC type: Approx. 4.7 k Ω Power supply voltage 12 VDC type: Approx. 2.0 k Ω			
	Digital input	Approx. 4.7 kΩ			
Output signal (Monitor output)	Analog output	1 to 5 VDC (Output impedance: Approx. 1 k Ω) 4 to 20 mADC (Sink type) (Output impedance: 250 Ω or less Output accuracy $\pm 6\%$ F.S. or less			
(monitor output)	Switch output	NPN open collector output: Max. 30 V, 80 mA PNP open collector output: Max. 80 mA			
Linearity		±1% F.S. or less			
Hysteresis		0.5% F.S	S. or less		
Repeatability		±0.5% F.S. or less			
Sensitivity		0.2% F.S	S. or less		
Temperature characteristics		±0.12% F.S	./°C or less		
Output pressure	Accuracy		digit or less		
display	Unit	kPa*5 Min.	_ ' '		
Ambient and fluid	I temperatures	0 to 50°C (No condensation)			
Enclosure		IP65			
Weight*6, *7		390 g			


- *1 The min. supply vacuum pressure should be 13.3 kPa less than the max. vacuum pressure setting value.
- *2 4 to 20 mADC is not possible with the 2-wire type. Power supply voltage (24 VDC or 12 to 15 VDC) is required.
 - *3 Value for the state with no over current circuit included. If an allowance is provided for an over current circuit, the input impedance varies depending on the input power supply. This is 350 Ω or less for an input current of 20 mADC.
 - When measuring ITV analog output from 1 to 5 VDC, if the load impedance is less than 100 k Ω , the analog output monitor accuracy of within ±6% (full span) may not be available. The product with the accuracy of within ±6% is supplied upon your request. Output pressure remains unaffected.
 - *4 Either analog output or switch output must be selected. Furthermore, when switch output is selected, either NPN output or PNP output must also be selected. Use caution that the preset input type is not equipped with an output signal function.
 - *5 Please contact SMC regarding indication with other units of pressure.
 - *6 Refer to the table below for communication specifications.
 - *7 Add 50 g for digital input type, 70 g for 16 points preset input type respectively. The product characteristics are confined to the static state.
 - Pressure may fluctuate when air is consumed at the output side.

Communication Specifications (CC, DE, PR, RC, IL)

Model ITV□0□0-CC□□		ITV□0□0-DE□□	ITV□0□0-PR□□	ITV□0□0-RC□□	ITV□0□0-IL□□
Protocol CC-Link		DeviceNet®	PROFIBUS DP	RS-232C	IO-Link (Class A)
Version*1	Ver. 1.10	Volume 1 (Edition 3.8), Volume 3 (Edition 1.5)	DP-V0		Ver. 1.1
Communication speed 156 k/625 k 125 2.5 M/5 M/10 Mbps 125		125 k/250 k/500 kbps	9.6 k/19.2 k/45.45 k 93.75 k/187.5 k/500 k 1.5 M/3 M/6 M/12 Mbps	9.6 kbps	230.4 kbps (COM3)
Configuration file*2	_	EDS	GSD	_	IODD
I/O occupation area (input/output data)	4 words/4 words, 32 bits/32 bits (per station, remote device station)	16 bits/16 bits	16 bits/16 bits	_	4 bytes/2 bytes
Communication data resolution	12 bits (4096 resolution)	12 bits (4096 resolution)	12 bits (4096 resolution)	10 bits (1024 resolution)	12 bits (4096 resolution)
Fail safe	HOLD*3/CLEAR (Switch setting)	HOLD/CLEAR (Switch setting)	CLEAR	HOLD	HOLD/CLEAR
Electric insulation*4	Insulation	Insulation	Insulation	Non-insulation	Non-insulation
Terminating resistor	Built into the product (Switch setting)	Not built into the product	Built into the product (Switch setting)		_
Current consumption	0.16 A or less	0.14 A or less	0.16 A or less	0.12 A or less	0.12 A or less
Weight ITV2090 470		460	490	460	460

- Please note that versions are subject to change.
 Please note that versions are subject to change.
 Configuration flies can be downloaded from the operation manual page on the SMC website: https://www.smcworld.com.
 The output HOLD value when a CC-Link communications error occurs can be set based on the bit area data.

Working Principle

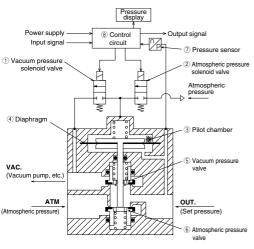


Working Principle


When the input signal increases, the vacuum pressure solenoid valve (1) turns ON, and the atmospheric pressure solenoid valve ② turns OFF. Because of this, VAC. and the pilot chamber ③ are connected, the pressure in the pilot chamber $\ 3\$ becomes negative and acts on the top of the diaphragm $\ 4\$.


As a result, the vacuum pressure valve (§) which is linked to the diaphragm (4) opens, VAC. and OUT. are connected, and the set pressure becomes negative.


This negative pressure feeds back to the control circuit ® via the pressure sensor 7. Then, a correct operation works until a vacuum pressure proportional to the input signal is reached, and a vacuum pressure is obtained which is always proportional to the input signal.

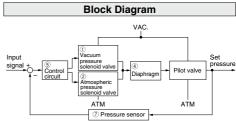



ITV209 ☐ Series

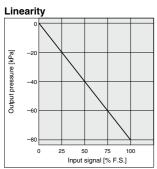

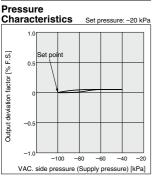

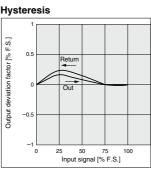

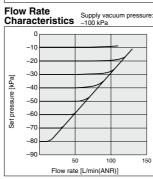

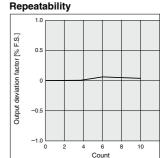

Flow rate characteristics measurement conditions

- Exhaust flow rate of the vacuum pump
- used for measurement: 500 L/min (ANR)
- Inlet vacuum pressure: -100 kPa
- (When outlet flow rate is 0 L/min (ANR))
- . Max. flow rate: 132 L/min (ANR)
- (With inlet vacuum pressure at -39 kPa)




ITV209□ Series


Dimensions

ITV209□


Flat bracket


* Do not attempt to rotate the cable connector, as it does not turn.

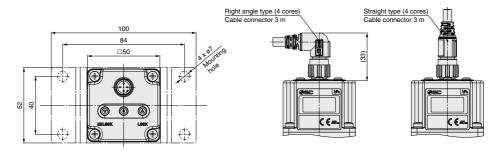

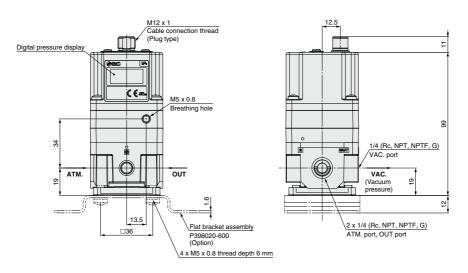

L-bracket

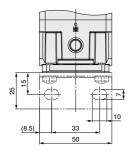


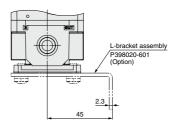

Dimensions (16 points preset input, 10-bit digital input, CC-Link, DeviceNet®)


16 points preset input M12 x 1 Signal cable connection thread (Plug type) Digital pressure display M5 x 0.8 Breathing hole Power cable connection thread (Plug type) 8.5 Breathing hole VAC.

10-bit digital input RP13A-12RB-13PA (71) made by HIROSE ELECTRIC CO., LTD. Oglial pressure display M5 x 0.8 Breathing hole VAC.

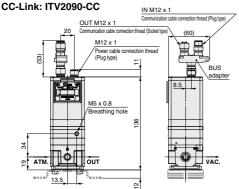

* Dimensions not shown are the same as on page 1218.



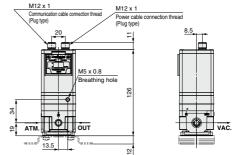


* Dimensions not shown are the same as on page 1218.

ITV209□ Series


Dimensions (PROFIBUS DP, RS-232C, IO-Link)

PROFIBUS DP: ITV2090-PR

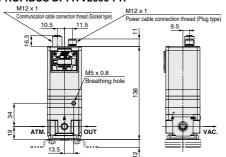


* Dimensions not shown are the same as on page 1218.

RS-232C: ITV2090-RC

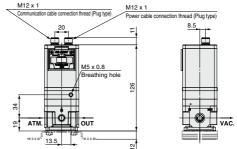

* Dimensions not shown are the same as on page 1218.


IO-Link: ITV2090-IL

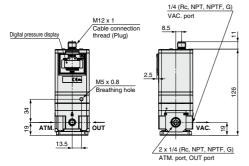

With power cable connector



 Order communication cable (other than 16 points, RS-232C) separately. (Refer to page 1215.)





 Do not attempt to rotate the cable connector, as it does not turn.

ITV1000/2000/3000/209 □ Series **Accessories (Option)**

Accessories (Option)/Part Nos.

[Bracket]

Description	Part no.	Weight
Flat bracket assembly (including mounting screws)	P398020-600	90
L-bracket assembly (including mounting screws)	P398020-601] 90

[Cable connector]

Applicable model	Description		Part no.	Weight
Current type Voltage type	0-1-1	Straight type 3 m	P398020-500-3	
4 points preset input IO-Link	Cable connector (4 cores)	Right angle type 3 m	P398020-501-3	100
	D	Straight type 3 m	P398020-500-3	180
16 mainta musast immut	Power cable (4 cores)	Right angle type 3 m	P398020-501-3	
16 points preset input	Signal cable (5 cores)	Straight type 3 m	P398020-502-3	7
		Right angle type 3 m	P398020-503-3	7
10-bit digital input	Cable connector (13 cores)	Straight type 3 m	INI-398-0-59	310
CC-Link PROFIBUS DP	Bower ashle (4 serse)	Straight type 3 m	P398020-500-3	
DeviceNet®	Power cable (4 cores)	Right angle type 3 m	P398020-501-3	1
	Dawer ashle (4 serse)	Straight type 3 m	P398020-500-3	180
DC 020C	Power cable (4 cores)	Right angle type 3 m	P398020-501-3	
RS-232C	Communication cable	Straight type 3 m	P398020-502-3	
	(5 cores)	Right angle type 3 m	P398020-503-3	7

- For the 10-bit digital type, there is no right angle type cable connector.
 Even when "with cable connector" is selected, the communication cable is not included in the communication model (CC, DE, and PR). Please order it separately.

[Cable connector specifications]

P398020-500-3, P398020-501-3

Conductor	Nominal cross section	4 x AWG21
Conductor	Outside diameter	Approx. 0.9 mm
Insulator	Outside diameter	Approx. 1.7 mm
Sheath	Material	PVC
Finished outs	ø6 mm	
Min. bending	60 mm	

P398020-502-3, P398020-503-3

Conductor	Nominal cross section	5 x AWG21
Conductor	Outside diameter	Approx. 0.9 mm
Insulator	Outside diameter	Approx. 1.7 mm
Sheath	Material	PVC
Finished outs	ø6 mm	
Min. bending	60 mm	

INI-398-0-59


Conductor	Nominal cross section	16 x AWG24		
Conductor	Outside diameter	Approx. 0.75 mm		
Insulator	Outside diameter	Approx. 1.21 mm		
Sheath	Material	PVC		
Finished outs	ø8 mm			
Min. bending	60 mm			

[Bus adapter]


Applicable model	Description	Part no.	Weight
CC-Link	Bus adapter (Included with the product)	EX9-ACY00-MJ	35

Dimensions

Flat bracket

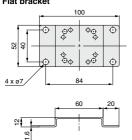

L-bracket

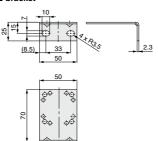

SMC

Model	Bracket tightening torque
ITV1000	0.76 ±0.05 N·m
ITV2000/3000	1.5 ±0.05 N·m



Be sure to read this before handling the products.

Refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

ITV0000/009 ☐ Series Precautions

Air Supply

⚠ Warning

- Please consult with SMC when using the product in applications other than compressed air.
- Do not use compressed air that contains chemicals, synthetic oils that include organic solvents, salt, corrosive gases, etc., as doing so may result in a malfunction.

- Compressed air that contains a large amount of drainage can result in the malfunction of this product and other pneumatic equipment. Therefore, take appropriate measures to ensure air quality, such as by providing an aftercooler, air dryer, or water separator.
- If excessive carbon dust is generated by the compressor, it may adhere to the inside of this product and cause it to malfunction.

Refer to the "SMC Air Preparation System" for further details on compressed air quality.

Wiring

⚠ Caution

Connect the cable to the connector on the body with the wiring arranged as shown below. Proceed carefully, as incorrect wiring can result in damage.


Further, use DC power with sufficient capacity and a low ripple.







1: (Brown) 3: (Blue)




Wiring diagrams



Vs: Power supply 24 VDC ±10% 12 to 15 VDC A: Input signals 4 to 20 mADC 0 to 20 mADC

Monitor output wiring diagram



Voltage signal type



Vs : Power supply 24 VDC ±10% 12 to 15 VDC Vin: Input signals 0 to 5 VDC 0 to 10 VDC

Monitor output (analog output) characteristics diagram



Handling

∧ Caution

- Do not use a lubricator on the supply side of this product, as doing so may result in a malfunction. When lubrication of terminal equipment is necessary, connect a lubricator on the output side of this equipment.
- If electric power is shut off while pressure is being applied, pressure will be retained on the output side.
 - However, this output pressure is held only temporarily and is not guaranteed. If exhausting of this pressure is desired, shut off the power after reducing the set pressure, and discharge the air using a residual pressure exhaust valve, etc.
- If supply pressure to this product is interrupted while the power is still on, the internal solenoid valve will continue to operate and a humming noise may be generated.
 - Since the life of the product may be shortened, shut off the power supply also when supply pressure is shut off.
- This product is adjusted for each specification at the time of shipment from the factory. Avoid careless disassembly or removal of parts, as failure to do so may result in a malfunction.
- 5. The optional cable connector is a 4-wire type. When the monitor output (analog output) is not being used, keep it from touching the other wires as doing so may result in a malfunction.
- Please note that the right angle cable does not rotate and is limited to only one entry direction.
- 7. Take the following steps to avoid malfunction due to noise.
 - Remove power supply noise during operation by installing a line filter, etc., in the AC power line.
 - 2) For avoiding the influence of noise or static electricity, install this product and its wiring as far as possible from strong electric fields such as those of motors, power lines, etc.
 - 3) Be sure to implement protective measures against load surge for induction loads (solenoid valves, relays, etc.).
- 8. The product characteristics are confined to the static state. When air is consumed on the output side, and especially used in the system with large leakage, pressure cannot approach the set pressure and the service life is drastically shortened with a humming noise of the solenoid valve.
- For details on the handling of this product, refer to the operation manual which is included with the product.
- 10. In locations where the body is exposed to water, dust, etc., there is a possibility that moisture or dust could enter the body through the breathing hole.

 Mount a fitting and tube (M-3AU-3 fitting and TIU01□-□ tube recommended) onto the breathing hole and run the tube to a lo-

cation not exposed to moisture, dust, etc.

0



Be sure to read this before handling the products.

Refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

ITV0000/009 ☐ Series Precautions

Handling

⚠ Caution

12. If this product will be used in a sealed environment, such as inside an inspection box, a ventilation fan should be installed to ensure adequate ventilation as this product can generate heat in some operating conditions.

When the power is turned on, a noise may be generated as a means of checking the operating condition of the solenoid valve. This noise is normal and does not indicate a fault.

 Each product needs to be powered by one power supply unit.

The wiring of this product has the same common between the GND for power and the signals; there is a possibility that a wrong current occurs and prevents a proper operation if one power supply unit controls multiple electro-pneumatic regulators.

- 14. This product does not have a shut-off valve function. If air pressure is supplied without electric power being applied, output pressure may increase to the pressure equivalent of the supply pressure. Operate the system to shut off the supply pressure when not operating the product.
- 15. For this product, by conducting the procedure described below (steps A to D), the parameters compatible with the power supply voltage and supply pressure in use can be obtained.

If the desired output pressure values cannot be reached due to fluctuations in the operating conditions, etc., perform this operation.

- A) Change the power supply voltage in use by ± 0.4 VDC or more.
- B) After inputting the supply pressure used on the inlet side of the ITV, adjust the input signal as described below.
 - (0% \to 100% \to 0%) (Change it gradually, waiting 10 s or more between each adjustment.)
 - * Please contact SMC if difficulty inputting signals occurs.
- C) Change the power supply voltage according to the operating conditions/requirements, and repeat step B.
- D) Input the power supply voltage and a 0% signal, and retain for 6 minutes or more. (Supply pressure is not required.)

While conducting the procedure stated above, noise may be generated by the solenoid valve. However, this does not affect the obtainment of the parameters. In addition, be sure to conduct the procedure with the air sealed in the piping.

Return of Product

⚠ Warning

If the product to be returned is contaminated or is possibly contaminated with substances that are harmful to humans, for safety reasons, please contact SMC beforehand and then employ a specialist cleaning company to decontaminate the product. After the decontamination prescribed above has been carried out, submit a Product Return Request Sheet or the Detoxification/Decontamination Certificate to SMC and await SMC's approval and further instructions before attempting to return the item.

Please refer to the International Chemical Safety Cards (ICSC) for a list of harmful substances.

If you have any further questions, please don't hesitate to contact your SMC sales representative.





Be sure to read this before handling the products.

Refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

ITV1000/2000/3000/209 Series Precautions


Piping

⚠ Warning


1. When screwing piping into a component, tighten within the recommended tightening torque range while holding the female thread side.

If the tightening torque is insufficient, looseness or sealing failure may occur. On the other hand, excess tightening torque can result in damage to the threads. Furthermore, tightening without holding the female thread side can result in damage due to the excess force that is applied directly to the piping bracket.

	Recommended tightening torque range: N·m			
Connection thread	1/8	1/4	3/8	1/2
Torque	3 to 5	8 to 12	15 to 20	20 to 25



2. Avoid excessive torsional moment and bending moment other than those caused by the equipment's own weight, as failure to do so may result in damage.



3. Piping materials which lack flexibility, such as steel tube piping, are prone to being affected by excess moment loads and vibrations from the piping side. Use flexible tubing in between to avoid such effects.

separately.

1. Preparation before piping

Before piping is connected, it should be thoroughly blown out with air (flushing) or washed to remove chips, cutting oil, and other debris from inside the pipe.

If chips, sealing material, or other debris enter into this product, the solenoid valve may buzz or the outlet pressure may not be output properly.

2. Winding of sealant tape

When screwing piping or fittings into ports, ensure that chips from the pipe threads or sealing material do not enter the piping. Also, if sealant tape is used, leave 1.5 to 2 thread ridges exposed at the end of the threads.



Operating Environment

⚠ Warning

- 1. Do not use in atmospheres containing corrosive gases, chemicals, sea water, or where there is direct contact with any of these.
- 2. Please contact SMC regarding use at power stations or in instrumentation applications.

∕**.**∖ Caution

- 1. When used in locations where the body of the product is exposed to water, water vapor, dust, etc., there is a possibility that moisture or dust could enter the body through the EXH (solenoid) ports, thereby causing problems.
- 2. To prevent this, simply install tubing to each port, using the fittings, and extend the tubing so that the other end is in a location where no water splash, etc., occurs. Make sure not to bend or block the I.D. of the tubing as this will have a detrimental effect on the pressure control.
- 3. Do not use in places subject to heavy vibration and/ or impact.
- 4. The product should not be exposed to prolonged sunlight. Use a protective cover if this is unavoidable.
- 5. Remove any sources of excessive heat.
- 6. In locations where there is contact with water, oil, weld spatter, etc., take suitable protective measures.

Air Supply

∕∿ Warning

- 1. Please contact SMC when using the product in an application using a fluid other than compressed air.
- 2. Do not use compressed air that contains chemicals, synthetic oils that include organic solvents, salt, corrosive gases, etc., as doing so may result in a malfunction.

∖ Caution

- 1. Install an air filter near this product on the supply side. Select an air filter with a filtration size of 5 µm or smaller.
- 2. Compressed air that contains a large amount of drainage can cause the malfunction of this product and other pneumatic equipment. Therefore, take appropriate measures to ensure air quality, such as providing an aftercooler, air dryer, or water separator.
- 3. If excessive carbon dust is generated by the compressor, it may adhere to the inside of this product and cause it to malfunction.

Refer to the "SMC Air Preparation System" for further details on compressed air quality.



Be sure to read this before handling the products.

Refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

ITV1000/2000/3000/209 ☐ Series Precautions

Handling

- Do not use a lubricator on the supply side of this product, as doing so may result in a malfunction. When lubrication of terminal equipment is necessary, connect a lubricator on the output side of this equipment.
- 2. If electric power is shut off while pressure is being applied, pressure will be retained on the output side. However, this output pressure is held only temporarily and is not guaranteed. If exhausting of this pressure is desired, shut off the power after reducing the set pressure, and discharge the air using a residual pressure exhaust valve, etc.
- 3. If the power to this product is cut off due to a power failure, etc., when it is in a controlled state, output pressure will be retained temporarily. Handle carefully when operating with output pressure released to the atmosphere, as air will continue to flow out.
- 4. If supply pressure to this product is interrupted while the power is still on, the internal solenoid valve will continue to operate and a humming noise may be generated. Since the life of the product may be shortened, shut off the power supply also when supply pressure is shut off.
- 5. The setting side pressure cannot be completely released from this product in the range below 0.005 MPa (or -1.3 kPa for vacuum models). In cases where the pressure needs to be reduced completely to 0 MPa, install a 3-port valve, etc., on the setting side to discharge the residual pressure.
- This product is adjusted for each specification at the time of shipment from the factory. Avoid careless disassembly or removal of parts, as failure to do so may result in a malfunction.
- 7. The optional cable connector is a 4-wire type. When the monitor output (analog output or switch output) is not being used, keep it from touching the other wires as doing so may result in a malfunction.
- When connecting the cable to this product, turn the lock ring of the cable. If a portion other than the lock ring of the cable is turned, it may damage the connector on the body. Turn the lock ring by hand without using a tool.
- The right angle cable does not rotate and is limited to only one entry direction. If the right angle cable is rotated forcibly, the cable may be broken or damaged, or may damage the connector on the body.
- 10. Take the following steps to avoid malfunction due to noise.
 - 1) Remove power supply noise during operation by installing a line filter, etc., in the AC power line.
 - For avoiding the influence of noise or static electricity, install this product and its wiring as far as possible from strong electric fields such as those of motors, power lines, etc.
 - Be sure to implement protective measures against load surge for induction loads (solenoid valves, relays, etc.).
- 11. Due to the large volume of the output side, a loud exhaust noise will be produced when being used for the purpose of a relief function. Therefore, install a silencer (SMC AN20 or AN40 series) on the exhaust port (EXH port). The port sizes are Rc1/8, Rc1/4, and Rc1/2.
- Specifications on pages 1183 and 1216 are in case of static environment. Pressure may fluctuate when air is consumed at the output side.

Handling

- For details on the handling of this product, refer to the operation manual which is included with the product.
- 14. This product does not have a shut-off valve function. If air pressure is supplied without electric power being applied, output pressure may increase to the pressure equivalent of the supply pressure. Operate the system to shut off the supply pressure when not operating the product.
- 15. The solenoid valves built into this product are consumables. Perform periodic maintenance in environments where the solenoid valves are operated at a high frequency. The parts can be replaced with a solenoid valve assembly. Please contact SMC for the part number.
- 16. In locations where the body is exposed to water, dust, etc., there is a possibility that moisture or dust could enter the body through the solenoid valve EXH port. Mount a fitting and tube onto the solenoid valve EXH port and run the tube to a location not exposed to moisture, dust, etc.


Design and Selection

- 1. Use the following UL approved products for DC power supply combinations.
 - (1) Limited voltage current circuit in accordance with UL 508
 A circuit in which power is supplied by the secondary coil of a
 transformer that meets the following conditions
 - Max. voltage (with no load): 30 Vrms (42.4 V peak) or less
 - Max. current:
 - (1) 8 A or less (including when short circuited)
 - (2) limited by circuit protector (such as fuse) with the follow-

ing ratings

No load voltage (V peak)	Max. current rating [A]
0 to 20 [V]	5.0
Over 20 and 30 or less [V]	100
Over 20 and 30 or less [v]	Peak voltage

- (2) A circuit (class 2 circuit) with max. 30 Vrms (42.4 V peak) or less, and a power supply consisting of a class 2 power supply unit confirming to UL1310, or a class 2 transformer confirming to UL1585
- Operate these products only within the specified voltage.
 Using voltages beyond the specified levels could result in faults or malfunctions.
- Use 0 V as the baseline for the power supplied to the unit for output, control, and input.



4. Each product needs to be powered by one power supply unit.

The wiring of this product has the same common between the GND for power and the signals; there is a possibility that a wrong current occurs and prevents a proper operation if one power supply unit controls multiple electro-pneumatic regulators.

Please contact SMC for the usage when the downstream side is released to atmosphere.

This product is a pressure controller. The downstream side being released to atmosphere makes the inlet valve full open, allowing a large amount of atmosphere flow into the body. Please contact SMC for the appropriate usage when you use the product under such condition since the product may not meet the specification or the life of the product may be shortened.



Be sure to read this before handling the products.

Refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

ITV1000/2000/3000/209 Series Precautions

Wiring

Connect the cable to the connector on the body with the wiring arranged as shown below. Proceed carefully, as incorrect wiring can result in damage. Further, use DC power with sufficient capacity and a low ripple.





Current Signal Type Voltage Signal Type


1	Brown	Power supply
2	White	Input signal
3	Blue	GND (COMMON)
4	Black	Monitor output

Preset Input Type

1	Brown	Power supply
2	White	Input signal 1
3	Blue	GND (COMMON)
4	Black	Input signal 2
_		

IO-Link

ı	1	Brown	Power supply
ı	2	White	No connection
ı	3	Blue	GND
ı	4	Black	IO-Link communication data

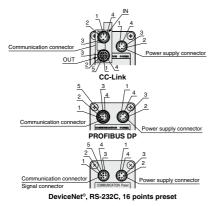

IN/OUT communication connector Signal connector Pin no. CC-Link | DeviceNet® | PROFIBUS DP | RS-232C | 16 points preset SLD [-] DRAIN [-] No connection No connection Input signal 1 [Brown] 2 DB [White] V+ [Red] RxD/TxD-N [Green] TxD [White] Input signal 2 [White] V- [Black] No connection RxD [Blue] Input signal 3 [Blue] DG [Yellow] 3 DA [Blue] CAN_H [White] RxD/TxD-P [Red] GND [Black] Input signal 4 [Black] 4 5 No connection CAN_L [Blue] No connection No connection Common [Gray]

	Power supply connector									
Pin no.	CC-Link	DeviceNet®	PROFIBUS DP	RS-232C	16 points preset					
1 [Brown]	Vcc	Vcc Vcc		Vcc	Vcc					
2 [White]	FG	Cannot connect	FG	No connection	No connection					
3 [Blue]	GND	GND	GND	GND	GND					
4 [Black]	No connection	Cannot connect	No connection	FG	Monitor output					

- *1 The cable is also available in a right angle type. (Communication cable: straight type only) A right angle type connector is attached facing left (toward the SUP port). On communication models, the connector faces backward (toward the EXH port). Do not attempt to rotate, as the connector does not turn.
- * The indicated wire colors are when a cable connector made by SMC is used.
- * Perform the wiring so that no electric potential difference occurs between GND of the power supply and GND of the communication section. If any electric potential difference occurs, this may cause the internal parts to burn out.

Knock-down connectors * Order separately.

	Application	CC- compa	Link atibility		DeviceNet ompatibili		PROFIBUS DP compatibility		
	art no.	Plug PCA-	Socket PCA-	Plug PCA-	Socket PCA-	Terminal plug PCA-	Plug PCA-	Socket PCA-	Terminal plug PCA-
Į	۵	1075526	1075527	1075528	1075529	1557675	1075530	1075531	1557727

Wiring diagrams

Current signal type





0 to 20 mADC

Voltage signal type



Vs : Power supply 24 VDC 12 to 15 VDC Vin: Input signal 0 to 5 VDC 0 to 10 VDC

4 points preset input type



ver supply 24 VDC 12 to 15 VDC (Negative common)

16 points preset input type



Vs : Power supply 24 VDC (No polarity)

One of the preset pressures P1 through P4 is selected by the ON/OFF combination of S1 and S2

					,				
S1	OFF	ON	OFF	ON	OFF]	ON	OFF	ON
S2			ON				OFF	ON	ON
S3	OFF	OFF	OFF	OFF	ON		ON	ON	ON
S4	OFF	OFF	OFF	OFF	OFF		ON	ON	ON
Preset pressure	P01	P02	P03	P04	P05]	P14	P15	P16

For safety reasons, it is recommended that one of the preset pressures be set to 0 MPa.
 Preset pressures are set based on the min, unit for output display.

 MPa
 kgf/cm²
 bar
 psi
 kPa

 0.001
 0.01
 0.01
 0.1
 1

Note that this is 1 psi for 130 psi types.

[■] Trademark

DeviceNet® is a registered trademark of ODVA Inc.



Be sure to read this before handling the products.

Refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

ITV1000/2000/3000/209 ☐ Series Precautions

Wiring


10-bit digital input type

Wire color	Signal name				
Pink-Black 2	Power supply (24 VDC)				
Green-Black 2	Power supply (GND)				
Blue	Signal common (No polarity)				
Blue-Black 2	MSB 10 bit				
Gray-Black 1	9 bit				
Orange-Black 1	8 bit				
Green-Black 1	7 bit				
Pink-Black 1	6 bit				
Blue-Black 1	5 bit				
Gray	4 bit				
Orange	3 bit				
Green	2 bit				
Pink	LSB 1 bit				

^{*} The wire color is shown for when an option cable is used

Monitor output wiring diagrams

Analog output: Voltage type



Analog output: Current type (Sink type) Brow Monitor output current Whit


Switch output: NPN type Switch output: PNP type





*1 When 80 mADC or more is applied, detecting device for overcurrent starts activating and then emits an error signal. (Error number "5")

Monitor output (analog output) characteristics diagram



Set Pressure Range

The set pressure range, by unit of standard measured pressure, is shown in the table below.

Set pressure range, by unit of standard measured pressure

Unit		Set pressure range									
Offit	IT۷	′_0	1 🗆	IΤV	' _c)3□	ITV		05□	ITV209□	
MPa	0.005	to	0.1	0.005	to	0.5	0.005	to	0.9	_	
kgf/cm ²	0.05	to	1	0.05	to	5	0.05	to	9	_	
bar	0.05	to	1	0.05	to	5	0.05	to	9	_	
psi	0.7	to	15	0.7	to	70	0.7	to	130	_	
kPa	5	to	100	5	to	500	5	to	900	-1.3 to -80	

CE/UKCA Marking

• ITV0000 Series

Model	Ferrite core necessity	Recommended power supply cable				
ITV0000-□□		P398000-500-3 (Straight type) P398000-501-2 (Right angle type)				

* Recommended power supply cable length is 3 m. (P398000-501-2 is 2 m.) If any other length is desired, please contact SMC.

• ITV1000/2000/3000 Series

Model	Ferrite core necessity		Recommended power supply cable	
ITV==-==		_	P398020-500-3 (Straight type) P398020-501-3 (Right angle type)	
ITV□□-52□		Power	P398020-500-3 (Straight type) P398020-501-3 (Right angle type)	
ITV□□-53□		Signal	P398020-502-3 (Straight type) P398020-503-3 (Right angle type)	
ITV□□-60□		_	INI-398-0-59 (Straight type)	
*1, *2	Unnecessary	Power	P398020-500-3 (Straight type) P398020-501-3 (Right angle type)	
		Communication	PCA-1567720 (Socket type) PCA-1567717 (Plug type)	
*1, *3		Power	P398020-500-3 (Straight type) P398020-501-3 (Right angle type)	
ITV□□-DE□		Communication	PCA-1557633 (Socket type) PCA-1557646 (Plug type)	
*1, *3		Power	P398020-500-3 (Straight type) P398020-501-3 (Right angle type)	
II V -PK		Communication	PCA-1557688 (Socket type) PCA-1557691 (Plug type)	
ITV 🗆 - RC		Power	P398020-500-3 (Straight type) P398020-501-3 (Right angle type)	
III VUU-RCU		Communication P398020-502-3 (Straight P398020-503-3 (Right ar		
ITV□□-IL□		_	P398020-500-3 (Straight type) P398020-501-3 (Right angle type)	

- *1 Even when the "with cable connector" type is selected, the communication connector is not included. Refer to the Web Catalog [M8/M12 Connector] for the details of the communication cable.
- *2 For CC-Link compatible products, a dedicated Bus adapter is included with the product.
- *3 SMC does not provide T-branch connectors.

 If required, purchase a commercially available T-branch connector.
- Recommended power supply cable length is 3 m. If any other length is desired, please contact SMC.

Return of Product

⚠ Warning

If the product to be returned is contaminated or is possibly contaminated with substances that are harmful to humans, for safety reasons, please contact SMC beforehand and then employ a specialist cleaning company to decontaminate the product. After the decontamination prescribed above has been carried out, submit a Product Return Request Sheet or the Detoxification/Decontamination Certificate to SMC and await SMC's approval and further instructions before attempting to return the item.

Please refer to the International Chemical Safety Cards (ICSC) for a list of harmful substances.

If you have any further questions, please don't hesitate to contact your SMC sales representative.





Be sure to read this before handling the products.

Refer to the "Handling Precautions for SMC Products" and the "Operation Manual" on the SMC website: https://www.smcworld.com

ITV009□/209□ Series Precautions

Handling

⚠ Caution

- 1. Connect the vacuum pump to the port, which is labeled "VAC."
- Pressure adjustment changes from "atmospheric pressure to vacuum pressure" when the input signal is increased, and from "vacuum pressure to atmospheric pressure" when the input signal is decreased.
- 3. When adjusting the vacuum pressure, be careful not to block the atmospheric pressure inlet port labeled "ATM."
- Since this product is designed exclusively for use with negative pressure, be careful not to apply positive pressure in error.
- 5. In cases where the vacuum pump being used has a relatively small capacity, or the piping has a small inside diameter, etc., large variations in the set pressure (the range of pressure variation when changing from no flow to flow state) may appear. In this situation, the vacuum pump or the piping should be changed. In cases where it is not practical to change the vacuum pump, install a capacity tank (volume depending on the operating conditions) on the VAC side.
- 6. The vacuum pressure response time after a change in the input signal is influenced by the internal volume on the setting side (including piping). Since the capacity of the vacuum pump also influences the response time, give careful consideration to these points before operation.
- 7. If the electric power is shut off when in a control state, the pressure on the setting side will go into a holding condition. However, this setting side pressure will be held only temporarily and is not guaranteed. In addition, when atmospheric pressure is desired, shut off the power after reducing the set pressure, and then introduce atmospheric pressure by using a vacuum release valve, etc.
- 8. If the power for this product is cut off by a power failure, etc., when it is in a controlled state, the setting side pressure will be held temporarily. Further, if operated without sealing the setting side so that atmospheric air is sucked in, handle with care as air will continue to be sucked in.
- 9. If the VAC side pressure to this product is interrupted while the power is still on, the internal solenoid valve will continue to operate and may cause a humming noise. Since this may shorten the life of the product, be sure to shut off the power when the VAC side pressure is shut off.
- 10. The setting side pressure cannot be completely released from this product in the range below -1.3 kPa. In cases where the pressure needs to be reduced completely to 0 kPa, install a 3-port valve, etc., on the setting side to discharge the residual pressure.
- 11. This product is adjusted for each specification at the factory before shipment. Avoid careless disassembly or removal of parts, as this can result in failure.

Handling

- 12. The optional cable connector is a 4-wire type. When the monitor output (analog output, switch output) is not being used, keep it from touching the other wires, as doing so may result in a malfunction.
- Use caution that the right angle cable does not rotate and is limited to only one entry direction.
- Take the following steps to avoid malfunction due to noise.
 - 1) Remove power supply noise during operation by installing a line filter, etc., in the AC power line.
 - For avoiding the influence of noise or static electricity, install this product and its wiring as far as possible from strong electric fields such as those of motors, power lines, etc.
 - 3) Be sure to implement protective measures against load surge for induction loads (solenoid valves, relays, etc.).
- Refer to the operation manual included with the product for details on its handling.

Return of Product

If the product to be returned is contaminated or is possibly contaminated with substances that are harmful to humans, for safety reasons, please contact SMC beforehand and then employ a specialist cleaning company to decontaminate the product. After the decontamination prescribed above has been carried out, submit a Product Return Request Sheet or the Detoxification/Decontamination Certificate to SMC and await SMC's approval and further instructions before attempting to return the item.

Please refer to the International Chemical Safety Cards (ICSC) for a list of harmful substances.

If you have any further questions, please don't hesitate to contact your SMC sales representative.

■Trademark